



# Standard Test Method for Measuring Sleeping Bag Packing Volume<sup>1</sup>

This standard is issued under the fixed designation F1853; the number immediately following the designation indicates the year of original adoption or, in the case of revision, the year of last revision. A number in parentheses indicates the year of last reapproval. A superscript epsilon ( $\epsilon$ ) indicates an editorial change since the last revision or reapproval.

## 1. Scope

1.1 This test method covers the quantitative volume of a sleeping bag in a cylinder under a standardized load.

1.2 This test method uses a physical volumetric measurement applicable in the laboratory or in the field.

1.3 The values stated in SI units are to be regarded as standard. The inch-pound units given in parentheses are provided for information only.

1.4 *This standard does not purport to address all of the safety concerns, if any, associated with its use. It is the responsibility of the user of this standard to establish appropriate safety and health practices and determine the applicability of regulatory limitations prior to use.*

## 2. Terminology

### 2.1 Definitions:

2.1.1 *sleeping bag, n*—a structure made of down, synthetic fiberfill, shell fabrics, or other materials, or both, that is designed for people to use for thermal protection when sleeping (for example, outdoors, tent, cabin).

## 3. Significance and Use

3.1 This test method can be used to quantify and compare packing volumes of sleeping bags. It defines the volume occupied by a sleeping bag under a standardized load (see 4.2).

## 4. Apparatus

4.1 *Measuring Cylinder*—A circularly round container, measuring in diameter  $45 \pm 3$  cm ( $18 \pm 1$  in.), suitable to contain the sleeping bag being measured, and capable of not deforming when the loading system is applied. See Annex A1 for specifications on a typical design.

4.2 *Loading System*—A circular plate or piston structure that closely matches the diameter of the measuring cylinder, with weights, that provides a  $6.90 \pm 0.07$  kPa ( $1.00 \pm 0.01$  psi) load. The diameter of the plate or piston structure should be

slightly undersized, compared to the measuring cylinder, to allow air to escape as the bag under test is subject to the loading force. Small ventilation holes are also acceptable to allow air to escape. See Annex A1 for specifications on a typical design.

4.3 *Measuring Scale*—A scale accurate to 1 mm (1/16 in.) and having a capacity to measure the height of the loading system in the measuring cylinder. For convenience, multiple scales can be placed around (and can be affixed to) the measuring cylinder so opposing height readings can be taken directly. Additionally, scale markings can be customized to read packing volume directly since the cross-sectional area of the cylinder is constant.

## 5. Procedure

5.1 Perform tests at ambient temperatures between 10 and 25°C (55 and 80°F).

5.2 Zip up the sleeping bag and place feet end first into the measuring cylinder. The bag should be packed down slightly to make its distribution in the measuring cylinder as uniform as possible. Sleeping bags with low air permeability outer shells may be turned inside out to minimize the settling time (entrained air release) when the load is applied.

5.3 Apply the loading system to the sleeping bag in the measuring cylinder and allow to settle. The system is deemed settled when the change in measured height is less than 1 mm in a 1 min interval.

5.3.1 Using the typical design shown in Annex A1, place the piston assembly into the measuring cylinder with the first round disk contacting the surface of the bag. Stack weights on top of the second disk of the piston assembly for a total (piston and weights) of 114.1 kg (250.0 lb).

5.4 Take two height readings to the nearest 1 mm (1/16 in.), one opposite the other, of the height of the compressed bag in the measuring cylinder.

5.4.1 Using the typical design shown in the annex, take two height readings, one opposite the other, at the top of the second disk of the piston assembly. Areas where the bag material creeps up past the loading system or where an air pocket forms should not be used for the measurement. A flashlight can be held inside the semi-transparent measuring cylinder so that the location of the top disk can be accurately determined. Subtract the distance between the top disk and bottom disk (in contact

<sup>1</sup> This test method is under the jurisdiction of ASTM Committee F08 on Sports Equipment, Playing Surfaces, and Facilities and is the direct responsibility of Subcommittee F08.22 on Camping Softgoods.

Current edition approved April 1, 2011. Published May 2011. Originally approved in 1998. Last previous edition approved in 2003 as F1853 – 03. DOI: 10.1520/F1853-11.

with the bag) from the measurement and use as the bag height reading. In accordance with the piston assembly shown in [Annex A1](#), this dimension is 10.2 cm (4 in.).

**5.5 Replication of Tests**—Repeat the procedure above on each bag, where the subject bag is completely removed and shaken for ~1 min and then repacked in the measuring cylinder for each repetition. Average the four resulting height values to yield the sleeping bag height measurement under load.

**5.6 Method for Low Volume Bags**—If the test bag measures less than 7.5 L repeat the test as follows:

**5.6.1** Perform the test ([5.1 – 5.5](#)) using a second sleeping bag (called the basis bag) that is greater than 10 L.

**5.6.2** After testing the basis bag, remove the load and the plywood disc. Place the test bag on top of the basis bag. Repeat the procedure steps in [5.1 – 5.5](#).

**5.6.3** After calculating the volume use the calculation in [7.4](#) to arrive at the final volume.

## 6. Calculation

**6.1** Calculate the packing volume of the sleeping bag under test using the following formula:

$$V = h (\pi r^2) \quad (1)$$

where:

$V$  = packing volume, m<sup>3</sup> or L, where 1000 L = 1 m<sup>3</sup>,

$h$  = height of the sleeping bag under load in the measuring cylinder, m, and

$r$  = radius of the measuring cylinder, m.

## 7. Report

**7.1** State that the sleeping bag was tested as directed in this test method (ASTM F1853). Explain any departures from the specified apparatus or procedure.

**7.2** Describe the sleeping bag that was tested and its orientation as tested (normal or turned inside out, see [5.2](#)).

**7.3** Report the packing volume ( $V$ ) in m<sup>3</sup> or L, where 1000 L = 1 m<sup>3</sup> units. Report packing volume values to three significant figures.

**7.4 Calculation for Low Volume Bags**—Calculate the test bag compressed volume by subtracting the volume of the basis bag from the volume of the basis bag + the test bag as follows:

Volume calculation for low volume (LV) bags:

(Basis bag volume + LV bag volume) – (basis bag volume) = LV bag volume

## 8. Precision and Bias

**8.1 Precision**—The repeatability standard deviation has been determined to be ±6 % in one laboratory. The reproducibility of this test method is being determined.

**8.2 Bias**—No information can be presented on the bias of the procedure for determining the packing volume because no sleeping bag having an accepted reference value is available.

## 9. Keywords

9.1 packing volume; sleeping bag

# ANNEX


## (Mandatory Information)

### A1. DETAILED DESCRIPTION OF APPARATUS

**A1.1** A typical packing volume measuring cylinder can be a high density polyethylene (HDPE) seamless, rotation-molded tank with rigid walls, ~46 cm (18 in.) diameter, ~76 cm (30 in.) height, and ~0.5 cm (3/16 in.) wall thickness.


**A1.2** A typical loading system in inch-pound units is shown for illustration purposes in [Fig. A1.1](#). The component parts

(also in inch-pound units) are illustrated in [Figs. A1.1-A1.5](#). These are typical examples for construction consideration that meet the dimensional criteria described in [Section 4](#). Weights with a slot width of ~2 cm (3/4 in.) and meeting the National Institute of Standards and Technology Class F tolerances and NIST traceability are preferred.

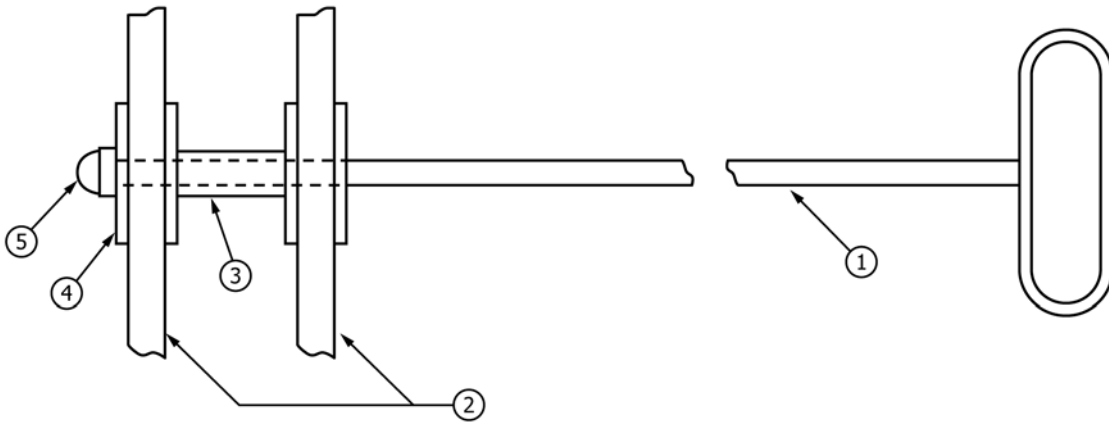

- ① Handle, Part T-4
- ② Plexiglas Discs, Part T-3
- ③ Spacer, Part T-1
- ④ Washer, Part T-2
- ⑤ Acorn Nut, 1/2-13, Commercial


FIG. A1.1 Typical Sleeping Bag Packing Volume Loading System, Piston Structure

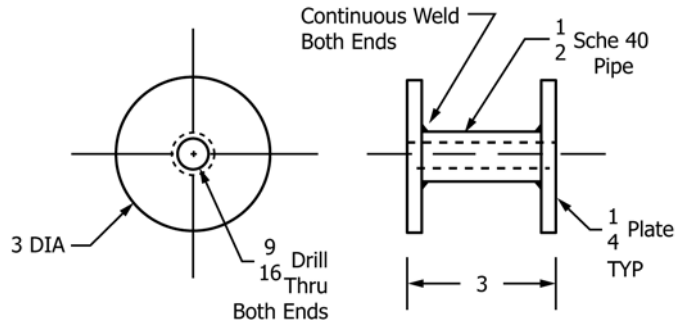

**Mat'l - 300 SS**  
**One Req'd per Ass'y**

NOTE 1—Dimensions in inches.


FIG. A1.2 Loading System, Part T-1, Spacer

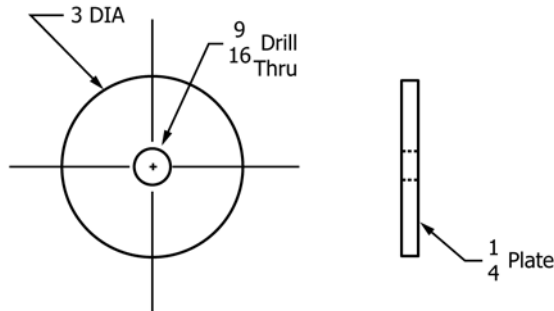

**Mat'l - 300 SS**  
**Two Req'd per Ass'y**


NOTE 1—Dimensions in inches.

FIG. A1.3 Loading System, Part T-2, Washer

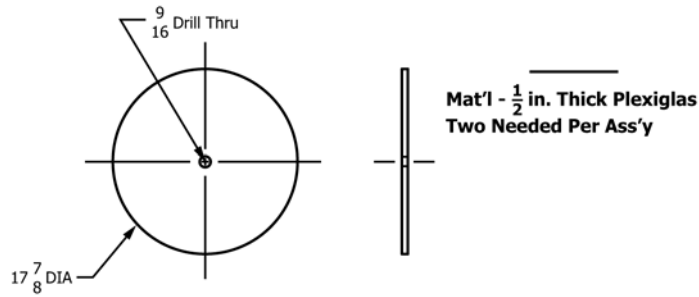

NOTE 1—Dimensions in inches.

FIG. A1.4 Loading System, Part T-3, Piston

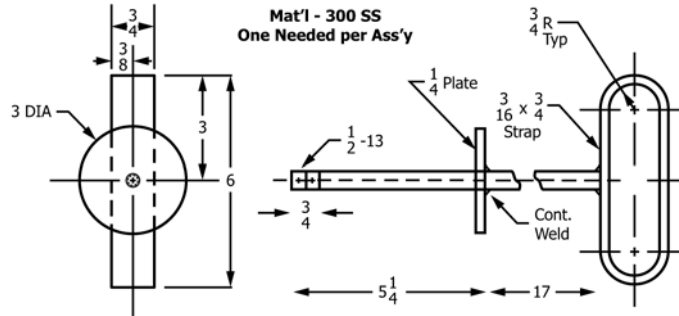

NOTE 1—Dimensions in inches.

FIG. A1.5 Loading System, Part T-4, Handle

ASTM International takes no position respecting the validity of any patent rights asserted in connection with any item mentioned in this standard. Users of this standard are expressly advised that determination of the validity of any such patent rights, and the risk of infringement of such rights, are entirely their own responsibility.

This standard is subject to revision at any time by the responsible technical committee and must be reviewed every five years and if not revised, either reapproved or withdrawn. Your comments are invited either for revision of this standard or for additional standards and should be addressed to ASTM International Headquarters. Your comments will receive careful consideration at a meeting of the responsible technical committee, which you may attend. If you feel that your comments have not received a fair hearing you should make your views known to the ASTM Committee on Standards, at the address shown below.

This standard is copyrighted by ASTM International, 100 Barr Harbor Drive, PO Box C700, West Conshohocken, PA 19428-2959, United States. Individual reprints (single or multiple copies) of this standard may be obtained by contacting ASTM at the above address or at 610-832-9585 (phone), 610-832-9555 (fax), or service@astm.org (e-mail); or through the ASTM website (www.astm.org). Permission rights to photocopy the standard may also be secured from the Copyright Clearance Center, 222 Rosewood Drive, Danvers, MA 01923, Tel: (978) 646-2600; http://www.copyright.com/