

BS ISO 17905:2015



BSI Standards Publication

Ships and marine technology — Installation, inspection and maintenance of container securing devices for ships

bsi.

...making excellence a habit.™

National foreword

This British Standard is the UK implementation of ISO 17905:2015.

The UK participation in its preparation was entrusted to Technical Committee SME/32, Ships and marine technology - Steering committee.

A list of organizations represented on this committee can be obtained on request to its secretary.

This publication does not purport to include all the necessary provisions of a contract. Users are responsible for its correct application.

© The British Standards Institution 2015.

Published by BSI Standards Limited 2015

ISBN 978 0 580 87386 7

ICS 47.020.50

Compliance with a British Standard cannot confer immunity from legal obligations.

This British Standard was published under the authority of the Standards Policy and Strategy Committee on 31 December 2015.

Amendments/corrigenda issued since publication

Date	Text affected
------	---------------

INTERNATIONAL
STANDARD

BS ISO 17905:2015

ISO
17905

First edition
2015-12-15

**Ships and marine technology —
Installation, inspection and
maintenance of container securing
devices for ships**

*Navires et technologie maritime — Installation, contrôle et
maintenance des dispositifs de fixation des containers pour navires*



Reference number
ISO 17905:2015(E)

© ISO 2015



COPYRIGHT PROTECTED DOCUMENT

© ISO 2015, Published in Switzerland

All rights reserved. Unless otherwise specified, no part of this publication may be reproduced or utilized otherwise in any form or by any means, electronic or mechanical, including photocopying, or posting on the internet or an intranet, without prior written permission. Permission can be requested from either ISO at the address below or ISO's member body in the country of the requester.

ISO copyright office
Ch. de Blandonnet 8 • CP 401
CH-1214 Vernier, Geneva, Switzerland
Tel. +41 22 749 01 11
Fax +41 22 749 09 47
copyright@iso.org
www.iso.org

Contents

Page

Foreword	iv
1 Scope	1
2 Normative references	1
3 Terms and definitions	1
4 Installation, inspection and maintenance	1
4.1 Securing devices.....	1
4.1.1 Types.....	1
4.1.2 Securing fittings.....	2
4.1.3 Lashing fittings.....	3
4.1.4 Buttress fittings.....	4
4.2 The basic combination types for installation are given in Figures 1 and 2	5
4.3 Inspection.....	7
4.3.1 Factory inspection.....	7
4.3.2 In-service inspection.....	7
4.4 Maintenance.....	8
4.4.1 Maintenance of fixed fittings.....	8
4.4.2 Maintenance of loose fittings.....	9
5 Recording	9
6 Storage	9
Annex A (normative) Strength requirements	10
Annex B (normative) Test requirements	13
Annex C (informative) Marking requirements	19
Annex D (normative) Storage requirements	22
Bibliography	25

Foreword

ISO (the International Organization for Standardization) is a worldwide federation of national standards bodies (ISO member bodies). The work of preparing International Standards is normally carried out through ISO technical committees. Each member body interested in a subject for which a technical committee has been established has the right to be represented on that committee. International organizations, governmental and non-governmental, in liaison with ISO, also take part in the work. ISO collaborates closely with the International Electrotechnical Commission (IEC) on all matters of electrotechnical standardization.

The procedures used to develop this document and those intended for its further maintenance are described in the ISO/IEC Directives, Part 1. In particular the different approval criteria needed for the different types of ISO documents should be noted. This document was drafted in accordance with the editorial rules of the ISO/IEC Directives, Part 2 (see www.iso.org/directives).

Attention is drawn to the possibility that some of the elements of this document may be the subject of patent rights. ISO shall not be held responsible for identifying any or all such patent rights. Details of any patent rights identified during the development of the document will be in the Introduction and/or on the ISO list of patent declarations received (see www.iso.org/patents).

Any trade name used in this document is information given for the convenience of users and does not constitute an endorsement.

For an explanation on the meaning of ISO specific terms and expressions related to conformity assessment, as well as information about ISO's adherence to the WTO principles in the Technical Barriers to Trade (TBT) see the following URL: [Foreword - Supplementary information](#)

The committee responsible for this document is ISO/TC 8, *Ships and marine technology*, Subcommittee SC 4, *Outfitting and deck machinery*

Ships and marine technology — Installation, inspection and maintenance of container securing devices for ships

1 Scope

This International Standard specifies the requirements for installation, inspection and maintenance of container securing devices for ships (hereinafter referred to as “securing devices”) to ensure their safe use.

2 Normative references

The following documents, in whole or in part, are normatively referenced in this document and are indispensable for its application. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments) applies.

ISO 3874:1997, *Series 1 freight containers — Handling and securing*

3 Terms and definitions

For the purposes of this document, the following terms and definitions apply.

3.1

loose fittings

securing devices not welded to the hull

3.2

fixed fittings

securing devices welded to the hull

3.3

securing fittings

securing devices used between containers and between a container and the deck, hatch cover, or bilge, to prevent the container from longitudinal, transverse, or vertical movements relative to the hull during transportation

3.4

lashing fittings

securing devices used to lash a container to a hatch cover or deck

3.5

buttress fittings

securing devices used to eliminate the clearance between a container and a longitudinal bulkhead and transfer any transverse forces to the longitudinal bulkhead

4 Installation, inspection and maintenance

4.1 Securing devices

4.1.1 Types

Securing devices can be divided into three types, namely securing fittings, lashing fittings and buttress fittings, each type divided into fixed fittings and loose fittings.

4.1.2 Securing fittings

The structural types of securing fittings are given in [Table 1](#).

Table 1 — Structural types of securing fittings



 









 
 
 



 






 
 

 

 
 



 
 
Type	Code	Name	Illustration	Code	Name	Illustration
Fixed fitting	A11	Raised socket		C11	Flush socket	
	A12	Raised transverse double socket		C12	Transverse double flush socket	
	A13	Raised longitudinal double socket		C13	Longitudinal double flush socket	
	A21	Raised elongated socket		C14	Quadruple flush socket	
	A31	Longitudinal sliding socket		D11	Doubling plate	
	A32	Transverse sliding socket		D12	Transverse double doubling plate	
	A33	Transverse sliding double socket		D13	Longitudinal double doubling plate	
	A34	Longitudinal sliding double socket		E11	Weldable cone	
	B11	Dovetail foundation		E12	Weldable cone with hole	
	B12	Double dovetail foundation				
	F11-L	Left hand dovetail twistlock		F21-L	Left hand manual twistlock	
	F11-R	Right hand dovetail twistlock		F21-R	Right hand manual twistlock	
	F12-L	Left hand manual bottom twistlock		F22	Semi-automatic twistlock	

Table 1 (continued)

Type	Code	Name	Illustration	Code	Name	Illustration
Loose fitting	F12-R	Right hand manual bottom twistlock		F31	Midlock	
	F13	Semi-automatic bottom twistlock		G11	Bridge fitting	
	G12	Rack adjusting bridge fitting		H23	Longitudinal double stacker	
	H11	Bottom stacker		H31	Hanging stacker	
	H21	Single stacker		H32	Flangeless hanging stacker	
	H22	Transverse double stacker		H33	Hanging double stacker	

4.1.3 Lashing fittings

The structural types of lashing fittings are given in [Table 2](#).

Table 2 — Structural types of lashing fittings




 





 
 
 
 
 
 

Type	Code	Name	Illustration	Code	Name	Illustration
Fixed fitting	I11	D-ring		J22	Slewing lashing plate	
	J11	Lashing plate		K11	Single guide fitting	
	J12	Double lashing plate		K12	Double guide fitting for platform	
	J21	Limit lashing plate		K13	Double guide fitting	

 
 

 
 




 


Table 2 (continued)

Type	Code	Name	Illustration	Code	Name	Illustration
Loose fitting	L11	Hook turn-buckle		M13	Knob vertical lashing rod	
	L12	Knob turn-buckle		M14	External lashing rod	
	M11	Knob lashing rod		M21	Knob extension lashing rod	
	M12	Eye lashing rod		M22	Eye extension lashing rod	


4.1.4 Buttress fittings

The structural types of buttress fittings are given in [Table 3](#).

Table 3 — Structural types of buttress fittings

Type	Code	Name	Illustration	Code	Name	Illustration
Fixed fitting	N11	Raised counter bearing		N31	Flush dovetail counter bearing	
	N21	Flush counter bearing				
Loose fitting	011	Compression top support		022	Rack adjusting compression intermediate support	
	012	Rack adjusting Compression top support		023	Tension/compression intermediate support	
	013	Tension/compression top support		024	Rack adjusting tension/compression intermediate support	
	014	Rack adjusting tension/compression top support		031	Hanging compression intermediate support	
	021	Compression intermediate support				

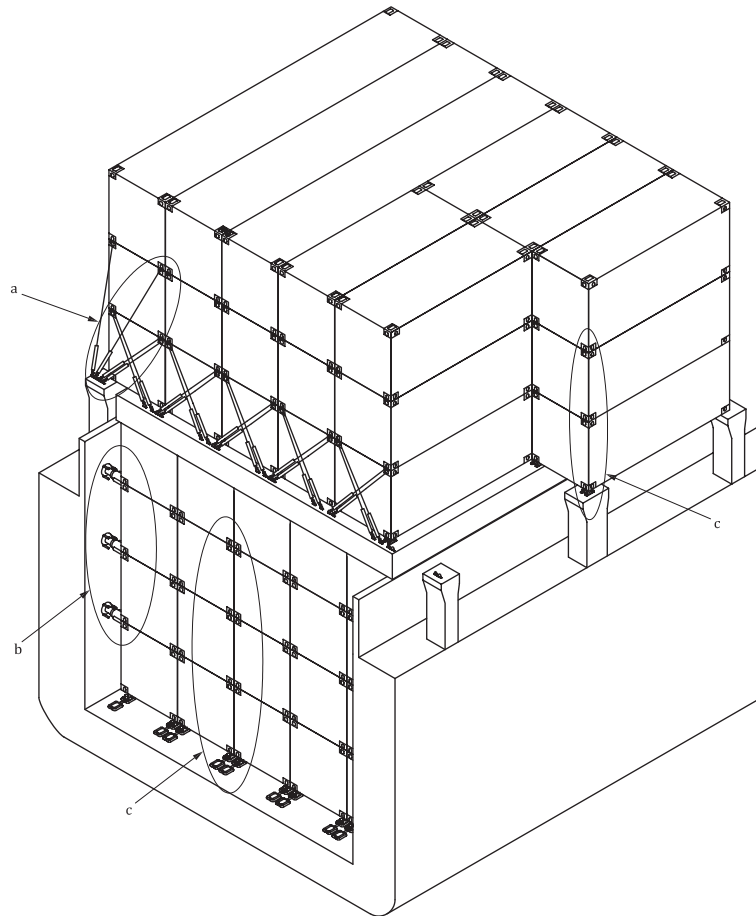
4.2 The basic combination types for installation are given in [Figures 1](#) and [2](#).



Key

- a Combination type of lashing fittings.
- b Combination type of buttress fittings.
- c Combination type of securing fittings.

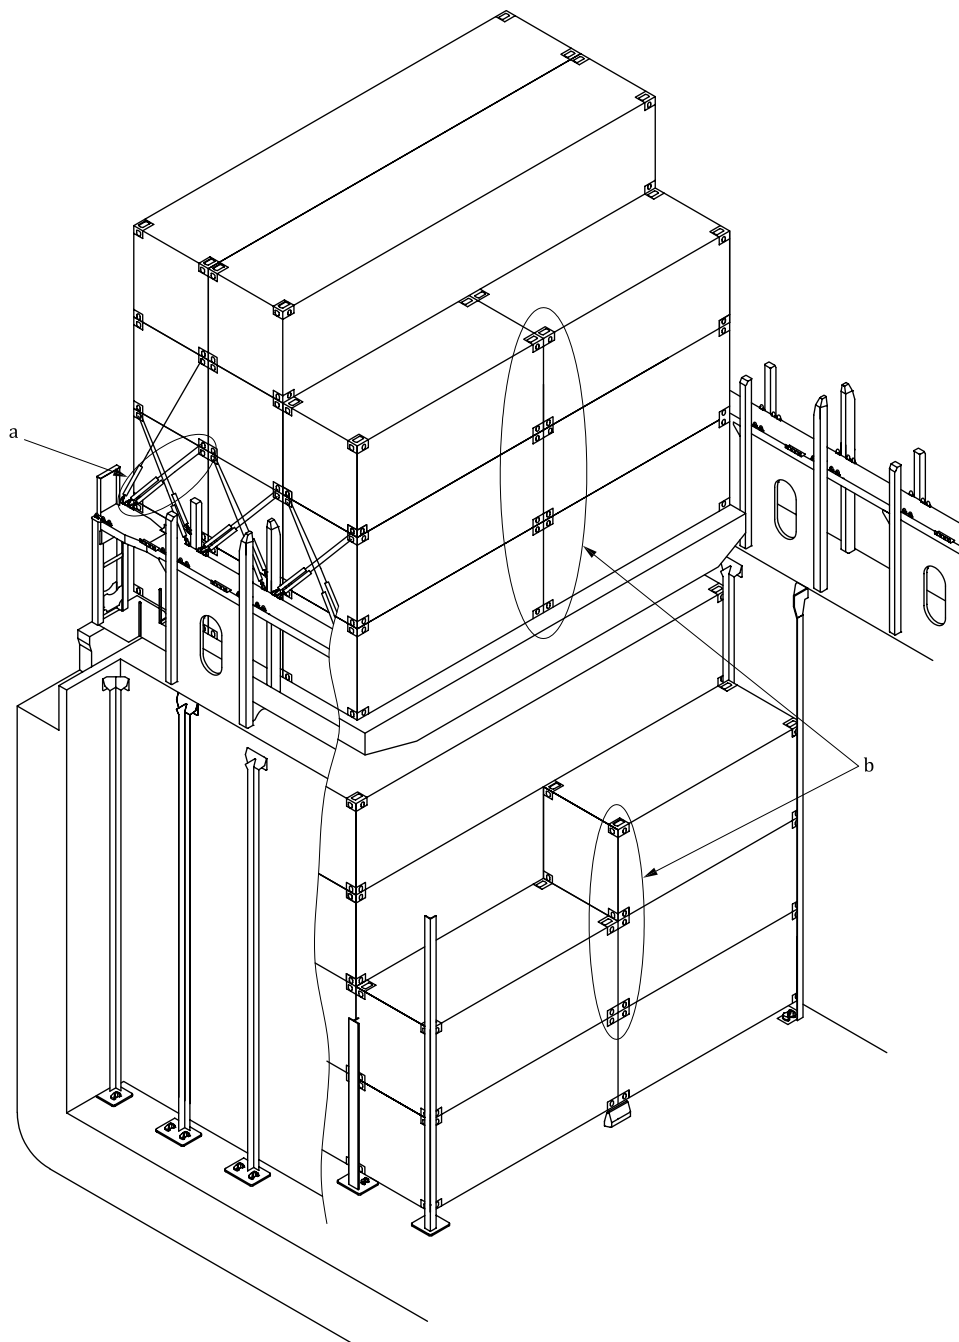Figure 1 — Basic types of container securing (I)



Key

- a Combination type of lashing fittings.
- b Combination type of securing fittings.

Figure 2 — Basic types of container securing (II)

4.2.1 Fixed fittings shall be installed on the hull according to the requirements of the layout of fixed fittings. Fixed fittings with colour marks shall be installed in the corresponding positions with colour code requirements taken into consideration. Fixed fittings that will require marking after installation shall be marked. The specific marking requirements are given in [Annex C](#).

4.2.2 Loose fittings shall be installed according to their specific installation positions in the lashing system and the requirements of each product's manufacturer's instructions. Products shall be installed

in the correct positions with the requirements of their length marks and direction marks taken into consideration. The specific marking requirements are given in [Annex C](#).

4.2.3 Only securing devices recognized by qualified personnel can be installed and used on-board.

4.2.4 The lashing utility test shall be carried out before the securing device is used for the first time in a new ship in order to validate the installation and confirm that use of the securing device meet the requirements of lashing system.

4.2.5 For complex ship types, a lashing simulation test shall be carried out at the beginning of the lashing design.

4.2.6 For complex lashing, a lashing procedure diagram shall be provided and posted at one, or more, conspicuous location(s).

4.3 Inspection

4.3.1 Factory inspection

For factory inspection of securing devices, the proof load test shall be carried out on a sampling basis, see [Annexes A and B](#) for loads and test methods.

4.3.2 In-service inspection

Inspections, including initial, annual, intermediate and special inspections, shall be carried out on a regular basis. Each inspection shall include visual, functional and strength examinations to ensure that a securing device is in good operational condition.

4.3.2.1 Cycles

4.3.2.1.1 An initial inspection shall be carried out concurrently with the classification survey of the ship.

4.3.2.1.2 An annual inspection shall be carried out concurrently with the annual inspection of the ship.

4.3.2.1.3 An intermediate inspection shall be carried out during daily use.

4.3.2.1.4 A special inspection shall be carried out concurrently with a special inspection of the ship or after adverse conditions, such as improper operation or experiencing a heavy sea state.

4.3.2.2 Conduct

4.3.2.2.1 Initial inspection

During the initial inspection, the comprehensive inspection shall be carried out for technical requirements of the securing device, such as materials, process and strength, to ensure that they satisfy the requirements of drawings approved by classification societies.

Visual inspection shall be carried out before use to ensure that there are no defects.

4.3.2.2.2 Annual inspection

The annual inspection is a general inspection of the securing device, to ensure that it is in effective operational condition.

Visual inspection shall be carried out to ensure that galvanized and paint coated surfaces are free of corrosion, without any breaks, serious wear, deformation, cracks, or severe rust.

4.3.2.2.3 Intermediate inspection

A securing device, whose lashing effect may be loose under stress during use, shall be examined and, if necessary, immediately adjusted by tightening or relashing.

Inspection shall be carried out after a container is loaded and secured on-board in a low temperature, or when the ship enters a hot environment.

Visual inspection of a securing device shall be carried out during daily use, to ensure its good performance.

4.3.2.2.4 Special inspection

Comprehensive inspection shall be carried out for all securing devices to ensure galvanized and paint surfaces are properly anti-corrosive, without any breakage, serious wear, deformation, cracks or severe rust.

For updated securing devices, the related certificates shall be obtained.

4.4 Maintenance

Maintenance can be subdivided into maintenance of fixed fittings and maintenance of loose fittings.

Securing devices shall be regularly maintained to ensure they are always in good operating condition.

Maintenance is generally conducted immediately after inspection and every six months thereafter.

In case of permanent deformation and damage, securing devices shall be scrapped and any corresponding parts shall be replaced simultaneously.

4.4.1 Maintenance of fixed fittings

4.4.1.1 Welds attached to the hull structure shall be inspected. Preferably, defects and cracks should be rectified by slotting or other methods. If necessary, welding repairs shall be made with an electrode matching the original materials. Before welding, an area out 20 mm all around the position to be welded shall have rust, greasy dirt and moisture removed and be polished until the metallic luster is exposed. In case of welding defects such as pores and cracks, they shall be polished until any such defects are eliminated before re-welding.

4.4.1.2 If the hull itself is defective (such as, uneven), the part of the hull where the device is to be rewelded shall be repaired in a proper manner.

4.4.1.3 If a fitting body has cracks, it shall be replaced and repair welding is not to be used.

4.4.1.4 If a fitting body has deformation, it shall be replaced.

4.4.1.5 Where a fitting has slight rust, the rust shall be removed and the surface paint coated. For severe rust, where the plate thickness is reduced by more than 2 mm after rust-removal or the pitting depth is more than 1mm, replacement is required. In case of any filiform corrosion, the fitting shall be replaced immediately.

4.4.1.6 If a small quantity of fittings is replaced during operation, they shall be replaced with those of at least the same strength (they may be of the same type or another type). Welding of the fittings to the hull shall be carried out in accordance with the appropriate welding process to ensure welding quality.

4.4.1.7 Fixed fittings shall be cleared of dusts, gravels, or other residues before use.

4.4.1.8 Daily maintenance, such as rust-removal and painting shall be conducted.

4.4.2 Maintenance of loose fittings

4.4.2.1 Loose fittings should be regularly coated with grease in order for moving parts to operate smoothly. The surface of fittings shall be kept clean and free of debris.

4.4.2.2 Cracked or deformed fittings shall be replaced immediately.

4.4.2.3 Fittings with filiform corrosion shall be replaced immediately.

4.4.2.4 If connection components, such as bolts or nuts become loose, they shall be retightened to the design torque.

4.4.2.5 Fittings with slight rust on their surfaces shall have the rust removed before the application of a coating of rust-proof paint. In cases where the plate thickness is reduced by more than 2 mm after rust-removal, or the pitting depth is more than 1 mm, the fitting shall be replaced. If the pitting depth is less than 1 mm any rust shall be removed and the fitting coated with anti-corrosive paint.

4.4.2.6 For thread type components, the thread part shall be sufficiently greased. Components with slightly damaged threads or non-rotatable components with minor imperfections, shall be repaired, non-rotatable components showing serious damage, such as deformation shall be replaced.

4.4.2.7 A fitting with specific marking requirements shall retain the same marking after maintenance. If it is necessary to replace it the new fitting shall have the same marking as the original.

5 Recording

The inspection, maintenance and update of fittings shall be recorded and filed in a timely manner. This has the benefit of documenting the measures taken for the inspection and maintenance of a ship's securing devices and extending their serviceable life.

6 Storage

Securing devices, other than fixed fittings, not in use shall be stored in a special container, storage rack, or other designated area. Specific requirements are given in [Annex D](#).

Annex A (normative)

Strength requirements

A.1 General

Securing fittings, lashing fittings and buttress fittings shall meet either the strength requirements specified by corresponding classification societies or the specified values listed at [Tables A.1](#) to [A.3](#).

A.2 Securing fittings

Table A.1 — Strength of securing fittings

 


 

 
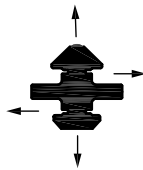

 

Type	Code	Safe working load (SWL)	Proof load (PL)	Minimum breaking load (BL)	Reference mass /kg	Loading
Fixed fitting	A11	Tensile 250 Shear 210 Compression 1020	Tensile 375 Shear 315 Compression 1326	Tensile 500 Shear 420	6,9 ~ 9	
	A12				14,8 ~ 22,5	
	A13				18,0 ~ 22,6	
	A21				8,6 ~ 11,0	
	A31				15 ~ 17,5	
	A32				15 ~ 17,5	
	A33				30 ~ 38,5	
	A34				23,5 ~ 36,5	
	B11	Tensile 250 Shear 210	Tensile 375 Shear 315	Tensile 500 Shear 420	4,5	
	B12				6,72 ~ 8,7	
	C11	Tensile 250	Tensile 375	Tensile 500	6,2 ~ 7,5	
	C12				17,2 ~ 19,3	
	C13				20,1	
	C14				48,5 ~ 57	
	D11	Shear 210	Shear 315	Shear 420	3,2	
	D12				6,5 ~ 6,8	
D13	6,9					
E11	Shear 210	Shear 315	Shear 420	1,0 ~ 1,5		
E12	Tensile 176 Shear 210	Tensile 265 Shear 315	Tensile 353 Shear 420	1,5		

Table A.1 (continued)

Type	Code	Safe working load (SWL)	Proof load (PL)	Minimum breaking load (BL)	Reference mass /kg	Loading
		kN				
Loose fitting	F11	Tensile 250 Shear 210	Tensile 375 Shear 315	Tensile 500 Shear 420	7,4	
	F12				5,4	
	F13				6,7	
	F21				5,0	
	F22				5,8	
	F31				4,3	
	G11	Tensile 50	Tensile 75	Tensile 100	3,5 ~ 4,4	
	G12	Tensile 150	Tensile 225	Tensile 300	8,8	
	H11	Shear 210	Shear 315	Shear 420	3,0 ~ 3,5	
	H21				3,6 ~ 4,9	
	H31				3,1	
	H32				2,7	
	H22	Shear 400	Shear 600	Shear 800	8,6 ~ 11,2	
	H23				8,8 ~ 11,5	
	H33				8,7 ~ 9,2	

A.3 Lashing fittings

Table A.2 — Strength of lashing fittings








Type	Code	Safe working load (SWL)	Proof load (PL)	Minimum breaking load (BL)	Reference mass /kg	Loading
		kN				
Fixed fitting	I11	Tensile 245	Tensile 367	Tensile 490	4,0	
	J11	Tensile 245	Tensile 367	Tensile 490	1,5	
	J12				2,8 ~ 3,0	
	J21				2,3	
	J22				8,5	
	K11	Shear 210	Shear 315	Shear 420	4,0 ~ 7,5	
	K12				5,8 ~ 9,5	
	K13				3,2 ~ 6,1	

Table A.2 (continued)

Type	Code	Safe working load (SWL)	Proof load (PL)	Minimum breaking load (BL)	Reference mass /kg	Loading
		kN				
Loose fitting	L11	Tensile 245	Tensile 367	Tensile 490	13,4 ~ 14,0	
	L12				12,6	
	M11				11,7 ~ 20	
	M12				10,4 ~ 18,7	
	M13				10,4 ~ 18,7	
	M14				12,9	
	M21				3,4	
	M22				3,9	

A.4 Buttress fittings

 Table A.3 — Strength of buttress fittings

Type	Code	Safe working load (SWL)	Proof load (PL)	Minimum breaking load (BL)	Reference mass /kg	Loading
		kN				
Fixed fitting	N11	Tensile 425	Tensile 468	Tensile 553	5,3	
	N21	Tensile 600	Tensile 660	Tensile 780	17	
	N31	Tensile 650	Tensile 715	Tensile 850	31	
Loose fitting	O11	Compression 210	Compression 231	Compression 273	19,3	
	O12	Compression 250	Compression 275	Compression 325	19,5	
	O21	Compression 450	Compression 495	Compression 585	19,9	
	O22	Compression 500	Compression 550	Compression 650	12,5	
	O31	Compression 500	Compression 550	Compression 650	5,0	
	O13	Tensile compression 252	Tensile compression 277	Tensile compression 328	18	
	O14	Tensile compression 250	Tensile compression 275	Tensile compression 325	18,5	
	O23	Tensile compression 500	Tensile compression 550	Tensile compression 650	17,5	
O24	Tensile compression 650	Tensile compression 715	Tensile compression 850	15,5		

Annex B (normative)

Test requirements

B.1 General test requirements

B.1.1 Tests on a securing device shall simulate the actual stress condition.

B.1.2 After being subjected to the proof load (PL) given in [Annex A](#), securing devices shall not suffer any permanent deformation and rotatable parts shall be capable of normal rotation.

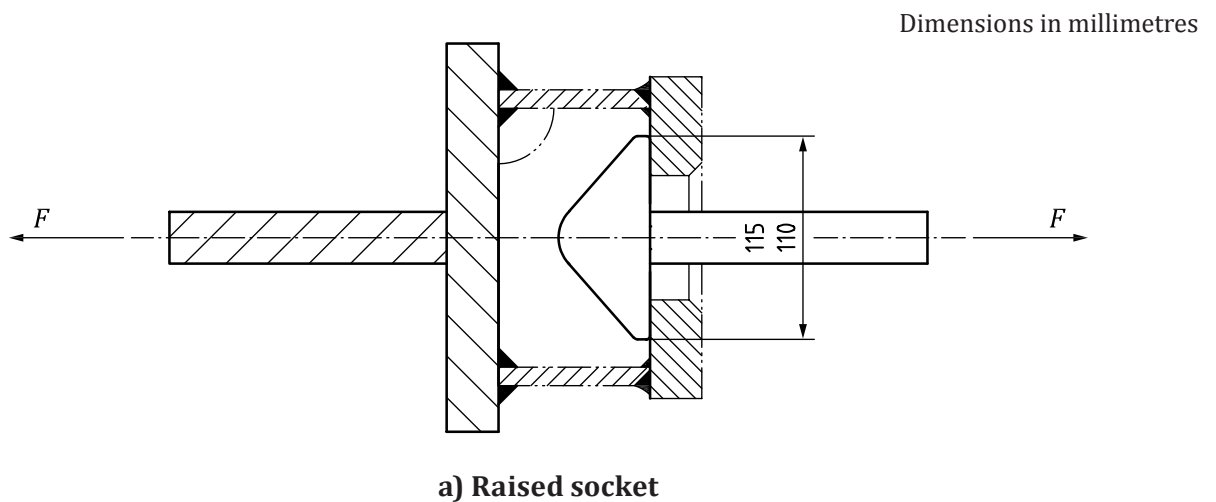
B.1.3 Securing devices shall withstand the minimum breaking load (BL) given in [Annex A](#) without fracture.

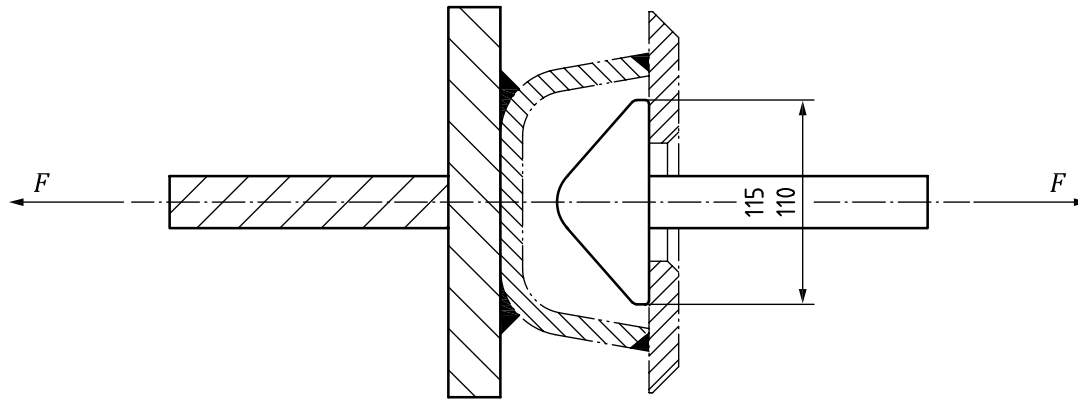
B.2 Test methods

B.2.1 Methods for testing sockets

B.2.1.1 Tensile test

The socket shall be mounted in the test fixture as shown in the illustration, and the force shall be applied to the socket by a tensile test machine (see [Figure B.1](#)).





b) Flush socket


NOTE F is the test force.

Figure B.1 — Tensile test on a socket

B.2.1.2 Shear strength test

The shear strength test shall be carried out for sockets with shear strength requirements (see [Figure B.2](#)).

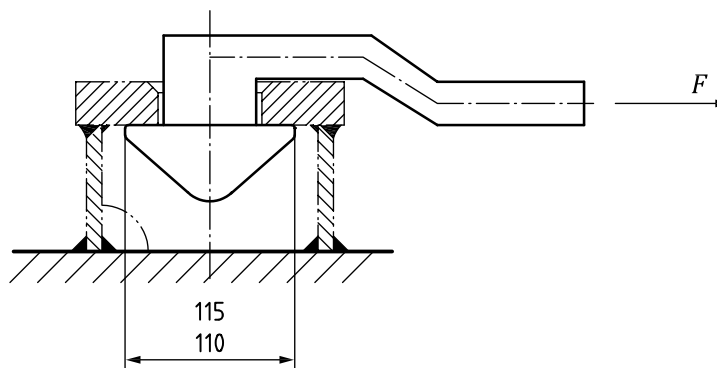Dimensions in millimetres




NOTE F is the test force.

Figure B.2 — Shear strength test on a socket

B.2.1.3 Compression test

The compression test shall be carried out for sockets with compression requirements (see [Figure B.3](#)).

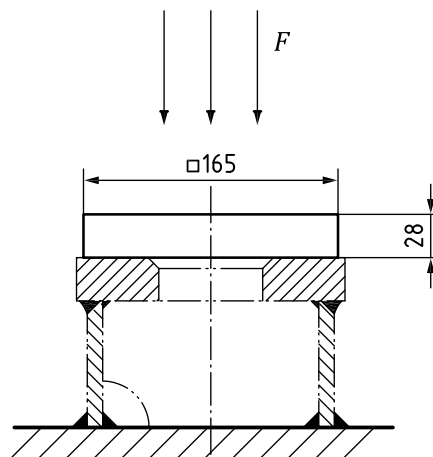Dimensions in millimetres



NOTE F is the test force.


Figure B.3 — Compression test on a socket

B.2.2 Method for testing locks

The locks shall be tested in accordance with ISO 3874:1997, A.8 Test method.

B.2.3 Method for testing bridge fittings

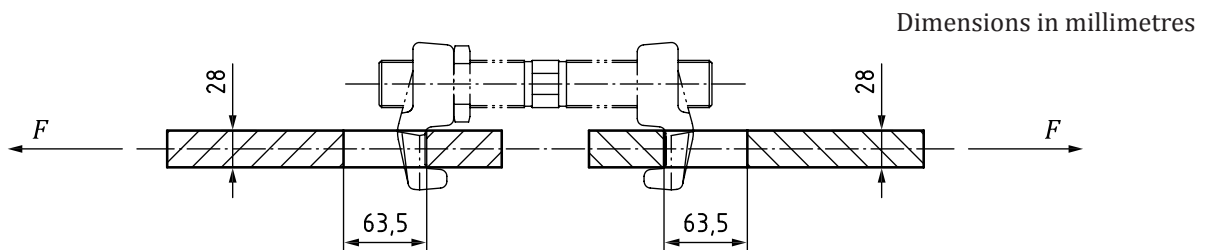When performing the tensile test, the two ends of the bridge fitting shall be placed in the maximum position (see [Figure B.4](#)).



NOTE F is the test force.

Figure B.4 — Tensile test on a bridge fitting

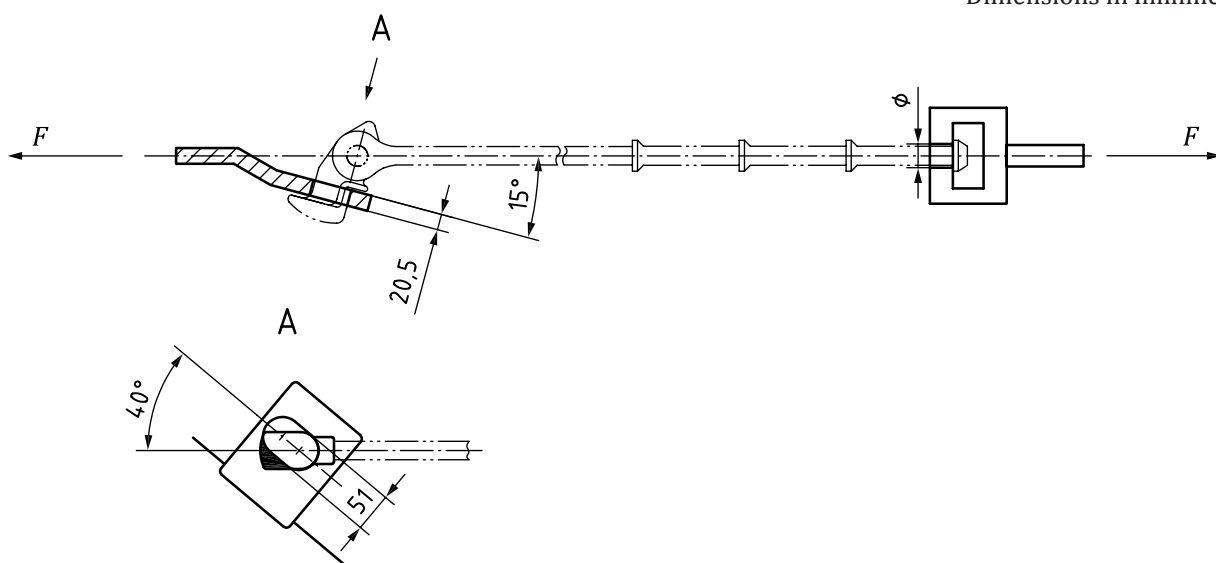
B.2.4 Method for testing lashing rods

When performing the tensile test, the two ends of the lashing rod shall be mounted in the test fixture, and the force shall be applied to the lashing rod by a tensile test machine.

B.2.4.1 Tensile test on a knob lashing rod

When performing the tensile test, the last section of the knob end shall be tested for knob lashing rod (see [Figure B.5](#)).

Dimensions in millimetres




NOTE F is the test force.

Figure B.5 — Tensile test on a knob lashing rod

B.2.4.2 Tensile test on an eye lashing rods

The tensile test on the eye lashing rod is as shown in [Figure B.6](#).

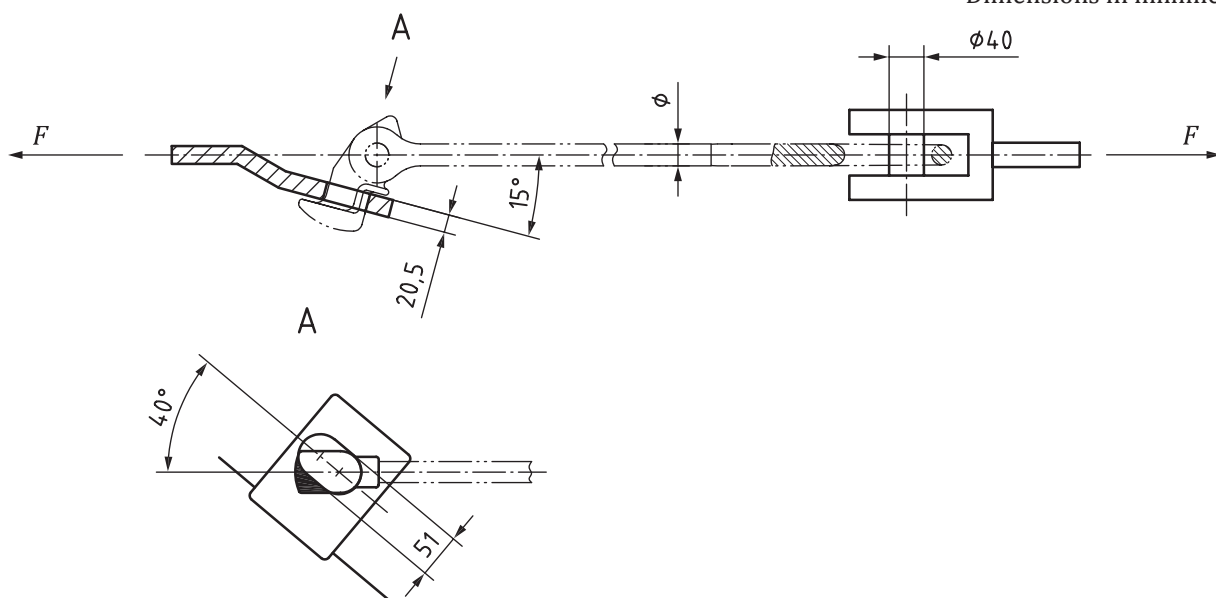Dimensions in millimetres



NOTE F is the test force.

Figure B.6 — Tensile test on an eye lashing rod

B.2.5 Method for testing turnbuckles

When performing the tensile test, the two ends of the turnbuckle shall be mounted in the test fixture, and the force shall be applied to the turnbuckle by a tensile test machine.

B.2.5.1 Tensile test on a hook turnbuckles

The hook turnbuckle shall be tested in accordance with ISO 3874:1997, D.7.2 Tensile test on tensioning device.

B.2.5.2 Tensile test on a knob turnbuckles

The arrangement for conducting a tensile test on a knob turnbuckles is as shown in [Figure B.7](#).




NOTE F is the test force.

Figure B.7 — Tensile test on knob turnbuckle

B.2.6 Method for testing a D-ring and a lashing plate

B.2.6.1 Tensile test on a D-ring

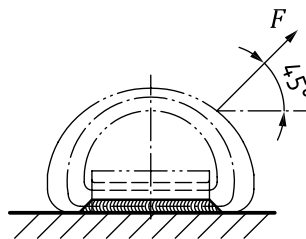When performing the tensile test, the D-ring shall be mounted in the test fixture and the force shall be applied to the D-ring in the direction shown in [Figure B.8](#).




NOTE F is the test force.

Figure B.8 — Tensile test on a D-ring

B.2.6.2 Tensile test on a lashing plate

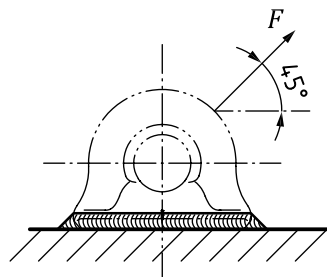When performing the tensile test, the lashing plate shall be mounted in the test fixture and the force shall be applied to the lashing plate in the direction shown in [Figure B.9](#).



NOTE F is the test force.

Figure B.9 — Tensile test on a lashing plate

B.2.7 Method for testing stackers

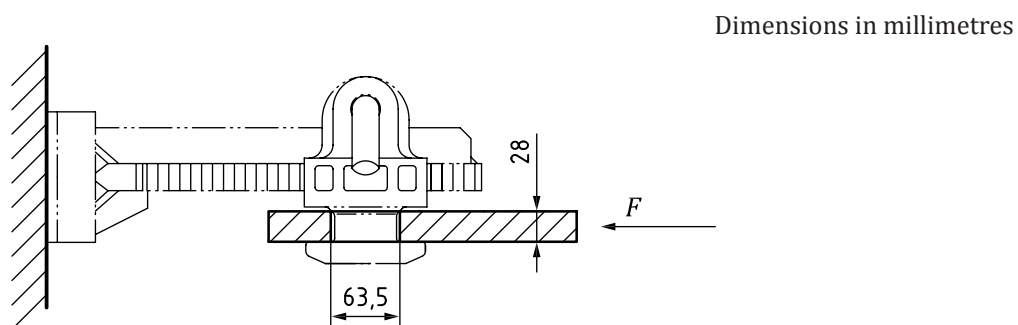
The stackers shall be tested in accordance with ISO 3874:1997, C.7 Test method.

B.2.8 Method for testing supports

With one end of the support fixed, the force shall be applied to the other end connected to a locator.

B.2.8.1 Compression support test

The test method of compression supports is as shown in [Figure B.10](#).




NOTE F is the test force.

Figure B.10 — Compression test on a compression support

B.2.8.2 Test on tension/compression support

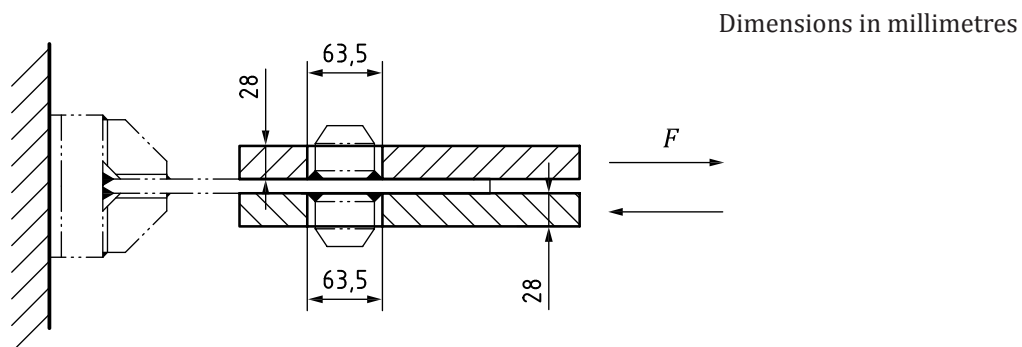The test method of tension/compression supports is as shown in [Figure B.11](#).



NOTE F is the test force.

Figure B.11 — Tensile and compression test on tension/compression support

Annex C (informative)

Marking requirements

C.1 General

Where possible, it is recommended that the container securing devices be clearly marked with Colour codes to indicate fittings of different lengths, heights, or other variations, that may easily be misidentified, to ensure correct operation, assembly and management..

C.2 Marking requirements

Markings mainly include those to indicate length, height, installation direction and other marks.

C.2.1 Direction markings

Securing devices that have parts that require a specific installation direction should have those parts coated with conspicuous paints.

- For securing devices such as semi-automatic twistlocks that require upward installation, the position of parts installed upward should be coated with conspicuously yellow paints. See [Figure C.1 a\), c\)](#).
- For fittings used in the bottom that require upward installation, the position of parts installed upward should be coated with conspicuously green paints, see [Figure C.1 b\)](#).
- For fittings whose parts are required to be installed toward outside of the container, the position which faces outside should be coated with yellow paints, see [Figure C.1 d\)](#).


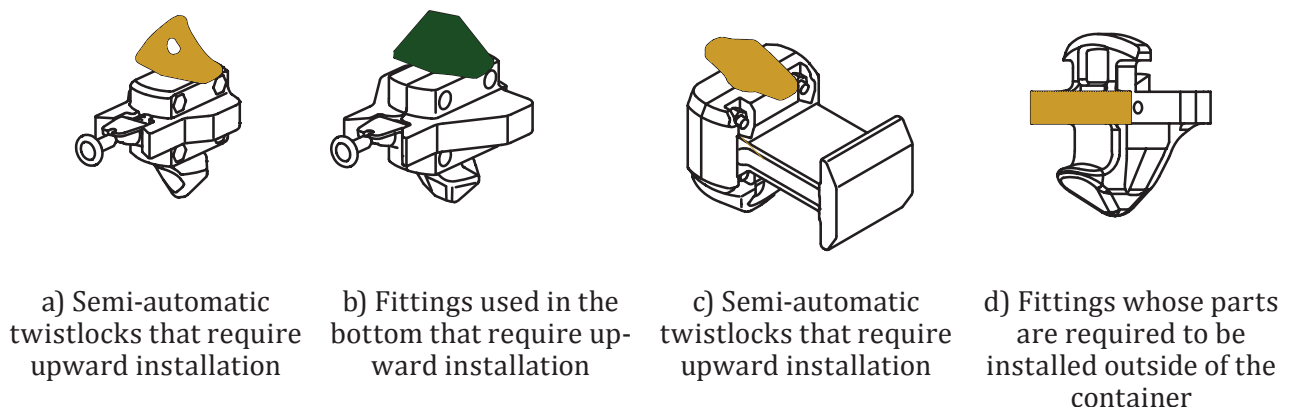


Figure C.1 — Direction markings


C.2.2 Length markings

Where lashing rods and turnbuckles of different lengths are indistinguishably similar in size, they should be coated with different colours of paint for marking. The positions of paints are given in [Figure C.2](#) and recommended colours of paint in [Table C.1](#).

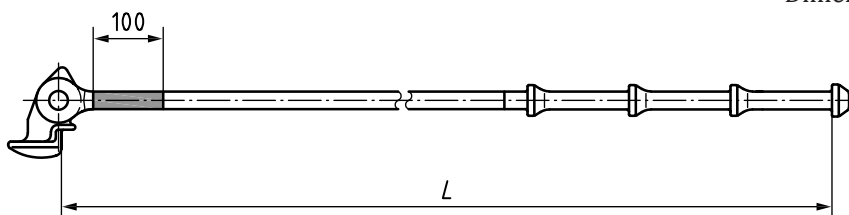
Dimensions in millimetres



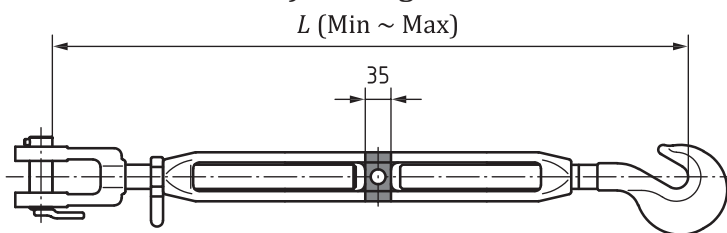a) Lashing rod



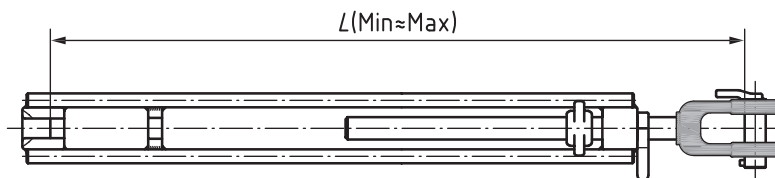b) Hook turnbuckle (L11)



c) Knob turnbuckle (L12)

Figure C.2 — Locations for length markings

Table C.1 — Paint Colour requirements of lashing rods and turnbuckles

Dimensions in millimetres

Product type	Length range	Colour
Lashing rod (M11, M12, M13, M14)	$L < 2\,400$	Red
	$\geq 2\,400 \sim 2\,500$	Galvanized Colour
	$2\,500 < L < 4\,600$	Yellow
	$L \geq 4\,600 \sim 5\,000$	Galvanized Colour
	$L > 5\,000$	Green
Hook turnbuckle (L11)	$L \text{ Min} < 880$	Green
	$L \text{ Min} = 880$	Blue
	$L \text{ Min} = 920$	Galvanized Colour
	$L \text{ Min} = 965$	Yellow
	$L \text{ Min} > 965$	Red
Knob turnbuckle (L12)	$L \text{ Min} < 1\,000$	Yellow
	$L \text{ Min} = 1\,000$	Green
	$L \text{ Min} = 1\,080$	Galvanized Colour
	$L \text{ Min} = 1\,150$	Red
	$L \text{ Min} > 1\,150$	Blue

NOTE For lengths beyond the length scope specified in the table, paint colours shall be determined upon the actual demand.

C.2.3 Height markings

Fittings of many indistinguishably similar heights should be coated with different colours of paint for marking. The top of the plate is partially painted. See [Figure C.3](#).

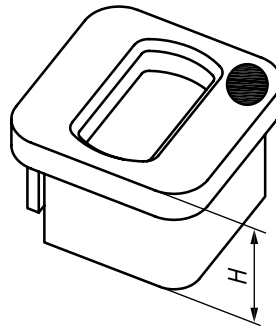


Figure C.3 — Method of applying height markings

Table C.2 — Socket paint colours

Dimensions in millimetres

Product type	Height range	Colour
Socket	$H < 110$	Red
	$H = 110$	Primer
	$130 > H > 110$	Yellow
	$H = 130$	Blue
	$140 > H > 130$	Green
	$H = 140$	Brown
	$H > 140$	Pink

C.2.4 Other markings

C.2.4.1 The top of the hatch cover lifting socket should be painted after installation for identification, the top plane or the whole body shall be coated with yellow paint. See [Figure C.4](#).

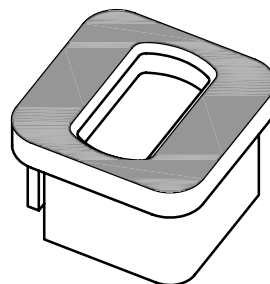


Figure C.4 — Method of marking a hatch cover lifting socket

C.2.4.2 Loose fittings which are maintained should be distinguished from those that are not maintained by distinct markings.

Annex D (normative)

Storage requirements

D.1 General

Container securing devices shall be stored in special storages or fixed positions to facilitate management and operation, and prevent damage.

D.2 Storage requirements

D.2.1 Lashing rods shall be stored in a storage rack. See [Figure D.1](#).


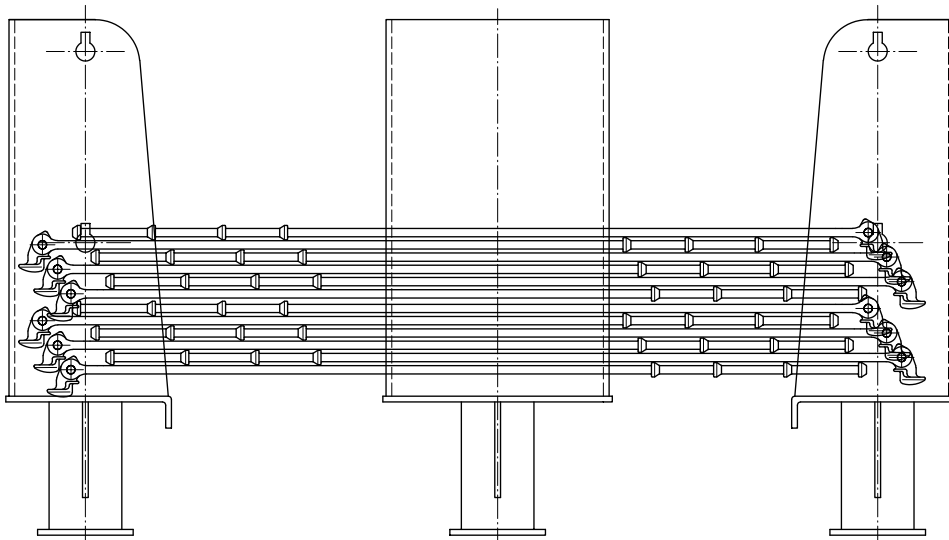


Figure D.1 — Lashing rod storage rack

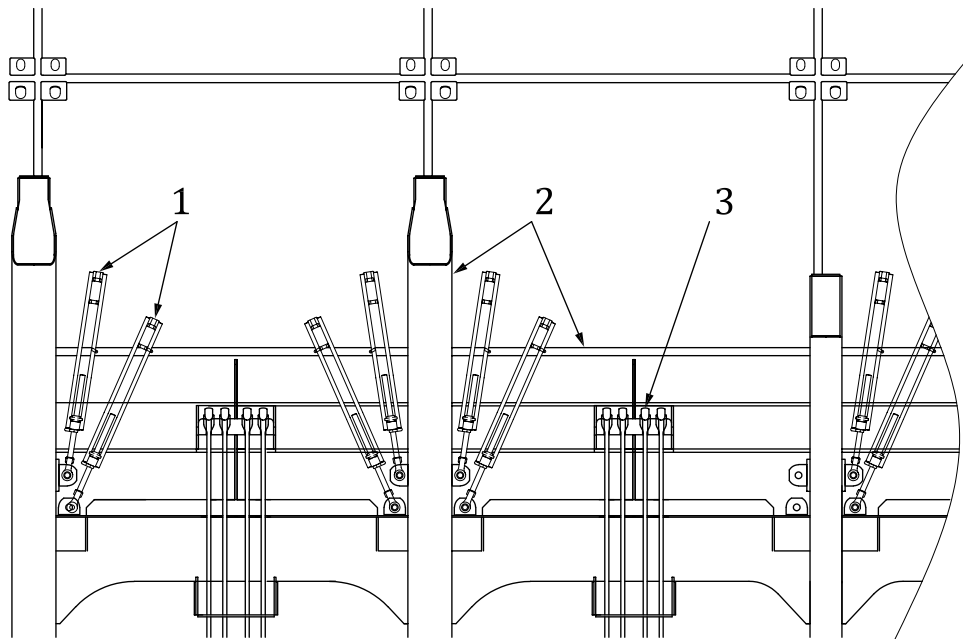D.2.2 Lashing rods and turnbuckles shall be stored on a lashing bridge. See [Figure D.2](#).



Key

- 1 turnbuckle
- 2 lashing bridge
- 3 lashing rod

Figure D.2 — Lashing bridge for lashing rods and turnbuckles

D.2.3 Turnbuckles shall be stored on a hatch cover. See [Figure D.3](#)

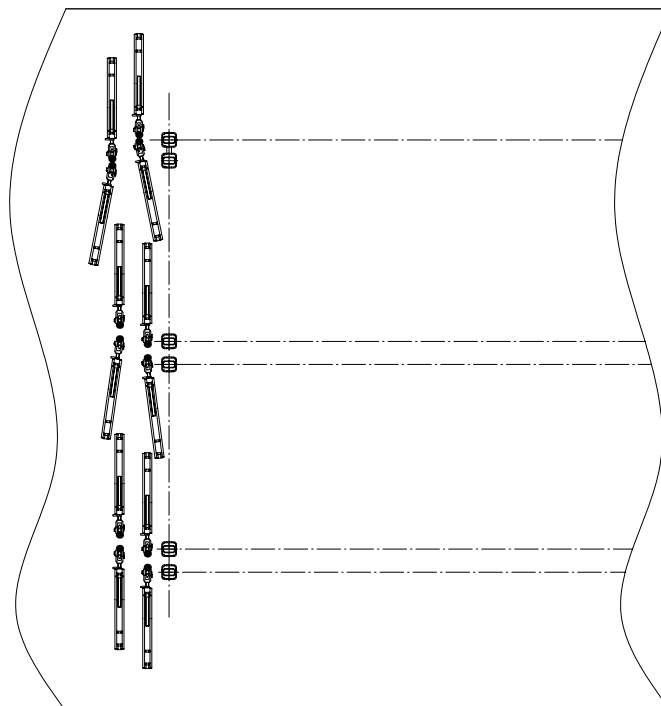


Figure D.3 — Storage of turnbuckles on a hatch cover

D.2.4 Loose fittings such as semi-automatic twistlocks, midlocks, hanging stackers and turnbuckles may be stored in separate containers or the containers may be stored together in a frame box. See [Figure D.4](#). Manual twistlocks, single stackers and transverse double stackers, etc. may be stored in separate containers on-board.

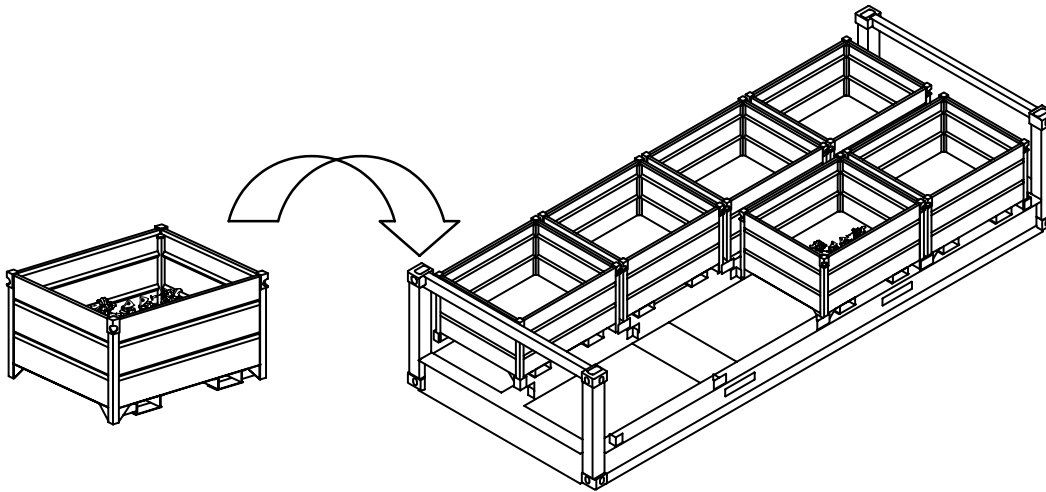


Figure D.4 — Methods of storing loose fittings separately

D.2.5 The storage area shall keep dry, have adequate drainage and be protected from erosion by chemicals, chemical gases, steam, or other corrosive agents. Securing devices shall be arranged neatly, and mixed storage shall be avoided for fittings with different markings.

Bibliography

- [1] ISO 1161:—¹⁾, *Series 1 freight containers — Corner and intermediate fittings — Specification*

1) To be published.

British Standards Institution (BSI)

BSI is the national body responsible for preparing British Standards and other standards-related publications, information and services.

BSI is incorporated by Royal Charter. British Standards and other standardization products are published by BSI Standards Limited.

About us

We bring together business, industry, government, consumers, innovators and others to shape their combined experience and expertise into standards-based solutions.

The knowledge embodied in our standards has been carefully assembled in a dependable format and refined through our open consultation process. Organizations of all sizes and across all sectors choose standards to help them achieve their goals.

Information on standards

We can provide you with the knowledge that your organization needs to succeed. Find out more about British Standards by visiting our website at bsigroup.com/standards or contacting our Customer Services team or Knowledge Centre.

Buying standards

You can buy and download PDF versions of BSI publications, including British and adopted European and international standards, through our website at bsigroup.com/shop, where hard copies can also be purchased.

If you need international and foreign standards from other Standards Development Organizations, hard copies can be ordered from our Customer Services team.

Subscriptions

Our range of subscription services are designed to make using standards easier for you. For further information on our subscription products go to bsigroup.com/subscriptions.

With **British Standards Online (BSOL)** you'll have instant access to over 55,000 British and adopted European and international standards from your desktop. It's available 24/7 and is refreshed daily so you'll always be up to date.

You can keep in touch with standards developments and receive substantial discounts on the purchase price of standards, both in single copy and subscription format, by becoming a **BSI Subscribing Member**.

PLUS is an updating service exclusive to BSI Subscribing Members. You will automatically receive the latest hard copy of your standards when they're revised or replaced.

To find out more about becoming a BSI Subscribing Member and the benefits of membership, please visit bsigroup.com/shop.

With a **Multi-User Network Licence (MUNL)** you are able to host standards publications on your intranet. Licences can cover as few or as many users as you wish. With updates supplied as soon as they're available, you can be sure your documentation is current. For further information, email bsmusales@bsigroup.com.

BSI Group Headquarters

389 Chiswick High Road London W4 4AL UK

Revisions

Our British Standards and other publications are updated by amendment or revision.

We continually improve the quality of our products and services to benefit your business. If you find an inaccuracy or ambiguity within a British Standard or other BSI publication please inform the Knowledge Centre.

Copyright

All the data, software and documentation set out in all British Standards and other BSI publications are the property of and copyrighted by BSI, or some person or entity that owns copyright in the information used (such as the international standardization bodies) and has formally licensed such information to BSI for commercial publication and use. Except as permitted under the Copyright, Designs and Patents Act 1988 no extract may be reproduced, stored in a retrieval system or transmitted in any form or by any means – electronic, photocopying, recording or otherwise – without prior written permission from BSI. Details and advice can be obtained from the Copyright & Licensing Department.

Useful Contacts:

Customer Services

Tel: +44 845 086 9001

Email (orders): orders@bsigroup.com

Email (enquiries): cservices@bsigroup.com

Subscriptions

Tel: +44 845 086 9001

Email: subscriptions@bsigroup.com

Knowledge Centre

Tel: +44 20 8996 7004

Email: knowledgecentre@bsigroup.com

Copyright & Licensing

Tel: +44 20 8996 7070

Email: copyright@bsigroup.com



...making excellence a habit.™