

BS EN 4673-001:2010



BSI Standards Publication

Aerospace series — Inserts, UNJ threads, self-locking, with self-broaching keys

Part 001: Installation and removal procedure

NO COPYING WITHOUT BSI PERMISSION EXCEPT AS PERMITTED BY COPYRIGHT LAW

raising standards worldwide[™]

Copyright British Standards Institution
Provided by IHS under license with BSI - Uncontrolled Copy
No reproduction or networking permitted without license from IHS

Not for Resale

BSI[®]

National foreword

This British Standard is the UK implementation of EN 4673-001:2010.

The UK participation in its preparation was entrusted to Technical Committee ACE/12, Aerospace fasteners and fastening systems.

A list of organizations represented on this committee can be obtained on request to its secretary.

This publication does not purport to include all the necessary provisions of a contract. Users are responsible for its correct application.

© BSI 2010

ISBN 978 0 580 63719 3

ICS 49.030.30

Compliance with a British Standard cannot confer immunity from legal obligations.

This British Standard was published under the authority of the Standards Policy and Strategy Committee on 30 September 2010.

Amendments issued since publication

Date	Text affected
------	---------------

EUROPEAN STANDARD

EN 4673-001

NORME EUROPÉENNE

EUROPÄISCHE NORM

August 2010

ICS 49.030.30

English Version

Aerospace series - Inserts, UNJ threads, self-locking, with self-broaching keys - Part 001: Installation and removal procedure

Série aéronautique - Douilles filetées, à filetage UNJ, à freinage interne, à clavettes auto-brochantes - Partie 001: Procédure d'installation et d'extraction

Luft- und Raumfahrt - Gewindeeinsätze, UNJ-Gewinden, selbstsichernd, mit selbststräumenden Stiften - Teil 001: Ein- und Ausbaurverfahren

This European Standard was approved by CEN on 12 June 2010.

CEN members are bound to comply with the CEN/CENELEC Internal Regulations which stipulate the conditions for giving this European Standard the status of a national standard without any alteration. Up-to-date lists and bibliographical references concerning such national standards may be obtained on application to the CEN Management Centre or to any CEN member.

This European Standard exists in three official versions (English, French, German). A version in any other language made by translation under the responsibility of a CEN member into its own language and notified to the CEN Management Centre has the same status as the official versions.

CEN members are the national standards bodies of Austria, Belgium, Bulgaria, Croatia, Cyprus, Czech Republic, Denmark, Estonia, Finland, France, Germany, Greece, Hungary, Iceland, Ireland, Italy, Latvia, Lithuania, Luxembourg, Malta, Netherlands, Norway, Poland, Portugal, Romania, Slovakia, Slovenia, Spain, Sweden, Switzerland and United Kingdom.



EUROPEAN COMMITTEE FOR STANDARDIZATION
COMITÉ EUROPÉEN DE NORMALISATION
EUROPÄISCHES KOMITEE FÜR NORMUNG

Management Centre: Avenue Marnix 17, B-1000 Brussels

© 2010 CEN All rights of exploitation in any form and by any means reserved worldwide for CEN national Members.

Ref. No. EN 4673-001:2010: E

Contents

Page

Foreword.....	3
1 Scope	4
2 Normative references	4
3 Insert information	4
4 Inspection requirements before installation	6
5 Installation tools	6
5.1 General.....	6
5.2 Hand installation.....	7
5.2.1 Installation tool	7
5.2.2 Procedure	8
5.3 Air pressure installation.....	8
5.3.1 Installation tool	8
5.3.2 Procedure	9
6 Checks of insert position and keys broaching.....	9
7 Inspection of minimum self-locking torque	10
8 Insert replacement.....	11
8.1 Insert removal	11
8.2 Repair.....	12
8.2.1 General rules	12
8.2.2 First and second repair size installation	12

Foreword

This document (EN 4673-001:2010) has been prepared by the Aerospace and Defence Industries Association of Europe - Standardization (ASD-STAN).

After enquiries and votes carried out in accordance with the rules of this Association, this Standard has received the approval of the National Associations and the Official Services of the member countries of ASD, prior to its presentation to CEN.

This European Standard shall be given the status of a national standard, either by publication of an identical text or by endorsement, at the latest by February 2011, and conflicting national standards shall be withdrawn at the latest by February 2011.

Attention is drawn to the possibility that some of the elements of this document may be the subject of patent rights. CEN [and/or CENELEC] shall not be held responsible for identifying any or all such patent rights.

According to the CEN/CENELEC Internal Regulations, the national standards organizations of the following countries are bound to implement this European Standard: Austria, Belgium, Bulgaria, Croatia, Cyprus, Czech Republic, Denmark, Estonia, Finland, France, Germany, Greece, Hungary, Iceland, Ireland, Italy, Latvia, Lithuania, Luxembourg, Malta, Netherlands, Norway, Poland, Portugal, Romania, Slovakia, Slovenia, Spain, Sweden, Switzerland and the United Kingdom.

1 Scope

This European Standard specifies the installation and removal procedure (hole profile, tools) of self-locking, self-broaching key, UNJ thread inserts defined by EN standards, for aerospace applications.

2 Normative references

The following referenced documents are indispensable for the application of this document. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments) applies.

EN 4673-002, *Aerospace series — Inserts, UNJ threads, self-locking, with self-broaching keys — Part 002: Design standard*

EN 4673-004, *Aerospace series — Inserts, UNJ threads, self-locking, with self-broaching keys — Part 004: In heat resisting nickel base alloy Ni-P100HT (Inconel 718), silver plating*

EN 4673-005, *Aerospace series — Inserts, UNJ threads, self-locking, with self-broaching keys — Part 005: In heat resisting nickel base alloy Ni-P101HT (WASPALLOY), silver plating*

EN 4673-006, *Aerospace series — Inserts, UNJ threads, self-locking, with self-broaching keys — Part 006: In heat resisting steel FE-PA2601 (A286), MoS₂ coated*

ISO 3161, *Aerospace series — UNJ threads — General requirements and limit dimensions*

3 Insert information

Tables 1 to 3 provide the cross reference between the insert codification, the related bolt thread and the tapped hole diameter.

Table 1 — Normal size insert

Insert reference	Bolt thread diameter ^a	Tapped hole diameter ^a	Tapped hole reference ^a
EN 4673-004-3-0 EN 4673-005-3-0 EN 4673-006-3-0	.190 0-32UNJF	.312 5-18UNJC-3B	EN 4673-002-3-0
EN 4673-004-4-0 EN 4673-005-4-0 EN 4673-006-4-0	.250 0-28UNJF	.375 0-16UNJFC-3B	EN 4673-002-4-0
EN 4673-004-5-0 EN 4673-005-5-0 EN 4673-006-5-0	.312 5-24UNJF	.437 5-16UNJ-3B	EN 4673-002-5-0
EN 4673-004-6-0 EN 4673-005-6-0 EN 4673-006-6-0	.375 0-24UNJF	.500 0-16UNJ-3B	EN 4673-002-6-0
EN 4673-004-7-0 EN 4673-005-7-0 EN 4673-006-7-0	.437 5-20UNJF	.562 5-16UNJ-3B	EN 4673-002-7-0
EN 4673-004-8-0 EN 4673-005-8-0 EN 4673-006-8-0	.500 0-20UNJF	.625 0-16UNJ-3B	EN 4673-002-8-0
^a According to ISO 3161.			

Table 2 — First repair size insert

Insert reference	Bolt thread diameter ^a	Tapped hole diameter ^a	Tapped hole reference ^a
EN 4673-004-3-1 EN 4673-005-3-1 EN 4673-006-3-1	.190 0-32UNJF	.375 0-16UNJC-3B	EN 4673-002-3-1
EN 4673-004-4-1 EN 4673-005-4-1 EN 4673-006-4-1	.250 0-28UNJF	.437 5-16UNJ-3B	EN 4673-002-4-1
EN 4673-004-5-1 EN 4673-005-5-1 EN 4673-006-5-1	.312 5-24UNJF	.500 0-16UNJ-3B	EN 4673-002-5-1
EN 4673-004-6-1 EN 4673-005-6-1 EN 4673-006-6-1	.375 0-24UNJF	.562 5-16UNJ-3B	EN 4673-002-6-1
EN 4673-004-7-1 EN 4673-005-7-1 EN 4673-006-7-1	.437 5-20UNJF	.625 0-16UNJ-3B	EN 4673-002-7-1
EN 4673-004-8-1 EN 4673-005-8-1 EN 4673-006-8-1	.500 0-20UNJF	.687 5-16UNJ-3B	EN 4673-002-8-1
^a According to ISO 3161.			

Table 3 — Second repair size insert

Insert reference	Bolt thread diameter ^a	Tapped hole diameter ^a	Tapped hole reference ^a
EN 4673-004-3-2 EN 4673-005-3-2 EN 4673-006-3-2	.190 0-32UNJF	.437 5-16UNJ-3B	EN 4673-002-3-2
EN 4673-004-4-2 EN 4673-005-4-2 EN 4673-006-4-2	.250 0-28UNJF	.500 0-16UNJ-3B	EN 4673-002-4-2
EN 4673-004-5-2 EN 4673-005-5-2 EN 4673-006-5-2	.312 5-24UNJF	.562 5-16UNJ-3B	EN 4673-002-5-2
EN 4673-004-6-2 EN 4673-005-6-2 EN 4673-006-6-2	.375 0-24UNJF	.625 0-16UNJ-3B	EN 4673-002-6-2
EN 4673-004-7-2 EN 4673-005-7-2 EN 4673-006-7-2	.437 5-20UNJF	.687 5-16UNJ-3B	EN 4673-002-7-2
EN 4673-004-8-2 EN 4673-005-8-2 EN 4673-006-8-2	.500 0-20UNJF	.750 0-16UNJF-3B	EN 4673-002-8-2
^a According to ISO 3161.			

4 Inspection requirements before installation

Prior to installation check the installation hole to receive the insert are free from burrs and any foreign objects, grease, oil, etc.

Inspect insert to be installed and ensure that it is clean and free from protective grease, etc.

5 Installation tools

5.1 General

In order to facilitate the correct assembly of the inserts use the appropriate tools. It is necessary to use one tool by insert reference.

The tools and their methods of application described in this standard are not mandatory and show only the basic principles to be observed to achieve the satisfactory installation and subsequent broaching and the satisfactory removal of the inserts.

The maximum dimensional requirements provided shall be achieved and on no account shall the design of the tools or their methods of application be such that damage may occur to the threads or the locking zone of the insert or the component into which it is being installed.

5.2 Hand installation

5.2.1 Installation tool

Figure 1 illustrates a combined tool used for hand screwing and hand broaching and its overall dimensions.

Figure 1 and Table 4 give the overall dimensions.

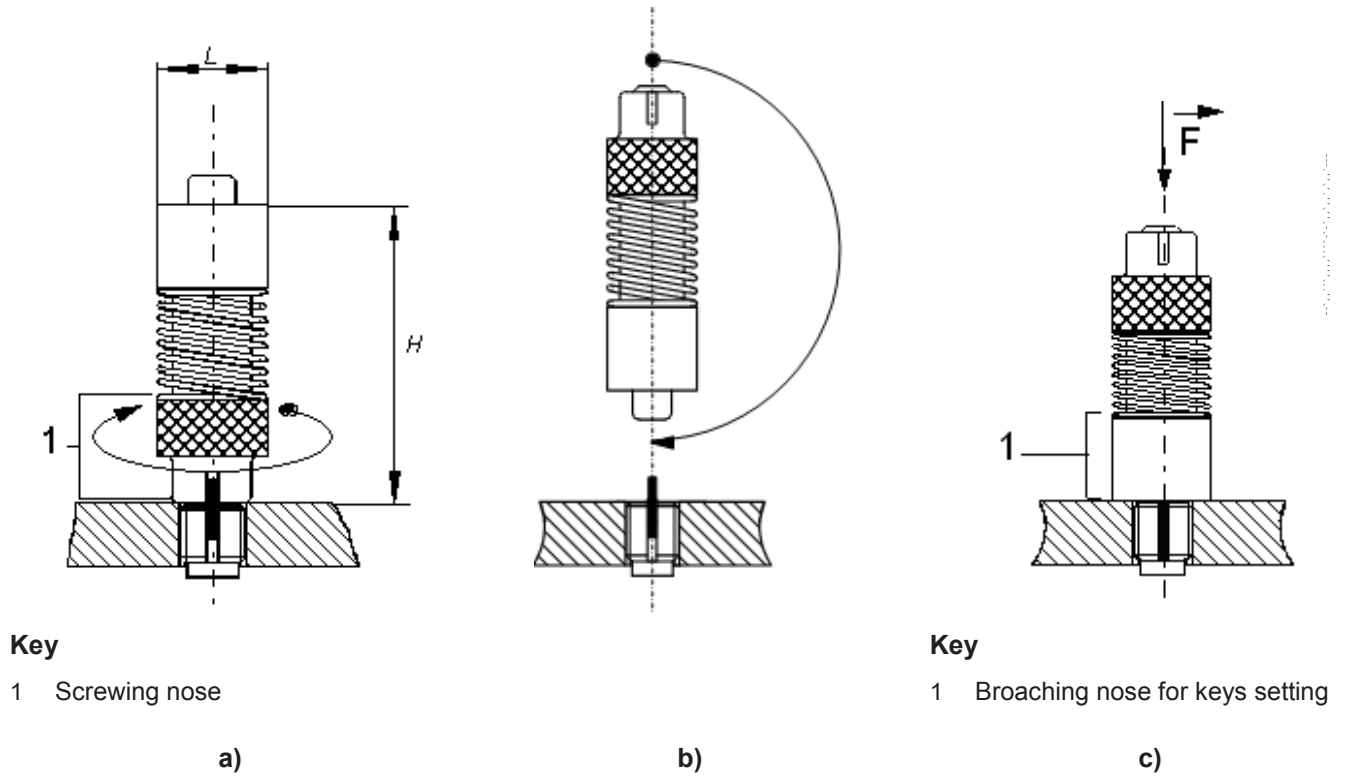


Figure 1

Table 4

Dimensions in millimetres

Insert external thread	H	$\varnothing L$
.312 5-18UNJC-3B	71	12,7
.375 0-16UNJC-3B		14,3
.437 5-16UNJ-3B		15,9
.500 0-16UNJ-3B		17,5
.562 5-16UNJ-3B		19,0
.625 0-16UNJ-3B		20,6
.687 5-16UNJ-3B		22,2
.750 0-16UNJF-3B		25,4


5.2.2 Procedure

- a) Lubricate the outer thread of the insert with the lubricant referenced on the assembly drawing.
Inserts installed in aluminium or magnesium alloy components shall be lightly smeared externally with a suitable compound to prevent galvanic corrosion if required on the assembly drawing.
- b) Fit into place and screw the insert by two turns into the component.
- c) Fit into place the screwing nose of the tool onto the keys, then screw the assembly into the threaded hole until the screwing nose mates the component surface as shown in Figure 1 a).
- d) Adjust the insert position within the X limits given in Figure 3.
- e) Turn the tool on the broaching nose side as showed in Figure 1 b).
- f) Apply a sufficient load in the direction indicated Figure 1c to broach the keys by stamping or by pressing on the tool. The keys are fitted in the proper position corresponding to Y dimension given in Figure 3.
- g) Remove the tool from the insert.
- h) Remove excess sealing compound or lubricant if any.

5.3 Air pressure installation

5.3.1 Installation tool

Figure 2 illustrates a tool for screwing, broaching and unscrewing assembled on an air pressure gun. The overall dimensions are given in Figure 2.

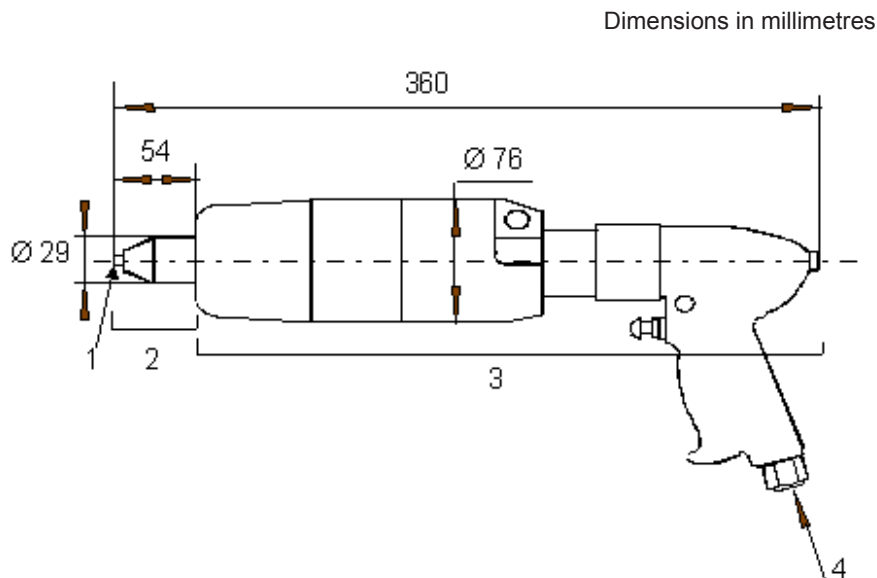

Key

- 1 Threaded mandrel
- 2 Interchangeable installation nose corresponding to the insert reference
- 3 Gun
- 4 600 kPa (6 bars) air pressure inlet

Figure 2

5.3.2 Procedure


The air pressure gun shall be previously adjusted in order to obtain the satisfactory installation of insert and of the keys as given in Figure 3.

- a) Lubricate the outer thread of the insert with the lubricant referenced on the assembly drawing.
Inserts installed in aluminium or magnesium alloy components shall be lightly smeared externally with a suitable compound to prevent galvanic corrosion if required on the assembly drawing.
- b) Screw the insert on to the threaded mandrel until it is fully seated on the installation nose.
- c) Using the tool, screw the insert into the tapped hole until positioned.
The screwing/broaching tool comes into contact with the surface of the component, when operating the air gun. The insert comes in position as shown in Figure 3 below the surface of the casing.
- d) Use the air gun in the percussion mode to broach the keys.
- e) Unscrewing is automatic to extract the tool from the crimped insert.
- f) Remove excess sealing compound or lubricant if any.

6 Checks of insert position and keys broaching

These checks shall be carried out with an inspection gauge common to all insert dimensions.

- Check dimensions X and Y which shall be in accordance with Figure 3.
- After broaching of keys, the component surface shall not show any distortion or cracks.

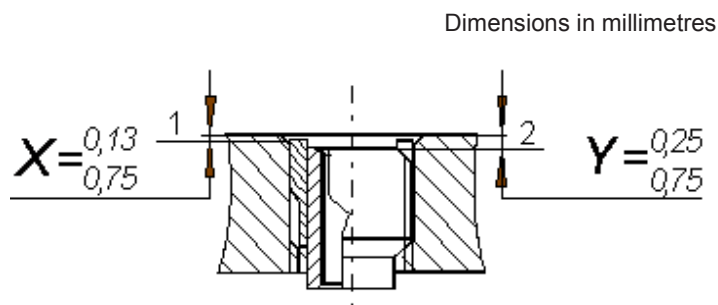

Key

- 1 Installation depth of the keys
- 2 Installation depth of the insert

Figure 3

7 Inspection of minimum self-locking torque

The minimum self-locking torque for the installed insert shall conform to Table 5 and shall be checked using a low third pitch diameter passivated stainless steel test bolt (see Table 5). Bolts shall not be lubricated. The test bolts shall be periodically checked for wear and damage, any bolt falling outside the tolerances in Table 5 shall not be used for this check.

The sample size/frequency for this check shall be at the responsibility of the installer.

Table 5

Associated bolt thread	Part number			Test bolt pitch diameter		Self-locking torque min. Nm
	Normal size insert	First repair size insert	Second repair size insert	max. mm	min. mm	
.190 0-32UNJF	EN 4673-004-3-0 EN 4673-005-3-0 EN 4673-006-3-0	EN 4673-004-3-1 EN 4673-005-3-1 EN 4673-006-3-1	EN 4673-004-3-2 EN 4673-005-3-2 EN 4673-006-3-2	0,168	0,1674	0,46
.250 0-28UNJF	EN 4673-004-4-0 EN 4673-005-4-0 EN 4673-006-4-0	EN 4673-004-4-1 EN 4673-005-4-1 EN 4673-006-4-1	EN 4673-004-4-2 EN 4673-005-4-2 EN 4673-006-4-2	0,225	0,2243	0,80
.312 5-24UNJF	EN 4673-004-5-0 EN 4673-005-5-0 EN 4673-006-5-0	EN 4673-004-5-1 EN 4673-005-5-1 EN 4673-006-5-1	EN 4673-004-5-2 EN 4673-005-5-2 EN 4673-006-5-2	0,284	0,2827	1,46
.375 0-24UNJF	EN 4673-004-6-0 EN 4673-005-6-0 EN 4673-006-6-0	EN 4673-004-6-1 EN 4673-005-6-1 EN 4673-006-6-1	EN 4673-004-6-2 EN 4673-005-6-2 EN 4673-006-6-2	0,346	0,3450	2,14
.437 5-20UNJF	EN 4673-004-7-0 EN 4673-005-7-0 EN 4673-006-7-0	EN 4673-004-7-1 EN 4673-005-7-1 EN 4673-006-7-1	EN 4673-004-7-2 EN 4673-005-7-2 EN 4673-006-7-2	0,403	0,4019	3,16
.500 0-20UNJF	EN 4673-004-8-0 EN 4673-005-8-0 EN 4673-006-8-0	EN 4673-004-8-1 EN 4673-005-8-1 EN 4673-006-8-1	EN 4673-004-8-2 EN 4673-005-8-2 EN 4673-006-8-2	0,465	0,4643	4,06


8 Insert replacement

8.1 Insert removal

When repairing, the self-broaching key inserts can be removed as follows:

- a) Drill using a diameter A drill to depth B as shown in Figure 4 and Table 6 or pilot spot facing cutter.

Material may also be ground or milled away locally in the key area as shown in Figure 4, so that keys can be removed.

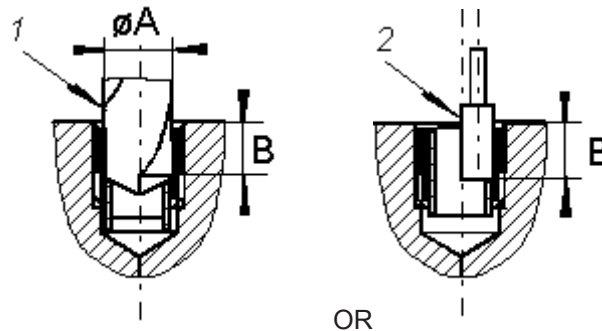

Key

- 1 Drill
- 2 Mill or grinder

Figure 4

- b) Deflect the keys inward to clear the tapped hole as shown in Figure 5.

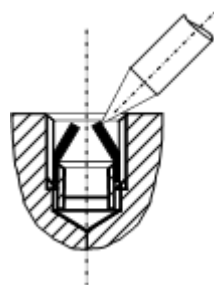


Figure 5

- c) Unscrew the insert with the extraction tool as shown in Figure 6.

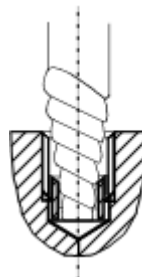


Figure 6

- d) After machining, remove the part fragments of the insert using the appropriate tool.

Table 6

Dimensions in millimetres

Tapped hole		<i>A</i>	<i>B</i>
reference	diameter	max.	max.
EN 4673-002-3-0	.312 5-18UNJC-3B	6,3	3,0
EN 4673-002-3-1 EN 4673-002-4-0	.375 0-16UNJC-3B	7,7	3,1
EN 4673-002-3-2 EN 4673-002-4-1 EN 4673-002-5-0	.437 5-16UNJ-3B	9,3	3,4
EN 4673-002-4-2 EN 4673-002-5-1 EN 4673-002-6-0	.500 0-16UNJ-3B	10,9	3,6
EN 4673-002-5-2 EN 4673-002-6-1 EN 4673-002-7-0	.562 5-16UNJ-3B	12,5	4,0
EN 4673-002-6-2 EN 4673-002-7-1 EN 4673-002-8-0	.625 0-16UNJ-3B	14,1	
EN 4673-002-7-2 EN 4673-002-8-1	.687 5-16UNJ-3B	15,7	4,2
EN 4673-002-8-2	.750 0-16UNJF-3B	17,3	4,5

8.2 Repair

8.2.1 General rules

After removal of the insert, check for cleanliness of tapped hole and check tapped hole dimensions using a threaded plug gauge. If correct and damage free, it is possible to install a new insert of same part number. Otherwise install a repair size insert (first or second repair as applicable) if the design makes it possible (see EN 4673-002) following 8.2.2.

When installing a new insert, the keys shall not be aligned with the housing of the previous insert keys. The dimensions specified in Figure 3 shall be met.

8.2.2 First and second repair size installation

First and second repair size part numbers and their installation and removal methods are given:

- Tables 2 and 3 respectively for first and second repair size part numbers selection.
- Figure 3 for the under-flushing of the insert and of the keys.
- See Clause 8 for the replacement of the insert.

www.bsigroup.com/standards

British Standards Institution (BSI)

BSI is the independent national body responsible for preparing British Standards and other standards-related publications, information and services.

It presents the UK view on standards in Europe and at the international level.

It is incorporated by Royal Charter.

Revisions

British Standards are updated by amendment or revision. Users of British Standards should make sure that they possess the latest amendments or editions.

It is the constant aim of BSI to improve the quality of our products and services. We would be grateful if anyone finding an inaccuracy or ambiguity while using this British Standard would inform the Secretary of the technical committee responsible, the identity of which can be found on the inside front cover.

Tel: +44 (0)20 8996 9001 Fax: +44 (0)20 8996 7001

BSI offers Members an individual updating service called PLUS which ensures that subscribers automatically receive the latest editions of standards.

Tel: +44 (0)20 8996 7669 Fax: +44 (0)20 8996 7001

Email: plus@bsigroup.com

Buying standards

You may buy PDF and hard copy versions of standards directly using a credit card from the BSI Shop on the website www.bsigroup.com/shop. In addition all orders for BSI, international and foreign standards publications can be addressed to BSI Customer Services.

Tel: +44 (0)20 8996 9001 Fax: +44 (0)20 8996 7001

Email: orders@bsigroup.com

In response to orders for international standards, it is BSI policy to supply the BSI implementation of those that have been published as British Standards, unless otherwise requested.

Information on standards

BSI provides a wide range of information on national, European and international standards through its Knowledge Centre.

Tel: +44 (0)20 8996 7004 Fax: +44 (0)20 8996 7005

Email: knowledgecentre@bsigroup.com

Various BSI electronic information services are also available which give details on all its products and services.

Tel: +44 (0)20 8996 7111 Fax: +44 (0)20 8996 7048

Email: info@bsigroup.com

BSI Subscribing Members are kept up to date with standards developments and receive substantial discounts on the purchase price of standards. For details of these and other benefits contact Membership Administration.

Tel: +44 (0)20 8996 7002 Fax: +44 (0)20 8996 7001

Email: membership@bsigroup.com

Information regarding online access to British Standards via British Standards Online can be found at www.bsigroup.com/BSOL

Further information about BSI is available on the BSI website at www.bsigroup.com/standards

Copyright

Copyright subsists in all BSI publications. BSI also holds the copyright, in the UK, of the publications of the international standardization bodies. Except as permitted under the Copyright, Designs and Patents Act 1988 no extract may be reproduced, stored in a retrieval system or transmitted in any form or by any means – electronic, photocopying, recording or otherwise – without prior written permission from BSI. This does not preclude the free use, in the course of implementing the standard of necessary details such as symbols, and size, type or grade designations. If these details are to be used for any other purpose than implementation then the prior written permission of BSI must be obtained. Details and advice can be obtained from the Copyright & Licensing Manager.

Tel: +44 (0)20 8996 7070

Email: copyright@bsigroup.com

BSI Group Headquarters

389 Chiswick High Road London W4 4AL UK

Tel +44 (0)20 8996 9001

Fax +44 (0)20 8996 7001

www.bsigroup.com/standards

raising standards worldwide™

Copyright British Standards Institution
Provided by IHS under license with BSI - Uncontrolled Copy
No reproduction or networking permitted without license from IHS

Not for Resale

