## BS ISO 16840-6:2015



# **BSI Standards Publication**

# Wheelchair seating

Part 6: Simulated use and determination of the changes in properties of seat cushions



BS ISO 16840-6:2015

#### National foreword

This British Standard is the UK implementation of ISO 16840-6:2015.

The UK participation in its preparation was entrusted to Technical Committee CH/173/1, Wheelchairs.

A list of organizations represented on this committee can be obtained on request to its secretary.

This publication does not purport to include all the necessary provisions of a contract. Users are responsible for its correct application.

© The British Standards Institution 2015. Published by BSI Standards Limited 2015

ISBN 978 0 580 82446 3

ICS 11.180.10

Compliance with a British Standard cannot confer immunity from legal obligations.

This British Standard was published under the authority of the Standards Policy and Strategy Committee on 30 September 2015.

Amendments/corrigenda issued since publication

Date Text affected

BS ISO 16840-6:2015

# INTERNATIONAL STANDARD

ISO 16840-6

First edition 2015-09-15

# Wheelchair seating —

## Part 6:

# Simulated use and determination of the changes in properties of seat cushions

Sièges de fauteuils roulants —

Partie 6: Simulation d'utilisation et détermination des changements de propriétés des coussins de sièges



BS ISO 16840-6:2015 **ISO 16840-6:2015(E)** 



## **COPYRIGHT PROTECTED DOCUMENT**

© ISO 2015, Published in Switzerland

All rights reserved. Unless otherwise specified, no part of this publication may be reproduced or utilized otherwise in any form or by any means, electronic or mechanical, including photocopying, or posting on the internet or an intranet, without prior written permission. Permission can be requested from either ISO at the address below or ISO's member body in the country of the requester.

ISO copyright office Ch. de Blandonnet 8 • CP 401 CH-1214 Vernier, Geneva, Switzerland Tel. +41 22 749 01 11 Fax +41 22 749 09 47 copyright@iso.org www.iso.org

Contents		
Fore	eword	vi
Intr	oduction	vii
1	Scope	1
2	Normative references	
3	Terms and definitions	
4	Symbols and abbreviated terms	
5	Apparatus for characterizing and ageing cushions	
3	5.1 Apparatus for characterizing cushions	
	5.2 Apparatus for aging cushions	
6	Test environment	7
7	Preparation and setup of cushion	7
8	Selection and order of testing	7
	8.1 Testing consists of three stages	
9	Envelopment	8
	9.1 Rationale	
	9.2 Test method and reporting	8
<b>10</b>	Column buckling	
	10.1 Rationale	
	10.2 Test method	
	10.4 Test report	
11	Heat and humidity	9
	11.1 Rationale	
	11.2 Test method	
	11.3 Method of calculation	
40	•	
12	Heated indenter compression set  12.1 Rationale	
	12.2 Test method	
	12.3 Method of calculation	
	12.4 Test report	11
13	Impact damping under normal conditions	
	13.1 Rationale	
	13.2 Test method	
14	Interface pressure measurement test (pressure mapping)  14.1 Rationale	
	14.1 Radonale	
	14.3 Method of calculation	
	14.4 Test report	
<b>15</b>	Lateral stiffness	13
	15.1 Rationale	
	15.2 Test method	
	15.3 Method of calculation	
1.0	•	
16	Leak 16.1 Rationale	
	16.2 Test method	11 14

# BS ISO 16840-6:2015 **ISO 16840-6:2015(E)**

	16.3	Test report	14
17	Load	ed contour depth and overload deflection	
	17.1	Rationale	
	17.2	Test method	
	17.3	Method of calculation	15
18	-	eresis test	
	18.1	Rationale	
	18.2	Test method	15
19	Slidir	ng resistance	
	19.1	Rationale	
	19.2	Test method	
	19.3	Method of calculation	
	19.4	Test report	
20		force deflection	
	20.1	Rationale	
	20.2 20.3	Test method	
		Method of calculation	
21	Stage	2: Simulated age testing	16
22	Accel	erated aging	17
	22.1	Rationale	
	22.2	Test method	
		22.2.1 70 °C accelerated aging procedure	17
		22.2.2 50 °C modified accelerated aging procedure (for cushions made with hydrogels or other materials not intended for high temperature exposure)	10
	22.3	Method of calculation	
	22.4	Test report	
23		erial soiling	
23	23.1	Rationale	
	23.2	Test method	
		23.2.1 Preparation of bacterial soiling broth	
		23.2.2 Bacterial exposure	
	23.3	Method of calculation	
	23.4	Test report	19
24	Cold	exposure	20
	24.1	Rationale	
	24.2	Test method	
	24.3	Method of calculation	
	24.4	Test report	
25		c loading at elevated temperature	
	25.1	Rationale	
	25.2 25.3	Test method	
	25.3 25.4	Method of calculation Test report	
0.6		•	
26		fection	
	26.1 26.2	Rationale Test method	
	۷۵.۷	26.2.1 Cover of cushion disinfection	
		26.2.2 Interior cushion disinfection	
27	Eggs		
27	27.1	ı <b>l soiling with cyclic loading</b> Rationale	
	27.1	Test method	
	27.3	Method of calculation	
	27.4	Test report	

28 Hea	t and humidity	22
28.1		
28.2	Part method	23
28.3		
28.4	Fest report	23
29 Lau	ndering	23
29.1		
29.2		
	29.2.1 Cover of cushion laundering	
	29.2.2 Interior cushion laundering	
29.3		
29.4	Fest report	23
30 Urii	nary soiling with cyclic loading	24
30.1		
30.2	Part method	24
30.3	B Method of calculation	24
30.4	Fest report	24
31 UV	and ozone exposure	24
31.1		
31.2	Part method	24
31.3	1100100 01 001001001	
31.4	Fest report	25
32 Stag	ge 3: Post-aged cushion testing	25
33 Met	hod of calculations	25
34 Tes	t report	26
Annex A (i	nformative) Influences that drive changes in seat cushion performance	27
Bibliograp	hy	28

## Foreword

ISO (the International Organization for Standardization) is a worldwide federation of national standards bodies (ISO member bodies). The work of preparing International Standards is normally carried out through ISO technical committees. Each member body interested in a subject for which a technical committee has been established has the right to be represented on that committee. International organizations, governmental and non-governmental, in liaison with ISO, also take part in the work. ISO collaborates closely with the International Electrotechnical Commission (IEC) on all matters of electrotechnical standardization.

The procedures used to develop this document and those intended for its further maintenance are described in the ISO/IEC Directives, Part 1. In particular the different approval criteria needed for the different types of ISO documents should be noted. This document was drafted in accordance with the editorial rules of the ISO/IEC Directives, Part 2 (see <a href="www.iso.org/directives">www.iso.org/directives</a>).

Attention is drawn to the possibility that some of the elements of this document may be the subject of patent rights. ISO shall not be held responsible for identifying any or all such patent rights. Details of any patent rights identified during the development of the document will be in the Introduction and/or on the ISO list of patent declarations received (see <a href="www.iso.org/patents">www.iso.org/patents</a>).

Any trade name used in this document is information given for the convenience of users and does not constitute an endorsement.

For an explanation on the meaning of ISO specific terms and expressions related to conformity assessment, as well as information about ISO's adherence to the WTO principles in the Technical Barriers to Trade (TBT) see the following URL: Foreword - Supplementary information

The committee responsible for this document is ISO/TC 173, *Assistive products for persons with disability*, Subcommittee SC 1, *Wheelchairs*.

ISO 16840 consists of the following parts, under the general title *Wheelchair seating*:

- Part 1: Vocabulary, reference axis convention and measures for body segments, posture and postural support surfaces
- Part 2: Determination of physical and mechanical characteristics of devices intended to manage tissue integrity — Seat cushions
- Part 3: Determination of static, impact and repetitive load strengths for postural support devices
- Part 4: Seating systems for use in motor vehicles
- Part 6: Simulated use and determination of the changes in properties of seat cushions
- Part 9: Clinical interface pressure mapping guidelines for seating [Technical Report]
- Part 10: Resistance to ignition of non-integrated seat and back support cushions Part 10: Requirements and test methods
- Part 11: Determination of perspiration dissipation characteristics of seat cushions intended to manage tissue integrity [Technical Specification]
- Part 12: Apparatus and method for cushion envelopment testing [Technical Specification]

Future parts dealing with methods for determining heat and water vapour characteristics and clinical guidelines for the measurement of postural support surfaces and body segments are planned.

## Introduction

Wheelchair seat cushions provide improved support and injury prevention for the user. They are used by those with a variety of needs and by those with varying degrees of disability. Wheelchair seat cushions are prescribed based on their ability to perform under a range of circumstances, from intermittent use to robust sports use, and use by those with regular incontinence. Each application presents different conditions that can change the performance of the cushion and can expose the user to hidden risks. Standards for the evaluation of wheelchair cushions under a wide range of conditions are paramount.

This part of ISO 16840 describes test methods that characterize the changes in physical and mechanical properties of seat cushions based on their age and use. The standard offers a suite of test methods, not all of which will be appropriate for all cushions, and therefore, the manufacturer is to determine which are appropriate for their cushion construction and use. It is designed to provide a close approximation of the changes that have been observed to occur over time. The protocol consists of performing tests to characterize the properties of a new cushion, subjecting the cushion to multiple simulated aging processes, then re-testing the cushion proprieties. Changes that occur are reported.

Prior to following the protocol, the manufacturer is to recommend the environment of use of the cushion, the anticipated failure modes of the cushion, and the cushion characterization tests appropriate for their product. Just as not all tests are appropriate for all cushions, the exposures within the tests might not be appropriate for all cushions. Tests may be modified or eliminated based on suitability for materials, architecture, or use conditions, i.e. a rotational component could be added to the cyclic loading, generating additional wear. For some materials, 70 °C can change the failure mode from typical to temperature-based, depending on the material properties of this cushion. In such a case, 50 °C may be selected to accelerate the aging of the cushion over a longer period of time to simulate a failure more typical of aging. Any deviations are to be documented.

These tests are not appropriate for ranking or scoring cushions or for directly matching these characteristics with the requirements of individual users. While the results of these tests can aid the clinician in providing care to the patient through selection of surface characteristics that will, in their professional judgment, aid the care, treatment, or recovery of the patient, these tests are not to be interpreted as prescriptive in and of themselves. The link to clinical efficacy, although implied, has not been validated. It is intended that this part of ISO 16840 will evolve when clinical relevance is confirmed. Further parts of the ISO 16840 series will describe test methods for characterizing other surface characteristics that can further aid the clinician in the care and treatment of patients.

## Wheelchair seating —

## Part 6:

# Simulated use and determination of the changes in properties of seat cushions

## 1 Scope

This part of ISO 16840 specifies apparatus, test methods, and disclosure requirements for generating aging effects in a seat cushion that reproduce those seen in use. It also provides methods of determining changes in the physical and mechanical properties of seat cushions based on their age and use. This part of ISO 16840 provides a set of tests that simulate wear and tear, which can be useful to validate warranty claims and to provide information about product, life, and performance limitations associated with product use.

## 2 Normative references

The following documents, in whole or in part, are normatively referenced in this document and are indispensable for its application. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments) applies.

ISO 554, Standard atmospheres for conditioning and/or testing — Specifications

ISO 4892-3, Plastics — Methods of exposure to laboratory light sources — Part 3: Fluorescent UV lamps

ISO 9073-8, Textiles — Test methods for nonwovens — Part 8: Determination of liquid strike-through time (simulated urine)

ISO 16840-2, Wheelchair seating — Part 2: Determination of physical and mechanical characteristics of devices intended to manage tissue integrity — Seat cushions

ASTM D5672-09, Standard Test Method for Testing Flexible Cellular Materials Measurement of Indentation Force Deflection Using a 25-mm (1-in.) Deflection Technique

AAMI TIR 12, Designing, testing, and labeling reusable medical devices for reprocessing in health care facilities: A guide for medical device manufacturers

ASTM D395-03, Standard Test Methods for Rubber Property — Compression Set

ASTM D4265-98, Standard Guide for Evaluating Stain Removal Performance in Home Laundering

ASTM F1980-2, Standard Guide for Accelerated Aging of Sterile Medical Device Packages

ISO/IEC Guide 98-3, Uncertainty of measurement — Part 3: Guide to the expression of uncertainty in measurement (GUM:1995)

RESNA SS-1:2011 Section 3, Standard Protocol for Measuring Heat and Water Vapor Dissipation Characteristics of Full Body Support Surfaces — Body Analog Method

## 3 Terms and definitions

For the purposes of this document, the terms and definitions given in ISO 16840-2 and the following apply.

# BS ISO 16840-6:2015 **ISO 16840-6:2015(E)**

#### 3.1

## accelerated aging

procedure to simulate normal usage by subjecting a product to stresses that are more severe or more frequent than normal environmental or operational stresses

## 3.2

#### **ballooning**

pillow effect created when air is trapped within a shrinking bag

#### 3.3

## bacterial enzymatic action failure

failure due to bacterial enzymatic action

Note 1 to entry: See *failure* (3.17).

#### 3.4

#### broken seams

separation of a welded or sewn seam or the material immediately adjacent to seam

Note 1 to entry: May be a cosmetic change or a failure.

#### 3.5

## buckling

collapsing of the material due to pressure or stress

#### 3.6

## bottoming

while applying a compressive load to a cushion, the point where additional load causes the slope of the force deflection curve to approach vertical (force plotted on the *y* axis, deflection on the *x*)

## 3.7

#### creep

tendency of a solid material to slowly move or permanently deform under the influence of mechanical stress and/or elevated temperature

## 3.8

## colour change

change of colour (lightness, hue, chroma, or any combination), visibly discernible by comparing the test specimen with a corresponding untested specimen from the same batch

## 3.9

#### column buckling

elastic yield or permanent yield of components with a stiff construction

#### 3.10

#### compression set

amount of deformation (expressed as a percentage of original dimensions) which a material retains after compressive stress is released (per ASTM D395 B)

#### 3.11

## cosmetic change

change that affects appearance without affecting performance

## 3.12

## cyclic loading

repeated application of degradation agents and stress over a period of time at a set frequency

## 3.13

#### disinfection

treatment to remove or to significantly reduce potentially harmful organisms

## 3.14

#### exposures

subjection of the subject material to the elements of the test

#### 3.15

## permanent set

changes from the original dimensions that remain after the removal of stress

## 3.16

## extreme temperature exposure

highest and lowest temperature values attained during a given time interval

## 3.17

#### failure

change in properties or a loss of integrity that inhibits the ability of a cushion to perform as intended

#### 3.18

## fatigue

change in stiffness, loss of mechanical strength, and/or ruptures based on repeated cyclic deformation

#### 3.19

## foam disintegration

process by which foam is reduced to fragments or particles

#### 3.20

## fractures

propagation of pre-existing cracks based on stress

#### 3.21

## gross leaks

leaks that compromise the function of a material

## 3.22

## hysteresis

measure of the energy lost to the cushion during a cycle of loading and unloading

Note 1 to entry: A lag in response exhibited by a material reacting to changes in force.

## 3.23

## impact damping

characterization of a material's ability to absorb vibration and impact according to ISO 16840-2

## 3.24

## laundering

washing or other process to cleanse materials of soil

## 3.25

#### leak

hole, tear, or break in a surface that allows the release of inner contents over time

## 3.26

## load deflection

degree to which a structural element deviates under a load

#### 3.27

## load deflection and hysteresis

degree to which a structural element deviates under a load and the degree to which the deviation is delayed, according to ISO 16840-2

#### 3.28

## mechanical degradation

deterioration of materials (particularly polymeric materials) by swelling, dissolution, and chain scission

# BS ISO 16840-6:2015 **ISO 16840-6:2015(E)**

## 3.29

#### observed failure

mode by which a failure is observed to occur

EXAMPLE Ruptured bladders, broken or separated seams, gross leaks, fractures, cracking, disintegration, and extreme permanent set.

#### 3.30

#### odour

detectable smell, whether fragrant or offensive

Note 1 to entry: Odour can be divided into the following categories according to intensity: "0" = no odour; "1" = very weak (odour threshold); "2" = weak; "3" = distinct; "4" = strong; "5" = very strong; "6" = intolerable.

#### 3.31

## overload deflection

additional deflection imparted by a 33 % overload

#### 3.32

## ozone exposure

exposure of materials to ozone by black lights

#### 3.33

#### pressure mapping

characterization and comparison of the magnitude and distribution of forces when a surface is loaded according to ISO 16840-2 and ISO TIR WG 11

#### 3.34

## ruptured bladders

hole, tear, or break in a surface that allows the release of inner contents immediately

#### 3.35

#### separated seams

see broken seams (3.4)

#### 3.36

## shelf life

length of time a product can be stored without deterioration

## 3.37

## sliding resistance

characterization of the interaction between the skin and the support surface while force is applied laterally according to ISO 16840-2

#### 3.38

#### stress crack

## ISO 472

external or internal crack in a material caused by stresses less than its short-time mechanical strength

#### 3.39

## surface abrasion

loss of material from a surface due to frictional forces

Note 1 to entry: The result of two surfaces being rubbed together.

#### 3.40

## **UV** exposure

exposure of a material to ultraviolet light using black lights

## 4 Symbols and abbreviated terms

IFD indentation force deflection

IPSA interface pressure sensor array

RCLI rigid cushion loading indenter

## 5 Apparatus for characterizing and ageing cushions

To avoid duplication, the apparatus for tests normalized by reference here are described only in the referenced standard.

## 5.1 Apparatus for characterizing cushions

The following apparatus are associated with the related test in this part of ISO 16840.

## 5.1.1 Column buckling:

- a) Apparatus constructed to apply a load and displacement to a 13 mm diameter glass rod indenter.
- b) A 13 mm diameter glass rod, ground to a sphere on one end and mounted in a collet or other device to allow the application of force and displacement to the rod as an indenter.
- c) Mechanism to record both displacement and force applied to the glass rod.

## 5.1.2 Heat and humidity:

A system equivalent to RESNA SS-1:2011, Section 3 (or ISO 16840-7 when published).

## **5.1.3** Heated indenter compression set:

Heated RCLI or chamber heated to 70 °C  $\pm$  2 °C that can maintain a cushion under compression testing at the nominal 70 °C. An indenter RCLI shall be as described in ISO 16840-2, Annex A and able to apply a constant load to the cushion over the period of the test.

## 5.1.4 Accelerated aging apparatus or cyclic loader apparatus:

A mechanism by which a repetitive load can be applied to a cushion by an RCLI (ISO 16840-2, Annex A).

The cyclic loader shall include a means to heat the cushion and indenter to either 50 °C or 70 °C, as required by the cushion material of construction.

## 5.1.5 Impact damping rigid cushion loading indenter (IDRCLI):

A means of loading a cushion using an RCLI with a uniformly distributed mass of 500 N  $\pm$  10 N with an accelerometer attached to the reference plane to measure the deceleration of the indenter as it suddenly loads the cushion, as specified in ISO 16840-2, 5.3.

## **5.1.6** Interface pressure measurement:

A means of applying a 500 N load to a cushion using a RCLI as defined in ISO 16840-2 and an interface pressure sensing array (pressure map). Ensure robust methods are used to reduce the variability inherent in pressure mapping.

## 5.1.7 Lateral and forward stiffness rig:

A means to support an RCLI at the end of a rigid shaft, allowing the RCLI to move in the lateral and forward direction on the seat cushion in one plane as described in ISO 16840-2, C.1.1 and Annex C.

## **5.1.8** Leak detection apparatus:

Apparatus capable of detecting the escape of a cushion fill material; this might include a water immersion tank to detect escaping bubbles, a magnifying glass, stereo microscope, or other instrument capable of inspecting seals under magnification for escaping cushion fill material.

While a microscope is not required, it can be useful in some situations.

## 5.1.9 Loaded contour jig (LCJ) (for loaded contour depth and overload deflection):

A means of supporting an RCLI at the end of a rigid shaft allowing the RCLI to move in the lateral and forward directions on the seat cushion in one plane as described in ISO 16840-2.

## 5.1.10 Rigid cushion loading indenter (RCLI) (for load deflection and hysteresis):

An RCLI as described in ISO 16840-2, Annex A.

#### **5.1.11** Force deflection measurement:

Based on 10 mm force deflection (see ASTM D5672-09).

## 5.2 Apparatus for aging cushions

## 5.2.1 Accelerated aging chamber:

Enclosed chamber with minimal air flow to eliminate thermal gradients and means for controlling and maintaining a specific temperature within ±2 °C, as referenced in ASTM F1980-02.

## **5.2.2** Bacterial soiling:

Cyclic loader (described below) and incubation chamber. Polyimide bags capable of containing the cushion.

## 5.2.3 Cyclic loading at elevated temperature — Cyclic loading jig:

Pneumatic cyclic loading fixture with compressive loading that contains a loading indenter as specified in ISO 16840-2, with high accuracy air regulator and high resolution test gauge, capable of repeatedly applying a load of  $(500 \pm 10)$  N to the material, with a cyclic rate of 20 to 40 cycles per minute.

## 5.2.4 Cold exposure apparatus:

Commercial chest freezer capable of maintaining a temperature of -23 °C.

Cold constriction of polymers is shown to drive out plasticizers and reduce flexibility of the polymer after it is rewarmed.

#### 5.2.5 Means for disinfection:

Apparatus to employ in performing the disinfection process as described by the cushion manufacturer. In the absence of such instructions, a basin large enough to receive the cushion and provide for full immersion with a mechanism to maintain submersion of the cushion (weights, wire rack, bars, etc.) during the disinfection period.

## 5.2.6 Faecal soiling with cyclic loading:

Polyimide bag capable of containing the cushion soiled with artificial faecal soil while being aged in the cyclic loader or accelerated aging chamber.

## **5.2.7** Heat and humidity: **5.1.2**

## 5.2.8 Laundering:

Washing machine capable of performing domestic level agitation or tumble style wash as described in ASTM D4265-98. Consideration shall be given to the laundry composition (i.e. washing separate or with other laundry) on the outcome of this test.

## 5.2.9 Urinary soiling with cyclic loading:

Cyclic loading apparatus (described above) and a polyimide bag capable of containing the cushion.

## 5.2.10 UV light and ozone exposure apparatus:

The design of the exposure chamber might vary but it shall meet the following criteria:

- a) construction from inert material;
- b) closed chamber;
- c) temperature control;
- d) fluorescent UV lamp with emission in the ultraviolet region of the spectrum (below 400 nanometers) that provides at least 80 % of the total light output with uniform irradiance.

## 6 Test environment

An environment with ambient temperature of 23 °C  $\pm$  2 °C and relative humidity of 50 %  $\pm$  5 % as specified in ISO 554. This part of ISO 16840 does not attempt to address all safety concerns. Always utilize appropriate safety equipment and conditions.

## 7 Preparation and setup of cushion

Obtain an unused sample seat cushion for testing. If a cover is provided, ensure that it is fitted to the cushion in the orientation specified by the manufacturer.

Precondition the seat cushion prior to each test as specified in ISO 16840-2.

## 8 Selection and order of testing

## 8.1 Testing consists of three stages

- Stage 1 Pre-aged cushion testing includes all tests in <u>Clauses 9</u> to <u>20</u>. These tests may be conducted in any order. Refer to <u>Table 1</u> for a list of tests.
- Stage 2 Simulated age testing is based on the tests in <u>Clauses 22</u> to <u>31</u>. Refer to <u>Clause 21</u> and <u>Table 2</u> for the specific tests and order to be applied.
- **Stage 3** Post-aged cushion testing (repeat Stage 1 tests, <u>Clauses 9</u> to <u>20</u>).

Table 1 — Stage 1 List of tests

Test Name	Clause
Envelopment	9
Column buckling	10
Heat and humidity	11
Heated indenter compression set	12
Impact damping under normal conditions	13
Interface pressure measurement (pressure mapping)	14
Lateral stiffness	15
Leak	16
Loaded contour depth and overload deflection	17
Hysteresis Test	18
Sliding resistance	19
10 % force deflection	20

NOTE The tests listed in <u>Table 1</u> have varying levels of validation. Some come from published standards (heat and humidity, heated indenter compression set, interface pressure measurement, loaded contour depth, and 10 % force deflection), others from widely utilized industry protocols (leak), some from peer reviewed research (envelopment, impact damping), with the remainder under multilab validation.

## 9 Envelopment

## 9.1 Rationale

This test characterizes and compares wheelchair cushions. The test applies two loads (433 N and 520 N) to each of two bulbous indenters (22 cm and 25,5 cm bulbous indenter) to the cushion and the pressure relief magnitude, immersion, and pressure distribution are examined through the use of pressure sensors mounted in a bulbous indenter loaded onto the cushion surface.

### 9.2 Test method and reporting

Follow the method and reporting outlined in ISO/TS 16840-12.

## 10 Column buckling

## 10.1 Rationale

This clause does not apply to cushions that comprise small free elements within a larger containment cover.

The use of columnar structures in a cushioning device, usually air or fluid filled, creates a naturally stiff element that typically cushions due to buckling or elastic deformation of the column. When buckling occurs, the column's ability to support load is drastically reduced. This process can be impacted by the structure or shape, the material of construction, or the material filling the column (air or fluid) and can be dramatically affected by the aging of the material. Before and after aging, this test is designed to characterize the buckling force, independent of the fill material.

Cushions that use membranes of material to contain air or fluids tend to harden with age; this test is sensitive in detection of that hardening. Pressure mapping and instrumented indenter testing are not as sensitive in the detection of this property. This test is applicable to any cushion technology that contains air or fluids, whether the structure consists of single or multiple cells or bladders.

#### 10.2 Test method

- a) Cut column structure from test cushion and place the individual cushion column so that the bottom of the cushion column is completely open and free standing.
- b) Measure and record the height of the cushion column from the highest point to the lowest point.
- c) Place the cushion column on the test table in the same orientation as when in use.
- d) Apply a vertical load adequate to compress the cushion column 10 mm (±0,5 mm) at the apex of the sample. Record, at 10 Hz or faster, the force applied throughout the 10 mm deformation at 30 mm/min.
- e) Release the load.
- f) Record a "No Buckling" status if the column returned to full height within 5 min or record a "Buckling" status if it did not return to the full height.
- g) Measure and record the height of the cushion column.
- h) Repeat steps a) to g) two more times to generate three total data sets.

## 10.3 Method of calculation

Calculate the percentage change in height of the column.

## **10.4 Test report**

- a) Report individual buckling percentage.
- b) Report median force.
- c) Report all "No Buckling" and "Buckling".
- d) Report any deviations from the method.

## 11 Heat and humidity

## 11.1 Rationale

The purpose of this test is to describe the heat and water vapour retention/dispersion characteristics of the test cushion. A heated indenter provides the weight, moisture, and heat for this test. This test characterizes the cushion performance in interface temperature and interface relative humidity.


#### 11.2 Test method

When ISO 16840-7 is published, follow the test method described in that standard.

Until ISO 16840-7 is published, follow the method outlined in RESNA SS-1:2011, Section 3 with the following modifications to allow the test to be applicable to cushions:

- a) Place the test cushion on a flat, horizontal surface;
- b) Place five temperature/humidity sensors on/in the indenter as shown in Figure 1. One sensor is placed inside the indenter between the heated tank and the clear plexiglass indenter. Other sensors are placed on the outside of the indenter in the machined slots as indicated. Sensors are set to gather data (temperature and relative humidity) once every 30 s.

- c) Place the indenter on the cushion with base points located 13 cm (±2 cm) from the rear edge of the cushion, unless the contours of the cushion require different positioning.
- d) For this method, substitute 500 N ( $\pm 10$  N) for the vertical force.

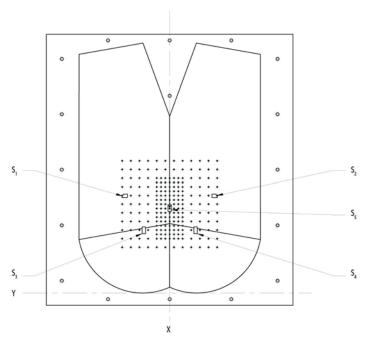

Sensor Number	X <sub>loc</sub> (mm)	Y <sub>loc</sub> (mm)	Sensor location by rows and columns of holes (from top left corner)
$S_1$	-70	200	Row 5, Column 1,5
$S_2$	70	200	Row 5, Column 11,5
$S_3$	-55	130	Row 9, Column 3,5
S <sub>4</sub>	55	130	Row 9, Column 9,5
S <sub>5</sub>	0	175	Row 6,5, Column 6,5

NOTE All distances to have a tolerance of ±2,5 mm.

Figure 1 — Placement of sensors on the heated indenter

## 11.3 Method of calculation

Report the average temperature and humidity of three independent trials.

## 11.4 Test report

- a) Report the values for temperature and humidity for each sensor at 0,5 h, 1,0 h, 2,0 h, and 3,0 h.
- b) Plot a graph of temperature and humidity values vs. time for each sensor.
- c) Report any deviations from the method.

## 12 Heated indenter compression set

## 12.1 Rationale

Elastomeric material held under a compressive load might take a compression set and when the load is released, it will not return to the original uncompressed dimension. This process is accelerated by the presence of heat.

Temperature shall be selected based on suitability for the product being tested, as advised by the product manufacturer. In some cases,  $70\,^{\circ}\text{C}$  is too hot and  $50\,^{\circ}\text{C}$  would be more suitable. In other cases,  $70\,^{\circ}\text{C}$  is preferred due to the accelerated exposure advantage.

NOTE In collapsing foam, the loss of cellular structure and trapped air will cause the foam to conduct more heat than new foam without compression set, making this test desirable in demonstrating the change that occurs in a cushion as it ages in thermal performance.

#### 12.2 Test method

Follow the test method described in ASTM D395, with the following modifications appropriate to wheelchair cushions:

- a) Measure the cushion height at the location loaded by the base points of the heated indenter [lowest two points which represent the ischial tuberosities of a pelvis (see ISO 16840-2)];
- b) Indenter is heated to 50 °C to 70 °C and allowed to equilibrate at this temperature for 60 min prior to use;
  - NOTE The test method also allows for use of ambient 50 °C test environment in lieu of the indenter (i.e. a test oven or chamber).
- c) Position the indenter on the test cushion with the base points of the indenter 125 mm  $\pm$  10 mm forward of the rear edge of the cushion;
- d) Adjust according to manufacturer's instructions, if adjustable;
- e) Load the indenter to 500 N;
- f) Allow the cushion and the heated indenter to remain loaded and undisturbed for 48 h;
- g) Unload the cushion and allow it to recover, undisturbed, for 5 min;
- h) Measure the cushion height at the base points.

## 12.3 Method of calculation

Subtract the end of test height from the beginning height and divide the result by the beginning height giving the percent compression set.

## 12.4 Test report

- a) Report the percent compression set as calculated above.
- b) Report any deviations from the method.

## 13 Impact damping under normal conditions

#### 13.1 Rationale

This test identifies the characteristics of a wheelchair cushion that reduce impact loading of tissues and help to maintain postural stability. The cushion's ability to absorb vibration and impact decreases peak pressures associated with impact loading, such as rolling off a curb or other obstacle. Impact damping is related to hysteresis (see <u>Clause 18</u>).

## 13.2 Test method

- a) Perform testing and calculations according to ISO 16840-2.
- b) Report any deviations from the method.

## 14 Interface pressure measurement test (pressure mapping)

#### 14.1 Rationale

Interface pressure measurements (pressure mapping) characterize the magnitude and distribution of forces when a cushion is loaded. Pressure mapping is being presented here as an option due to its ubiquitous availability.

## 14.2 Test method

- a) Calibrate the IPSA device as per manufacturer's instructions.
- b) Insert the cushion underneath the RCLI.
- c) Position the cushion so that the sides are centred within the test fixture. The base points of the RCLI shall be 125 mm ± 10 mm from the rear edge of the cushion.
- d) Place the calibrated IPSA device on top of the cushion, symmetrically of the midline of the RCLI, so that the rear sensor row is located against the rear of the cushion.
- e) Select IPSA instrumentation options so that
  - 1) no averaging of sensor outputs is performed, and
  - 2) hysteresis and creep correction algorithms are activated.
- f) Activate the IPSA instrumentation to sample at least one pressure sensor array data set per second.
- g) Apply 500 N  $\pm$  10 N vertical load to the cushion for 60 s  $\pm$  2 s.
- h) Record the pressure values produced by the pressure sensor array for the frame corresponding to the 60 s of loading.
- i) Release the load.
- j) Reset the cushion after each test by flattening or kneading.
- k) Repeat c) to j) a total of five times.

## 14.3 Method of calculation

**14.3.1** The base point zones are squares around each base point, 110 mm wide by 110 mm deep ( $12 100 \text{ cm}^2 \text{ each}$ ), each centred 130 mm forward of the rear of the cushion, and 55 mm lateral to the centreline. Identify the highest pressure area produced by the IPSA device in these zones.

- **14.3.2** The central rear zone is the area posterior to the base point zones.
- **14.3.3** Calculate the peak pressure index for the right and left base point zones by averaging the highest pressure value with the four sensor readings at the corners surrounding the peak (average of five values).

## **14.3.4** Calculate the following:

- a) Total force: The sum of the pressure readings multiplied by the sensing area of the pressure mapping system. The five trial mean is calculated for this value and is expressed in Newtons;
  - NOTE Check that the total force is within  $\pm 10$  % of the force applied to the seat cushion by the indenter. If it is not within  $\pm 10$  %, the test results are not valid.
- b) Percent total force: The total force in each zone divided by the total force for the whole seat cushion. This is calculated for three zones: the left base point zone, the right base point zone, and the central rear zone. The five trial mean is calculated for each of these three values;
- c) Dispersion index: The sum of the pressure readings in the base point zones and divided by the sum of all pressure readings expressed as a percentage. The five trial mean is calculated for this value;
- d) Contact area: The area of a pressure map of a cushion where the IPSA sensors display values of 5 mmHg or greater. The mean of this value from five trials is calculated;

$$C = A \times N_{\geq 5mmHg} \tag{1}$$

where

C is the contact area, in mm<sup>2</sup>;

A is the area per sensor, in mm<sup>2</sup>;

 $N_{\geq 5mmHg}$  is the number of sensors displaying pressure readings 5 mmHg or greater.

## 14.4 Test report

- a) Report the results of the calculations in <u>14.3.4</u>.
- b) Report any deviations from the method.

## 15 Lateral stiffness

## 15.1 Rationale

Measurements of lateral or forward stiffness characterize the interaction between the cushion and the skin following slight perturbations in the horizontal forces at the interface between the seat cushion and the buttocks. The cushion's ability to deform in response to these horizontal forces from slight body movements is based upon the theory that skin integrity is adversely affected by high shear strain. Lateral and forward stiffness can affect tissue integrity even if the pelvis does not move. A cushion that allows the soft tissue to move and relax without shear stress promotes integrity. However, stability could be reduced if the horizontal stiffness is decreased. Therefore, a cushion with high horizontal stiffness will be more stable but will impart more deformation and shearing to tissue with slight perturbations. A low horizontal stiffness cushion will not impart as much deformation and shearing but might be less stable for the user.

## 15.2 Test method

Perform testing as outlined in ISO 16840-2, Annex C.

## 15.3 Method of calculation

Determine the average force  $(F_{60})$  at 60 s using the following:

$$\bar{X} F_{60} = \left( \frac{\sum (F_{60 \# 1}, F_{60 \# 2}, F_{60 \# 3})}{\text{number of tests}} \right)$$
 (2)

## 15.4 Test report

- a) Report the average force calculated in 15.3.
- b) Report any deviations from the method.

## 16 Leak

## 16.1 Rationale

Leaks that occur due to aging shall be functionally repairable according to manufacturer's instructions.

## 16.2 Test method

Air-containing cushions perform the following:

- a) Over-inflate the cushion to locate pinholes or fractures that could leak;
- b) If necessary, immerse the cushion in water to locate the leak(s);
- c) Mark the leak(s);
- d) Deflate the cushion and allow to dry thoroughly;
- e) Clean and dry the area around the leak(s);
- f) Apply self-adhesive patch(es), making sure there is a good seal.

Cushions containing fill materials other than air shall perform testing according to manufacturer's instructions.

## 16.3 Test report

- a) Report location of leak.
- b) Report total number of leaks found, number repaired, and number unrepairable.
- c) Report any deviations from the method.

## 17 Loaded contour depth and overload deflection

## 17.1 Rationale

The ability of a cushion to maintain tissue integrity relates to its ability to envelop the pelvis. It is also important for the user to maintain a margin of safety in cushioning effect before an overload condition is experienced. Certain functional movements such as leaning and reaching effectively overload an aspect of the cushion. These events might exceed the margin of safety. The overload test measures the amount of deflection resulting from an increase in load of 33 % over the loaded test. A cushion that has been loaded beyond the margin of safety is identified when an increase in load does not produce a commensurate increase in deflection that is more than 5 mm.

This test characterizes the following cushion capabilities:

- a) the ability to contour, taking into account the initial contour and contouring produced by loading;
- b) the ability of the cushion to withstand overloading conditions.

#### 17.2 Test method

Perform testing according to ISO 16840-2.

## 17.3 Method of calculation

- a) Perform calculation and reporting according to ISO 16840-2.
- b) Report any deviations from the method.

## 18 Hysteresis test

## 18.1 Rationale

The hysteresis test provides information about the hysteresis characteristics of a seat cushion. Hysteresis is a measure of the energy lost to the cushion during a cycle of loading and unloading. Hysteresis is often related to impact damping (Clause 13). Cushions with larger hysteresis values will tend to absorb energy when used on rough surfaces or when dropping down steps, rather than transfer the impact energy to the user's tissues.

## 18.2 Test method

- a) Perform testing, calculations, and reporting as specified in ISO 16840-2.
- b) Report any deviations from the method.

## 19 Sliding resistance

## 19.1 Rationale

The sliding resistance test reflects the surface and bulk characteristics of the wheelchair cushion. Sliding resistance assists a user's ability to maintain an upright posture. A low sliding resistance enhances the user's ability to slide out of the cushion for transfer. The forces of gravity and the backrest might combine to nudge a person forward and out of the chair. This sliding tendency can have detrimental effects on both function and pressure distribution. Quantifying the sliding resistance of a cushion helps to define how the cushion performs in these respects. Sliding resistance is related to the frictional characteristics of the cushion.

#### 19.2 Test method

Perform testing as outlined in ISO 16840-2, C.3.

## 19.3 Method of calculation

Determine the average peak force (Fm) using Formula (3):

$$\overline{X} F_{\text{m}} = \left( \frac{\sum (F_{\text{m}} + 1, F_{\text{m}} + 2, F_{\text{m}} + 3)}{\text{number of tests}} \right)$$
 (3)

## 19.4 Test report

- a) Report the average peak force calculated in <u>19.3</u>.
- b) Report any deviations from the method.

## 20 10 % force deflection

## 20.1 Rationale

The elastic deformation of a cushion under the load of a body is the characteristic that represents "cushioning". This is represented by force applied to an area and the measurement of the resulting deflection. The plotting of this curve or its measurement at specific deflections allows a relative comparison of a material's ability to "cushion" the body that is compressing it. This test measures the surface effect of ageing, which is the earliest indication of how the cushion might age.

## 20.2 Test method

Apply the method specified in ISO ASTM D5672-03, with the exception of applying a 10 % force deflection, which would be 10 mm, on a 100 mm cushion, using the cushion height in the specific test area.

## 20.3 Method of calculation

- a) Apply calculation specified in ISO ASTM D5672-03.
- b) Report any deviations from the method.

## 21 Stage 2: Simulated age testing

Identify which category from <u>Table 2</u> most closely fits the intended use of the cushion. Conduct specified tests in <u>Clauses 22</u> to <u>31</u> in the sequence shown in <u>Table 2</u> according to recommended use environments.

Certain tests might be inappropriate for some materials or architectures. For example, cushions containing hydrogels might outgas (volatilize components) at 70  $^{\circ}$ C or they might be irreversibly damaged. Materials that soften or degrade with elevated temperature shall be tested at 50  $^{\circ}$ C, with longer exposure times as outlined in each test. Testing shall reflect the characteristics of the materials of construction.

NOTE While data are not available correlating these aging exposures to actual time periods, they are intended to represent 12 months of exposure, with the exception of the robust utility and incontinence environments, which represent two years.

Table 2 — Aging exposures

Simulated exposure environment (see Note)	Aging exposures by Clause (to be performed in sequence)
Typical minimum testing	26, 25, 22, 29, 23, 27, 26, 30, 29, 28
Intermittent use without incontinence	26, 25, 22, 29, 23, 26, 31, 28
Wet environment (shower/toileting)	26, 25, 22, 23, 27, 26, 30, 28, 25, 22, 28
Perspiration (sport or hot environment)	26, 25, 22, 29, 23, 27, 26, 30, 31, 28
Incontinence (faecal and/or urinary)	26, 25, 22, 29, 23, 27, 29, 26, 29, 30, 29, 23, 26, 29, 30, 29, 28
Heavy use (including outdoor)	29a, 26, 25, 22, 23, 27, 29, 26, 30, 31, 28, 24, 29
Extremes of climate: hot	26, 25, 22, 29, 23, 26, 29, 28, 25, 22, 28
Extremes of climate: cold	26, 25, 22, 29, 23, 27, 26, 30, 29, 24
Utility (multiple environments during normal daily use)	26, 25, 22, 29, 23, 27, 26, 30, 29, 31, 28, 24
Robust utility (incontinence with heavy use, washing and disinfection)	26, 25, 22, 29, 23, 27, 26, 30, 29, 23, 27, 26, 30, 29, 31, 28, 24
Hybrid (minimum plus special case)	Minimum plus manufacturer's special case
Laundering is utilized to remove any manufacturing substant to a more arduous test during heavy use.	urface treatments prior to testing, thus exposing the cushion

NOTE 1 The protocols listed are examples of tests based on manufacturer's recommended use.

NOTE 2 Table 2 was developed by WG 11 experts during the early development phase of this part of ISO 16840 (2007) based on existing protocols and experience, and then formed the basis for subsequent test processes. Work to validate this through multiple interlab or research protocols is encouraged.

## 22 Accelerated aging

## 22.1 Rationale

The accelerated aging chamber provides a means of simulating and accelerating the aging process such that age-related degradation can be observed in a shortened time frame.

NOTE This part of ISO 16840 follows the guidance of established regulatory bodies, which recommend simulated age testing as described above. In the absence of other broadly material aging methods, recommendations are to limit test temperature options as described.

#### 22.2 Test method

## 22.2.1 70 °C accelerated aging procedure

- a) Place the cushion in the accelerated aging chamber maintained at  $(70 \pm 2)$  °C with ample room for air to circulate around the cushion.
- b) Set temperature sensors to record temperatures once every 30 s.
- c) Leave cushion in the accelerated aging chamber for 11 d [approximately one year simulated use (see ASTM F1980-2)].
- d) Remove and inspect for signs of degradation.

# 22.2.2 50 °C modified accelerated aging procedure (for cushions made with hydrogels or other materials not intended for high temperature exposure)

- a) Place the cushion in the accelerated aging chamber maintained at  $(50 \pm 2)$  °C with ample room for air to circulate around the cushion.
- b) Set temperature sensors to record temperatures once every 30 s.
- c) Leave cushion in the accelerated aging chamber or analogous chamber capable of maintaining  $(50 \pm 2)$  °C for 33 d [approximately one year simulated use (see ASTM F1980-2)].
- d) Remove and inspect for signs of degradation.

#### 22.3 Method of calculation

Examine the cushion for observed failures, cosmetic failures, functional failures, and bacterial enzymatic action failures, including but not limited to ruptured bladders, broken or separated seams, gross leaks, fractures, cracking, disintegration, extreme permanent set, abrasions, adhesions, degradation, odours, or colour change.

Gather data from temperature probe.

## 22.4 Test report

- a) Plot the data (temperature and time).
- b) Report temperature used during the exposure process.
- c) Report any failure mode(s).
- d) Report any deviations from the method.

## 23 Bacterial soiling

## 23.1 Rationale

This procedure provides a method of preparing and applying bacterial cultures to wheelchair cushions with intent to approximate bacterial and enzymatic degradation during the aging process.

NOTE Follow universal precautions, wear safety glasses, gloves, and other protective devices as prescribed.

## 23.2 Test method

## 23.2.1 Preparation of bacterial soiling broth

- a) Prepare bacterial soil by thawing the following eight frozen bacterial stock cultures with their accompanying American Type Culture Collection (ATCC) numbers:
  - Escherichia coli: 25922;
  - Pseudomonas aeruginosa: 27853;
  - Staphylococcus aureus: 25923;
  - Shigella boydii: 9207;
  - Proteus mirabilis: 25933;
  - Enterococcus faecalis: 19433;

- *Bacillus subtilis:* 6051;
- *Staphylococcus epidermidus:* 14990.
- b) Transfer the entire volume of each separate bacterial culture shipping vial to individual sterile culture vials and dilute each one 10:1 with Trypticase Soy Broth (TSB).
- c) Mix thoroughly.
- d) Incubate at 35 °C (±2 °C) for 24 h with regular agitation.
- e) Transfer 5 (±0,1) ml of each bacterial culture to separate sterile flasks with 45 (±5) ml TSB and incubate for another 24 h. At the end of the second 24 h period, individual cultures shall be turbid containing 10<sup>5</sup> bacteria/ml to 10<sup>7</sup> bacteria/ml.
- f) Combine all eight cultures in a sterile glass flask and mix thoroughly.

NOTE When refrigerated, bacterial soiling broth can be used for up to one week.

## 23.2.2 Bacterial exposure

- a) Cyclically load cushion with 500 N ( $\pm 10$  N) for 1 000 cycles at 50 °C ( $\pm 5$  °C).
- b) Remove cushion from cyclic loader.
- c) Place the seat cushion into an open containment bag.
- d) Pour 80 ml (±2 ml) of bacterial soiling broth onto the seat cushion at the midline of the cushion 13 cm to 15 cm from the back of the cushion.
- e) Seal bag and incubate bagged cushion at 35 °C (±2 °C) for 24 h.
- f) Remove from incubator and place in cyclic loader at 50 °C (±5 °C).
- g) Begin a 24 h period of incubation at 50 °C ( $\pm 5$  °C) while loading with 500 N ( $\pm 10$  N) for 1 000 cycles at 50 °C.
- h) Following cyclic loading, incubate the bagged cushion for the remainder of the 24 h incubation period.

  NOTE Total time (during loading and in incubator) at 50 °C (±5 °C) is 24 h.
- i) Inspect the cushion for wear or damage and record observations.
- j) Remove the cover from the cushion and inspect the cushion's internal components.
- k) Repeat a) to i) eight times (approximately one year of soiled aging).

## 23.3 Method of calculation

Examine the cushion for observed failures, cosmetic failures, functional failures, and bacterial enzymatic action failures, including but not limited to ruptured bladders, broken or separated seams, gross leaks, fractures, cracking, disintegration, extreme permanent set, abrasions, adhesions, degradation, odours, or colour change.

## 23.4 Test report

- a) Report any failure modes after each test.
- b) Report any deviations from the method.

## 24 Cold exposure

## 24.1 Rationale

This procedure simulates the alternating hot and cold temperatures experienced in many climates during the life of a wheelchair cushion.

#### 24.2 Test method

- a) Cyclically load cushion with 500 N  $\pm$  10 N for 20 000 cycles at 70 °C  $\pm$  5 °C.
  - NOTE Use  $50 \, ^{\circ}\text{C} \pm 5 \, ^{\circ}\text{C}$  and  $30 \, 000$  cycles for cushions not intended for high temperature exposure.
- b) Place the cushion in the cold exposure apparatus at -23 °C  $\pm$  2 °C for 24 h.
- c) Monitor the cushion's temperature throughout the cold exposure with a temperature probe set to take samples once every 30 s.
- d) Inspect the cushion for signs of degradation. If a repair kit is included and degradation can be repaired such that function is restored, repair and proceed with test. Note that cushion was repaired.
- e) Repeat as required by cushion performance requirements.

#### 24.3 Method of calculation

Examine the cushion and cover for observed failures, cosmetic failures, and functional failures, including but not limited to ruptured bladders, broken or separated seams, gross leaks, fractures, cracking, disintegration, extreme permanent set, abrasions, adhesions, degradation, odours, or colour change.

Gather data from temperature probe.

## 24.4 Test report

- a) Plot the data (temperature and time).
- b) Report temperature used during exposure process.
- c) Report temperature used during cyclic loading process.
- d) Report total number of cycles completed.
- e) Report any failure modes after each test, including those that were repairable.
- f) Report any deviations from the method.

## 25 Cyclic loading at elevated temperature

## 25.1 Rationale

This procedure simulates repeated loading and unloading at elevated temperatures.

#### 25.2 Test method

- a) Heat the cyclic loading rig to  $70 \, ^{\circ}\text{C} \pm 5 \, ^{\circ}\text{C}$ .
- b) Place the cushion in the cyclic loader.
- c) Apply a vertical load of 500 N ± 10 N to the cushion.
- d) Remove the load entirely from the cushion.

e) Repeat c) and d) for a total of 17,500 cycles (approximately one year loading use).

NOTE Use 50 °C ± 5 °C and 30 000 cycles for cushions not intended for high temperature exposure.

#### 25.3 Method of calculation

Examine the cushion for observed failures, cosmetic failures, functional failures, and bacterial enzymatic action failures, including but not limited to ruptured bladders, broken or separated seams, gross leaks, fractures, cracking, disintegration, extreme permanent set, abrasions, adhesions, degradation, odours, or colour change.

## 25.4 Test report

- a) Report temperature used during cyclic loading process.
- b) Report number of cycles completed.
- c) Report any failure modes.
- d) Report any deviations from the method.

## 26 Disinfection

## 26.1 Rationale

This procedure simulates normal disinfection that is necessary during the lifetime of wheelchair cushions.

## 26.2 Test method

Remove the cushion cover and disinfect both cover and cushion per manufacturer's instructions. If no instructions are provided, disinfect as follows.

## 26.2.1 Cover of cushion disinfection

For home use, launder according to ASTM D4265-98 using 60 ml (1/4 cup) sodium hypochlorite bleach as a bacterial disinfectant.

Repeat as required by the test exposure list (see <u>Table 2</u>).

For institutional use, launder according to Center for Disease Control (CDC) Guidelines for Environmental Infection Control.

Centers for Disease Control Morbidity and Mortality Weekly Report: Recommendations and Reports June 6, 2003/52 (rr10);1-42 "Guidelines for Environmental Infection Control in Healthcare Facilities — Recommendations of CDC and the Healthcare Infection Control Practices Advisory Committee (HICPAC)" Available online: <a href="https://www.cdc.gov/mmwr/preview/mmwrhtml/rr5210a1.htm">www.cdc.gov/mmwr/preview/mmwrhtml/rr5210a1.htm</a>

## 26.2.2 Interior cushion disinfection

- a) Mix 60 ml sodium hypochlorite bleach with approximately 20 l room temperature potable water.
- b) Submerge cushion completely so that all bubbles are released.
- c) Soak for 10 min ± 1 min and rinse with room temperature potable water.
- d) Hang to drip dry.
- e) Repeat as required by the test exposure list (see <u>Table 2</u>).

f) Report any deviations from the method.

## 27 Faecal soiling with cyclic loading

#### 27.1 Rationale

This procedure provides a method of preparing and applying simulated faecal soil to wheelchair cushions to approximate degradation during normal use.

## 27.2 Test method

- a) Prepare Hucker artificial soil as per AAMI TIR 12.
- b) Warm soil (using oven or microwave) to 37 °C ± 2 °C.
- c) Spread 25 ml ± 2 ml of Hucker artificial soil on the top of the cushion at the midline, 11 cm to 15 cm from the back of cushion.
- d) Place the cushion inside a contamination control bag.
- e) Cyclically load for a total of 1 000 cycles at 70 °C  $\pm$  5 °C using 500 N  $\pm$  10 N.
  - NOTE Use 50 °C (±5 °C) and 30 000 cycles for cushions not intended for high temperature exposure.
- f) Remove cushion from cyclic loader and contamination control bag.
- g) Inspect for signs of degradation.
- h) Repeat as required by the test exposure list (see <u>Table 2</u>).

## 27.3 Method of calculation

Examine the cushion for observed failures, cosmetic failures, functional failures, and bacterial enzymatic action failures, including but not limited to ruptured bladders, broken or separated seams, gross leaks, fractures, cracking, disintegration, extreme permanent set, abrasions, adhesions, degradation, odours, or colour change.

## 27.4 Test report

- a) Report total amount of faecal soil used.
- b) Report temperature used during cyclic loading process.
- c) Report number of cycles completed.
- d) Report any failure modes that were noted after test.
- e) Report any deviations from the method.

## 28 Heat and humidity

#### 28.1 Rationale

The heat and humidity method is the same method from Stage 1 (<u>Clause 11</u>). It is used in Stage 2 as an aging exposure, rather than to determine the retention and dispersion characteristics of the cushion. Here, the procedure simulates exposure to heat and moisture during the life of the cushion.

#### 28.2 Test method

Follow the procedure from Stage 1 (see 11.2).

## 28.3 Method of calculation

Examine the cushion for observed failures, cosmetic failures, and functional failures, including but not limited to ruptured bladders, broken or separated seams, gross leaks, fractures, cracking, disintegration, extreme permanent set, abrasions, adhesions, degradation, odours, or colour change.

## 28.4 Test report

- a) Report any failure modes.
- b) Report any deviations from the method.

## 29 Laundering

#### 29.1 Rationale

This procedure provides a method to approximate the degradation of wheelchair cushions and their covers that occurs during normal laundering over the life of the cushion.

#### 29.2 Test method

Remove the cover from the cushion and launder per manufacturer's instructions. If no instructions are provided, launder as follows.

## 29.2.1 Cover of cushion laundering

Launder according to ASTM D4265-98.

Repeat as required by the test exposure list (see <u>Table 2</u>).

## 29.2.2 Interior cushion laundering

- a) Mix an appropriate amount (according to detergent manufacturer's recommendations) of laundry detergent with approximately 20 l potable water in an immersion tub.
- b) Submerge the cushion completely ensuring that all bubbles are released and that the entire cushion is wet.
- c) Soak for 10 min ± 1 min and rinse in potable water.
- d) Hang and allow cushion to drip dry.
- e) Repeat as required by the test exposure list (see <u>Table 2</u>).

## 29.3 Method of calculation

Examine the cushion for observed failures, cosmetic failures, functional failures, and bacterial enzymatic action failures, including but not limited to ruptured bladders, broken or separated seams, gross leaks, fractures, cracking, disintegration, extreme permanent set, abrasions, adhesions, degradation, odours, or colour change.

#### 29.4 Test report

a) Report method of washing.

# BS ISO 16840-6:2015 **ISO 16840-6:2015(E)**

- b) Report total number of wash cycles completed.
- c) Report any failure modes that were noted after test.
- d) Report any deviations from the method.

## 30 Urinary soiling with cyclic loading

#### 30.1 Rationale

This procedure provides a method of preparing and applying simulated urinary soil to wheelchair cushions with intent to approximate the degradation from incontinence during use.

## 30.2 Test method

- a) Cyclically load cushion with 500 N ± 10 N for 1 000 cycles at 70 °C.
- b) Remove cushion from cyclic loader.
- c) Pour 120 ml ± 2 ml of artificial urine as defined in ISO 9073-8, on top of the cushion 13 cm to 15 cm from the back of the cushion.
- d) Place the seating device inside a contamination control bag.
- e) Place cushion in cyclic loader.
- f) Cyclically load cushion with 500 N  $\pm$  10 N for 1 000 cycles at 70 °C.
- g) Remove cushion from cyclic loader and contamination control bag.
- h) Inspect the cushion and cover for signs of degradation.
- i) Repeat a) to h) two times.

## 30.3 Method of calculation

Examine the cushion for observed failures, cosmetic failures, and functional failures, including but not limited to ruptured bladders, broken or separated seams, gross leaks, fractures, cracking, disintegration, extreme permanent set, abrasions, adhesions, degradation, odours, or colour change.

## 30.4 Test report

- a) Report temperature used during cyclic loading process.
- b) Report number of cycles completed.
- c) Report any failure modes that were noted after test.
- d) Report any deviations from the method.

## 31 UV and ozone exposure

## 31.1 Rationale

This procedure provides a method of applying UV light to wheelchair cushions to approximate the degradation from the sun. UV light naturally produces ozone, another factor in aging.

## 31.2 Test method

- a) Place the cushion in the UV light and ozone exposure chamber.
- b) Irradiate the cushion with  $(2,85 \pm 0,3)$  mW/cm<sup>2</sup> at 70 °C ± 3 °C for 4 h, as per ISO 4892-3. Ensure that the cushion receives 115 J in the 290 nm to 390 nm wavelength. If necessary, increase exposure time so cushion receives the appropriate number of Joules.
- c) Turn off lights and expose the seating cushion to 4 h of darkness at 23 °C ± 3 °C.
- d) Irradiate the cushion with  $(2.85 \pm 0.3)$  mW/cm<sup>2</sup> at 70 °C ± 3 °C for 4 h.
  - NOTE Use 50 °C  $\pm$  5 °C and 16 h  $\pm$  10 min, exposure for cushions not intended for high temperature exposure.
- e) Remove cushion.
- f) Inspect for signs of degradation. Record.
- g) Cyclically load cushion with 500 N  $\pm$  10 N for 6,500 cycles at 70 °C.
- h) Inspect the cushion a second time for signs of degradation. Record findings.
- i) Repeat as required by the test exposure list (see <u>Table 2</u>).

## 31.3 Method of calculation

Examine the cushion for observed failures, cosmetic failures, and functional failures, including but not limited to ruptured bladders, broken or separated seams, gross leaks, fractures, cracking, disintegration, extreme permanent set, abrasions, adhesions, degradation, odours, or colour change.

## 31.4 Test report

- a) Report total UV exposure time.
- b) Report temperature used during cyclic loading process.
- c) Report total number of cycles completed.
- d) Report any failure modes that were noted after test.
- e) Report calculations and disclosure of uncertainty as specified in ISO/IEC Guide 98-3.
- f) Report any deviations from the method.

## 32 Stage 3: Post-aged cushion testing

Seat cushions are tested again according to <u>Clauses 9</u> to <u>20</u>. Testing may be performed in any sequence.

## 33 Method of calculations

- a) Report pre-aging and post-aging data.
- b) Report the differences in pre- and post-aging data as a percent change or in appropriate units.
- c) Report durability, resilience, and other characteristics of cushion by reporting the observed changes in the cushions post aging.

## 34 Test report

The test report shall contain the data and reporting requirements specified by each individual test method before aging, each aging exposure, and the results of each test method after aging, as prescribed within this part of ISO 16840. The report shall also include at least the following information:

- a) a reference to this part of ISO 16840, i.e. ISO 16840-6;
- b) the name, address, and accreditation status of the testing facility;
- c) the date of issue of the test report;
- d) the name and address of the manufacturer of the cushion;
- e) the model type and nominal size that uniquely describes the test cushion (e.g. serial number, batch number);
- f) equipment used in each individual method and environmental conditions;
- g) the preparation of the test cushion;
- h) the characteristics of the test cushion as determined in pre-aged cushion testing (Stage 1 tests, Clauses 9 to 20);
- i) the characteristics of the test cushion as determined in simulated age testing (Stage 2, Clauses 22 to 31);
- j) the characteristics of the test cushion as determined in post-aged cushion testing (repeat Stage 1 tests, <u>Clauses 9</u> to <u>20</u>);
- k) any deviations from the test methods;
- l) any additional comments or observations.

## Annex A

(informative)

# Influences that drive changes in seat cushion performance

The influences that drive the changes in a cushion's ability to function as designed are many. <u>Table A.1</u> provides a partial list of these influences and an assumed mode of action.

Table A.1 — Influences that drive changes in cushion performance

Association with the body		
Sweat/humidity	Sweat (water, salts, and other compounds) and body oils, saprophytic, and enteric organisms	
Incontinence, faecal, and urinary	Organic matter, enteric and saprophytic organisms, salts, urea, water	
Motion and repetitive loading	Elastic and plastic deformation, compression, elongation	
Impact and vibration	Cyclic loading and vibratory loading (loading the cushion and oscillating the load between two predetermined values)	
Ambient environment		
Car	Automotive interior temperatures that exceed 80 °C	
Bath and shower	Hot water, extraction of leechables, exposure to personal care chemicals, enteric organisms, faecal matter, urinary salts, and urea	
Home	Pets, loading and overloading, carrying packages on the lap	
Place of employment	The work environment can pose unique challenges from hot metal chips and solvents that degrade the materials of construction.	
Storage between uses	Temperature extremes in a garage or storage facility	
Smoke and chemicals	Cigarette smoke, second hand smoke (from cigarettes or other sources), solvents, and other chemicals	
Recreational environments (indoor and outdoor)		
Sports	Increased sweat, impact, vibration, sports exertion, increased compression, increased temperature	
Camping and outdoor activity	Rain, dew, hot and cold temperature extremes, soiling, UV light, etc.	

## **Bibliography**

- [1] ISO 13485, Medical Devices Quality Management Systems Requirements for Regulatory Purposes
- [2] ISO 14971, Medical devices Application of risk management to medical devices
- [3] Brown, Roger P. "Practical Guide to the Assessment of the Useful Life of Rubbers." Rapra Technology Ltd
- [4] BRUGADA R. 1989) "Performance of Thermoplastic Elastomers (TPEs) at Subzero Temperatures". Proceedings of the Subzero Engineering Conference. 1989: 67-73
- [5] BUDRUGEAC P. Thermal lifetime evaluation of polymeric materials exhibiting a compensation effect and dependence of activation energy on the degree of conversion. Polym. Degrad. Stabil. 1995, **50** (2) pp. 241–246
- [6] CASATI F.M. Tailoring the Performance of Molded Flexible Polyurethane Foams for Car Seats. Journal of Cellular Plastics. 1998, **34** (5) pp. 430–466
- [7] CELINA M., GILLEN K.T., ASSINK R.A. Accelerated aging and lifetime prediction: Review of non-Arrhenius behaviour due to two competing processes. Polym. Degrad. Stabil. 2005, **90** (3) pp. 395–404 [An Elsevier Journal. Scandia National Laboratories]
- [8] Centers for Disease Control. 2003) "Guidelines for Environmental Infection Control in Healthcare Facilities Recommendations of CDC and the Healthcare Infection Control Practices Advisory Committee (HICPAC)" in *Centres for Disease Control Morbidity and Mortality Weekly Report*: Recommendations and Reports (June 6, 2003), 52; pp1-42 Available on-line: <a href="https://www.cdc.gov/mmwr/preview/mmwrhtml/rr5210a1.htm">www.cdc.gov/mmwr/preview/mmwrhtml/rr5210a1.htm</a> (accessed on Feb. 28, 2013)
- [9] DAY M. (1972). "Photo Chemical Degradation of Poly (ethylene Terephthalate) III. Determination of Decomposition Products and Reactions Mechanism." Journal of Applied Polymer Science. **16**: (203-215
- [10] DUTTA P.K., & HUI D. 1997) "Effects of Cold Regions Environment on Structural Composites". Proceedings of the International Conference on Advanced Technology in Experimental Mechanics, Japan Society of Mechanical Engineers
- [11] DYADEM PRESS. Guidelines for Failure Modes and Effects Analysis (FMEA) for Medical Devices. CRC Press, Boca Raton, 2003
- [12] EGERTON G.S. Some Aspects of the Photochemical Degradation of Nylon, Silk, and Viscose Rayon. Text. Res. J. 1948, **18** pp. 659–669
- [13] EGERTON G. S., & SHAH K. M. (1968). "The effect of Temperature on photochemical degradation of textile materials. Part I, Degradation sensitized by Titanium dioxide." Textile Research Journal. 38: (130-135)
- [14] HENDERSON R. (1989). "Wire chamber ageing with CF4/isobutane and argon/ethane mixtures." IEEE Trans. Nucl. Sci., NS35(1): 477-82. R Openshaw et al., ibid, NS-36, 1989.)
- [15] HERRINGTON R.M. Humid Aged Compression Set Phenomena in Water Blown HR Molded Foams. Journal of Cellular Plastics (Dow Chemical USA). 1984, **20** pp. 58–63
- [16] HORSFALL G.A. (1982). "Factors Influencing the Daylight Photodegradation of Nylon 66, Nylon 6, and Polyester in Commercial Fabrics." Textile Research Journal: Publication of Textile Research Institute the Textile Foundation. **52**(3): 197-205
- [17] HORSFALL GA (1981). "The daylight photo-degradation of polyester and nylon fabrics." **2**: 69-71

- [18] HSIEH You-Lo DA Timm, and J Merry.(1987) "Bacterial Adherence on Fabrics by a Radioisotope Labelling Method." Textile Research Journal. 57: (20-28
- [19] JELLINEK H.H.G. ed. "Chapter 2: HCN degradation of poly amidens and polyurthane and poly imides and a survey of their thermal and oxidative degradation." Degradation and Stabilization of Polymers. Amsterdam: Elsevier, with emphasis on pg 80, 91
- [20] JELLINEK H.H.G. ed. Degradation and Stabilization of Polymers. Elsevier, Amsterdam, 1983
- [21] Klausmeier R.E., & Osmond J.L. 1976). "Bio-degradation of Plastics by Actinomycetes." Proceedings of the 3rd International Biodegradation Symposium. 815-818
- [22] MERGAERT J. In Vitro Biodegradation of Polyester-Based Plastics Materials by Selected Bacterial cultures. (Fibers included). Journal of Polymers and the Environment. 2000, 8 pp. 17–27
- [23] Nakajima- Kame, T. (1999). "Microbial degradation of polyurethane, polyester polyurethanes and polyether polyurethanes." Applied Microbial Biotechnology. **51**: (134-140
- [24] REK V., & BRAVAR M. Ultraviolet Degradation of Polyester-Based Polyurethane. Journal of Elastomers and Plastics. 1983, **15** pp. 33–42
- [25] SAOTOME K. Improvement of Humidity Resistance in High Resilient Polyurethane Foam. Journal of Cellular Plastics. 1977, **13** pp. 203–209
- [26] Shah C.D. Effect of Hydroquinone on Light-Induced Degradation of Nylon 6 Dyed with SolubilizedVat Dyes. Text. Res. J. 1984, **54** (12) pp. 844–850
- [27] SKORPENSKE R.G., & SOLIS R.A. 1992). "Compression Set Mechanisms in Flexible Polyurethane Foam." Proceedings of the SPI (Poly Urethanes 92) 34th Annual Technical /Marketing Conference. October 1992
- [28] STAARINK. H.A.M. (1995). "Sitting posture, comfort and pressure." Delft University Press
- [29] "Testing of Micro-organisms on films." ANSI/ASTM D 3274, ref 9
- [30] WILLIAM S. Bisenius. (2006). "Ingress Protection: The System of Tests and Meaning of Codes." Compliance Engineering: Annual Reference Guide. Canon Communications. 1-5.<www.certifigroup.com/CEArtIPTestBB.pdf>
- [31] WISE J., GILLEN K.T., CLOUGH R.L. An ultrasensitive technique for testing the Arrhenius extrapolation assumption for thermally aged elastomers. Polym. Degrad. Stabil. 1995, 49 (3) pp. 403–418
- [32] YOUNG J.M. Microbial Contamination of Hospital bed Handsets. Am. J. Infect. Control. 2005, 33 (3) pp. 170–174
- [33] ISO 7176-26, Wheelchairs Part 26: Vocabulary





# British Standards Institution (BSI)

BSI is the national body responsible for preparing British Standards and other standards-related publications, information and services.

BSI is incorporated by Royal Charter. British Standards and other standardization products are published by BSI Standards Limited.

#### About us

We bring together business, industry, government, consumers, innovators and others to shape their combined experience and expertise into standards -based solutions.

The knowledge embodied in our standards has been carefully assembled in a dependable format and refined through our open consultation process. Organizations of all sizes and across all sectors choose standards to help them achieve their goals.

#### Information on standards

We can provide you with the knowledge that your organization needs to succeed. Find out more about British Standards by visiting our website at bsigroup.com/standards or contacting our Customer Services team or Knowledge Centre.

## **Buying standards**

You can buy and download PDF versions of BSI publications, including British and adopted European and international standards, through our website at bsigroup.com/shop, where hard copies can also be purchased.

If you need international and foreign standards from other Standards Development Organizations, hard copies can be ordered from our Customer Services team.

## **Subscriptions**

Our range of subscription services are designed to make using standards easier for you. For further information on our subscription products go to bsigroup.com/subscriptions.

With **British Standards Online (BSOL)** you'll have instant access to over 55,000 British and adopted European and international standards from your desktop. It's available 24/7 and is refreshed daily so you'll always be up to date.

You can keep in touch with standards developments and receive substantial discounts on the purchase price of standards, both in single copy and subscription format, by becoming a **BSI Subscribing Member**.

**PLUS** is an updating service exclusive to BSI Subscribing Members. You will automatically receive the latest hard copy of your standards when they're revised or replaced.

To find out more about becoming a BSI Subscribing Member and the benefits of membership, please visit bsigroup.com/shop.

With a **Multi-User Network Licence (MUNL)** you are able to host standards publications on your intranet. Licences can cover as few or as many users as you wish. With updates supplied as soon as they're available, you can be sure your documentation is current. For further information, email bsmusales@bsigroup.com.

## **BSI Group Headquarters**

389 Chiswick High Road London W4 4AL UK

#### **Revisions**

Our British Standards and other publications are updated by amendment or revision.

We continually improve the quality of our products and services to benefit your business. If you find an inaccuracy or ambiguity within a British Standard or other BSI publication please inform the Knowledge Centre.

## Copyright

All the data, software and documentation set out in all British Standards and other BSI publications are the property of and copyrighted by BSI, or some person or entity that owns copyright in the information used (such as the international standardization bodies) and has formally licensed such information to BSI for commercial publication and use. Except as permitted under the Copyright, Designs and Patents Act 1988 no extract may be reproduced, stored in a retrieval system or transmitted in any form or by any means – electronic, photocopying, recording or otherwise – without prior written permission from BSI. Details and advice can be obtained from the Copyright & Licensing Department.

#### **Useful Contacts:**

#### **Customer Services**

Tel: +44 845 086 9001

Email (orders): orders@bsigroup.com
Email (enquiries): cservices@bsigroup.com

## Subscriptions

Tel: +44 845 086 9001

Email: subscriptions@bsigroup.com

#### **Knowledge Centre**

Tel: +44 20 8996 7004

Email: knowledgecentre@bsigroup.com

#### **Copyright & Licensing**

Tel: +44 20 8996 7070 Email: copyright@bsigroup.com

