

BS ISO 18417:2017



BSI Standards Publication

Iodine charcoal sorbents for nuclear facilities — Method for defining sorption capacity index

National foreword

This British Standard is the UK implementation of ISO 18417:2017.

The UK participation in its preparation was entrusted to Technical Committee NCE/2, Radiation protection and measurement.

A list of organizations represented on this committee can be obtained on request to its secretary.

This publication does not purport to include all the necessary provisions of a contract. Users are responsible for its correct application.

© The British Standards Institution 2017.
Published by BSI Standards Limited 2017

ISBN 978 0 580 84337 2

ICS 13.280

Compliance with a British Standard cannot confer immunity from legal obligations.

This British Standard was published under the authority of the Standards Policy and Strategy Committee on 31 March 2017.

Amendments/corrigenda issued since publication

Date	Text affected
------	---------------

**Iodine charcoal sorbents for nuclear
facilities — Method for defining
sorption capacity index**

*Pièges à iode pour installations nucléaires — Méthode pour définir la
capacité de rétention*





COPYRIGHT PROTECTED DOCUMENT

© ISO 2017, Published in Switzerland

All rights reserved. Unless otherwise specified, no part of this publication may be reproduced or utilized otherwise in any form or by any means, electronic or mechanical, including photocopying, or posting on the internet or an intranet, without prior written permission. Permission can be requested from either ISO at the address below or ISO's member body in the country of the requester.

ISO copyright office
Ch. de Blandonnet 8 • CP 401
CH-1214 Vernier, Geneva, Switzerland
Tel. +41 22 749 01 11
Fax +41 22 749 09 47
copyright@iso.org
www.iso.org

Contents

Page

Foreword	iv
Introduction	v
1 Scope	1
2 Normative references	1
3 Terms and definitions	1
4 Principles of the method	2
5 Preparation of the test	4
5.1 General.....	4
5.2 Removal of air impurity and humidity into the installation.....	4
5.3 Radioactive methyl iodide used for sorbent testing.....	5
5.4 Preparation of sorbent samples.....	5
5.5 Measuring devices.....	6
5.6 Conditions for achieving equilibrium during the test.....	6
5.7 Safe conditions for workers and members of the public.....	6
6 Test conditions	7
7 Sorbent testing	7
8 Test performance	9
9 Determination of the sorption capacity index	10
9.1 Sorption capacity index determination.....	10
9.2 Calculating sorption capacity index.....	11
9.3 Uncertainties of measurements.....	12
10 Documenting test results	13
Annex A (normative) Format of test report (for the customer)	14
Annex B (normative) Format of internal test report	15
Annex C (normative) Measurements results	16
Annex D (informative) Example of expected results for sorption capacity index	17
Bibliography	19

Foreword

ISO (the International Organization for Standardization) is a worldwide federation of national standards bodies (ISO member bodies). The work of preparing International Standards is normally carried out through ISO technical committees. Each member body interested in a subject for which a technical committee has been established has the right to be represented on that committee. International organizations, governmental and non-governmental, in liaison with ISO, also take part in the work. ISO collaborates closely with the International Electrotechnical Commission (IEC) on all matters of electrotechnical standardization.

The procedures used to develop this document and those intended for its further maintenance are described in the ISO/IEC Directives, Part 1. In particular the different approval criteria needed for the different types of ISO documents should be noted. This document was drafted in accordance with the editorial rules of the ISO/IEC Directives, Part 2 (see www.iso.org/directives).

Attention is drawn to the possibility that some of the elements of this document may be the subject of patent rights. ISO shall not be held responsible for identifying any or all such patent rights. Details of any patent rights identified during the development of the document will be in the Introduction and/or on the ISO list of patent declarations received (see www.iso.org/patents).

Any trade name used in this document is information given for the convenience of users and does not constitute an endorsement.

For an explanation on the voluntary nature of standards, the meaning of ISO specific terms and expressions related to conformity assessment, as well as information about ISO's adherence to the World Trade Organization (WTO) principles in the Technical Barriers to Trade (TBT) see the following URL: www.iso.org/iso/foreword.html.

This document was prepared by Technical Committee ISO/TC 85, *Nuclear energy, nuclear technologies, and radiological protection*, Subcommittee SC 2, *Radiological protection*.

Introduction

Iodine sorbents are extensively used in nuclear facilities to remove radioiodine from gases and air in off-gas cleaning systems and ventilation installations. The sorbents are very important for protection of the members of the public and environment from iodine radionuclides radiation.

In the normal operation of nuclear installations, the main hazard comes from radioactive isotopes of iodine; as examples, for reactors ^{131}I and a minor extent ^{133}I , for fuel processing facilities ^{129}I , etc. Iodine is one of the main contributors of the radiation impact on the environment. Under abnormal and accident conditions, some other isotopes ^{132}I , ^{134}I and ^{135}I have also some significant effects on the total iodine dose (thyroid dose)^[3].

The volatile radioiodine forms can occur in the gaseous radioactive wastes as elemental iodine, the simplest organic compound methyl iodide, and some others such as hydrogen iodide under reducing conditions.

Radioactive iodine can create a serious danger to the members of the public and workers in abnormal and accident conditions at nuclear facilities as far as the exposure in these conditions could be much higher than the exposure due to the natural background radiation.

The need to prevent widespread dispersal of gaseous radioiodine from nuclear facilities is a major purpose of iodine sorbents. It is universally recognized that radioactive methyl iodide is the less readily removable radioiodine form. The removal of radioactive iodine from gaseous radioactive wastes at nuclear facilities is almost always performed with the help of impregnated activated charcoals that have become often accepted as the preferred iodine sorbents used in these facilities. Impregnated charcoals require a high efficiency especially from humid gases containing iodine in order to trap all the iodine gaseous compounds.

Two types of tests are considered^{[2][4]}: laboratory and *in situ* tests.

- Laboratory tests are done to establish the performance characteristics of the charcoal to be used in retention systems under specified operating conditions.
- *In situ* tests are done to obtain a measure of the performance of retention systems under appropriate operational conditions.

This document concerns only the laboratory tests. Laboratory tests of representative samples of charcoal (e.g. new charcoal, aged charcoal from iodine absorbers, etc.) are performed to establish their efficiency for a given test agent under specified conditions.

The quality of sorbents and its potential application at nuclear facilities can be estimated by means of a criterion that defines specifically the sorption capacity of the sorbent. Such criterion is called in this document the sorption capacity index.

The index is defined by the result of a laboratory test on the basis of radioiodine activity distribution inside the sorbent. This index characterizes the total kinetic sorption process for established test conditions and show whether the sorbent can be used as iodine filters for nuclear facilities. One example of criteria is given in [Annex D](#).

This document provides a method to determine the quantitative quality of a sorbent and also to compare the performance of different iodine sorbents at the specified conditions. It is useful for users of iodine sorbents (filter or sorbent manufacturers as well as operators).

Iodine charcoal sorbents for nuclear facilities — Method for defining sorption capacity index

1 Scope

The scope of this document covers

- iodine sorbents for nuclear power plants, nuclear facilities, research and other nuclear reactors,
- iodine sorbents for laboratories, including nuclear medicine, and
- iodine sorbents for sampling equipment on sample lines.

This document applies to iodine sorbents manufacturers and operators in order to measure the actual performance of these sorbents and their sorption capacity for radioiodine.

This document applies to granulated and crushed iodine sorbents based on activated charcoal (hereinafter referred to as “sorbents”) used for trapping gaseous radioiodine and its compounds. This document establishes the method and conditions for defining sorption capacity index in a laboratory.

2 Normative references

There are no normative references in this document.

3 Terms and definitions

For the purposes of this document, the following terms and definitions apply.

ISO and IEC maintain terminological databases for use in standardization at the following addresses:

- IEC Electropedia: available at <http://www.electropedia.org/>
- ISO Online browsing platform: available at <http://www.iso.org/obp>

3.1

gaseous radioactive wastes

wastes that contain radioactive material in gas form for which no further use is foreseen and have radionuclides at concentrations or activities greater than clearance levels as established by a regulatory body

3.2

discharge

planned and controlled release of (gas or liquid) radioactive material to the environment

3.3

mass transfer zone

defined zone (range) of sorbent volume in which the phenomena of substance mass transfer from gas to solid phases takes place

3.4

iodine sorbent

sorbent intended for trapping radioiodine in gaseous radioactive wastes

3.5 free volume

void between grains or crushed grains of the sorbent inside the whole volume containing the sorbent

Note 1 to entry: The free volume can be expressed as in [Formula \(1\)](#):

$$V_{\text{fr}} = \chi \cdot V_{\text{sorb}} \quad (1)$$

where

V_{fr} free volume;

χ fraction free volume in sorbent volume;

V_{sorb} sorbent volume.

3.6 contact time

gas flow transit time through sorbent layer

Note 1 to entry: Contact time τ is expressed using [Formula \(2\)](#):

$$\tau = \frac{V_{\text{fr}}}{Q_{\text{col}}} \quad (2)$$

where

Q_{col} the volumetric gas flow rate in the inlet sectional column.

Note 2 to entry: The contact time defined here does not consider the geometric volume of the sample, but only its free volume.

3.7 bulk density

ρ_{sorb}
ratio between granulated or crushed grains sorbent mass (definite granulation) and the total volume containing the sorbent

3.8 sorption capacity index

ξ
criterion indicating the degree of reduction of gaseous radioiodine in the gas flowing through the sorbent under specified test conditions

Note 1 to entry: The index is valid only for a specific chemical form of the radioactive gas. In this document, the index has been calculated for radioactive methyl iodide. The index can also be calculated with other gaseous species, such as radioactive iodine, but the results cannot be compared with the ones obtained with radioactive methyl iodide.

4 Principles of the method

The main rationale for the method defined in this document are the following:

- radioactive methyl iodide ($\text{CH}_3^{131}\text{I}$) is the most difficult form of radioiodine to trap in nuclear facilities discharges;
- the distribution of radioactive methyl iodide along sorbent layer is exponential;
- there is an active mass transfer zone in the sorbent layer;


- the amount of sorbed radioactive methyl iodide depends on the contact time between the gas and sorbent.

The sorption capacity index indicates the degree by which radioactive methyl iodide concentration in gas phase is reduced during the contact of the gas flow with the sorbent.

The principle of the method is the following:

- indoor laboratory air is used as carrier gas;
- air is transferred in the test plant by means of extraction device (fan, vacuum pump, etc.);
- in order to remove indoor laboratory air pollutants, aerosols and humidity, air flow passes through an aerosol filter, an air conditioning system used for humidity (e.g. zeolite or dehumidifier) and volatile compounds removal (e.g. activated charcoal);
- the humidity level shall be maintained to a specified value and be controlled. One example for this humidity control is to split the total air flow and pass one of the flows through a second air condition system (e.g. humidifier);
- the air temperature and air flow are regulated and measured before introduction in the sample to test (e.g. the air temperature is control by heat insulation of the sectional column or to place it in a vessel with controlled temperature);
- radioactive methyl iodide is injected into the carrier gas from a generator and then it is trapped in the sectional columns containing the sorbent to be tested;
- before discharging the test gas, the air is passed through a protection column for radiation protection issues and for control of the penetration radioiodine and to ensure a low level of iodine active species in discharged air;
- each section test column is monitored for radioiodine content via gamma monitors (0,364 MeV for ^{131}I);
- the sorption capacity index is calculated using the formula given in [Clause 9](#).

[Figure 1](#) presents the principle of an example scheme of the test plant used for the method presented in this document.

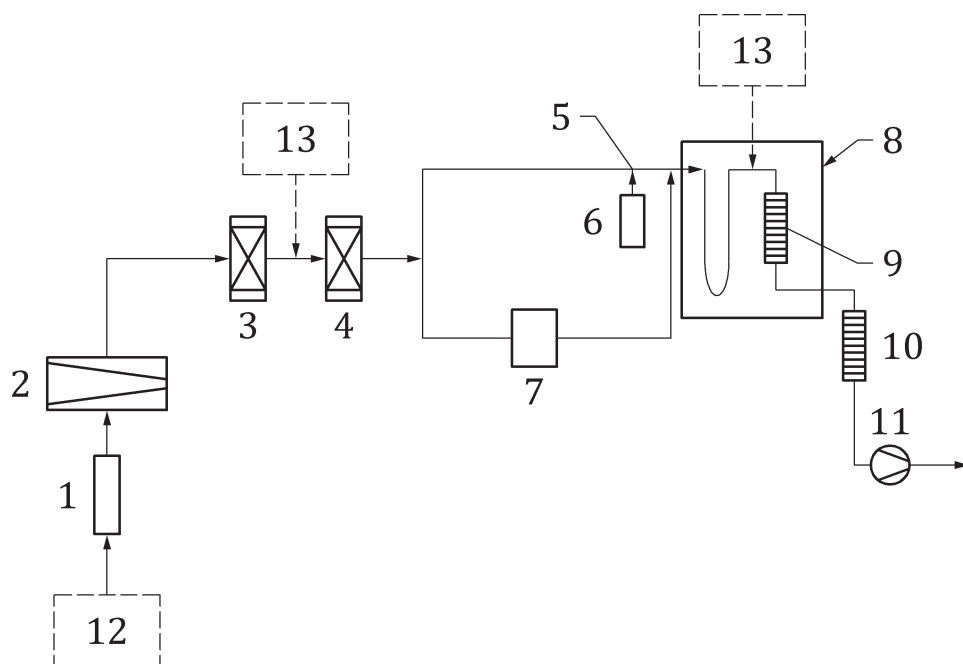

Key

- 1 flowmeter
- 2 aerosol filter
- 3 dehumidifier
- 4 charcoal
- 5 injection of radioactive methyl iodide
- 6 generator of radioactive methyl iodide
- 7 humidifier
- 8 temperature controlled chamber
- 9 sectional column
- 10 protection column
- 11 vacuum pump
- 12 room air
- 13 controller humidity, temperature, absolute pressure and pressure drop

Figure 1 — Schematic of principle equipment and a process diagram of the test plant

5 Preparation of the test

5.1 General

Based on the typical arrangement proposed in [Clause 4](#), the test involves the following stages.

5.2 Removal of air impurity and humidity into the installation

Removing air pollutant and controlling humidity and temperature are important for the tests because these parameters can have a significant impact on the results. In order to clean the installation before a new test, the indoor air is passed through an aerosol filter, dehumidifier and charcoal filter to remove particulates, humidity and some volatile compounds. As an example, dehumidifier with zeolite warms at the temperature 350 °C to 400 °C in vacuum during 6 h and activated carbon to warm at temperature 300 °C to 350 °C in vacuum during 6 h in order to avoid degradation of the charcoal properties.

5.3 Radioactive methyl iodide used for sorbent testing

If radioiodide is supplied in ready-to-use form of radioactive methyl iodide ($\text{CH}_3^{131}\text{I}$) received from producer, a certificate date and activity shall be required. It shall be stored in a dark place at conditions that slows down the process of its decomposition into the molecular form (I_2).

Otherwise, methyl iodide labelled with ^{131}I isotope is produced by its isotopic exchange (e.g. with Na^{131}I or K^{131}I without carrier). Its activity shall be defined and specified with a date. For this purpose, 2 cm^3 of methyl iodide are injected into the container with Na^{131}I or K^{131}I and kept at a room temperature of $20\text{ }^\circ\text{C}$ for 48 h. To define the mass activity concentration (Bq/g), three portions of 5 g of activated carbon impregnated with triethylenediamine (TEDA) are weighed and placed in weighing bottles, the diameter of which is close to that of the test column. Three samples of $4\text{ }\mu\text{l}$ of radio-labelled methyl iodide are taken and placed into weighing bottles with activated carbon. Activities of resulting samples are measured and correlated with methyl iodide mass that is defined as the volume of samples taken and methyl iodide density at the temperature of its storage.


Mean value of mass activity concentration is calculated. The mass activity concentration (expressed in Bq/g) is used for calculation of the mass concentration of methyl iodide in the gas flow (see [Formula 8](#)).

5.4 Preparation of sorbent samples

Range of granulated/crushed grains sizes and bulk density ρ_{sorb} of the sorbent sample are determined if these data are absent. The methods used to determine grains size and the bulk density are defined according to a national or international standard.

When filling each section of the column, the filling shall be made uniformly in each section such that similar mass in each section is obtained, without specific compression or vibration.


The sectional column is used to conduct the sorbent test. Examples of such column and of a small section inside the column are shown in [Figure 2](#) and [Figure 3](#).

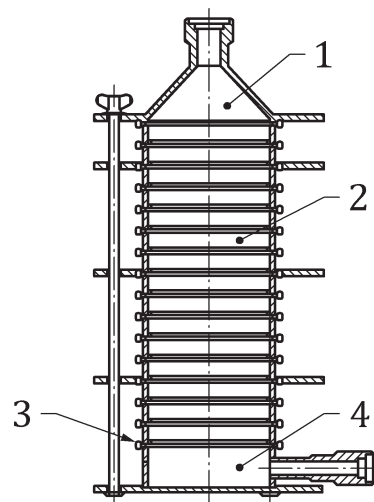

Key

- 1 removable cover with inlet nozzle
- 2 sorbent-containing section
- 3 guide rod
- 4 bottom with outlet nozzle

Figure 2 — Column for sorbent testing

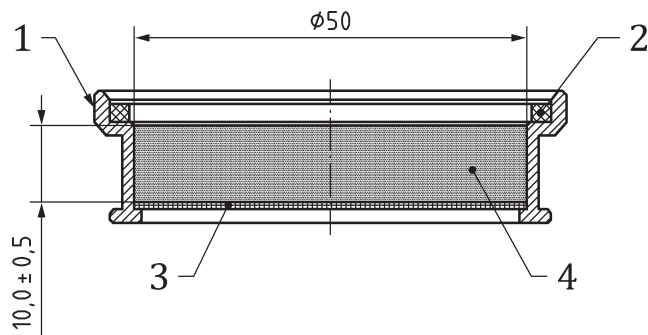

Key

- 1 vessel
- 2 sealing ring
- 3 perforated diaphragm
- 4 sorbent

Figure 3 — Section of sorbent-containing column

The number of sections has to be adapted with regard to the uncertainties of the measurement.

5.5 Measuring devices

The uncertainties of the following measurement devices shall be known:

- temperature sensors;
- pressure sensors,
- relative humidity sensors;
- gamma activity detectors;
- flow rate sensors.

Typical uncertainties are given in [9.3](#).

5.6 Conditions for achieving equilibrium during the test

Prior to testing the sorbent in the sectional column, test conditions shall be maintained such that the conditions for the equilibrium of water vapours inside the samples are achieved (humidifier conditions at gas flow velocity, Q_{col}). This is generally done in 16 h for around 15 cm thickness of sorbent.

5.7 Safe conditions for workers and members of the public

The tests use a radioactive form of iodine. Thus, the tests shall be performed following national radiation protection regulations (for workers and members of the public) in force in the country. All the handling with radioactive iodine solutions and iodine vapours shall be performed under protective glove boxes. The glove box should be in a negative pressure enough to avoid to spread contaminated flows to the rooms.

The test installations shall be equipped with specific protection devices allowing to efficiently reduce the iodine releases towards the environment (e.g. protection columns represented in the equipment 10 of the [Figure 1](#)), connected to the air ventilation system of the building. Examples of protection columns are made with silver impregnated zeolites, silver impregnated aluminium oxide and qualified activated charcoal.

6 Test conditions

In order to ensure accurate and comparable measurement of sorbent performance, the following conditions shall be met.

The following parameters shall be specified with their accuracy:

- specified temperature;
- specified gas relative humidity;
- gas flow transit time through the sorbent layer (contact duration);
- concentration of $\text{CH}_3^{131}\text{I}$ in gas;
- specified CH_3I mass concentration in gas.

The absolute pressure shall be measured for the test, and the accuracy of the measurement shall be known.

The relative humidity and the gas flow of the test bench are set to achieve nominally each relative humidity (RH) conditions for the sorbent on the scale 30 % RH to 90 % RH.

The following parameters are fixed, within range intervals, for the purpose of estimating the potential to use sorbents under high relative humidity (abnormal) conditions and comparing the charcoal performance index:

- specified gas relative humidity: $(90,0 \pm 3) \%$ in order to cover accidental conditions;
- specified temperature: $(30,0 \pm 0,5) \text{ }^\circ\text{C}$;
- gas flow transit time through the sorbent layer (contact duration) — contact time in the range from 0,20 s to 0,40 s;
- concentration of $\text{CH}_3^{131}\text{I}$ in gas: from 10^3 Bq/m^3 (for the efficiency of the test) to a higher concentration to be defined with regard to worker safety;
- mass concentration of methyl iodide (mostly the stable one) in gas flow: 1 mg/m^3 to 20 mg/m^3 (adsorption versus temperature is a linear function for methyl iodide concentration in this region).

Additionally, the total tested sorbent layer shall be sufficiently thick for the formation of an active mass transfer zone.

Other comparisons at other humidity levels (e.g. 30 % RH, 40 % RH, 70 % RH) or test temperature (e.g. room temperature) shall also be possible, but exclusively with the same specified conditions.

NOTE The experience at a laboratory scale has shown good repeatability of the results with these parameters.

7 Sorbent testing

Each section of the sectional column (see [Figure 3](#)) is weighed, the sections are filled with the sorbent, after which each section is once again weighed. Based on the difference in weights and bulk density, the sorbent volume, V_i , in each section is determined.

Sorbent volume in the column, V_{sorb} , is calculated using [Formula \(3\)](#):

$$V_{\text{sorb}} = \frac{G_{\text{sorb}}}{\rho_{\text{sorb}}} \quad (3)$$

where

- G_{sorb} sorbent mass in the column;
 ρ_{sorb} sorbent bulk density.

The sectional column is assembled and hermetically connected to thermostat gas lines. Radioactive methyl iodide is placed into the generator. The humidifier is filled in with demineralized water or filled with normal water with a specific demineralization system.

The humidifier temperature and gas flow velocity are set to achieve nominally the specified humidity conditions for sorbent.

Approximate volumetric gas flow rate, Q , is calculated on the basis of the values of fraction free volume in the sorbent volume and chosen contact time, τ , using [Formula \(4\)](#):

$$Q = \frac{V_{\text{fr}}}{\tau} \quad (4)$$

The free volume V_{fr} is calculated using the formula:

$$V_{\text{fr}} = \chi \cdot V_{\text{sorb}} \quad (5)$$

where

- χ fraction free volume in sorbent volume.

When data related to free volume is absent, a nomogram (see [Figure 4](#)) can be used to determine the free volume, based on experimental values[2][5][6].

In the example of [Figure 4](#), ℓ is the granule size (mm) and $(\ell_{\text{min}} - \ell_{\text{max}})$ corresponds to a granules range of 93 % to 98 % of the granules number.

Draw a straight line connecting corresponding values of minimal and maximal granule size through the plenum fraction scale. The point of intersection shows the desired value.

The uncertainty related to the free volume shall be established.

For the example of [Figure 4](#), the uncertainties are linked on the χ fraction free volume on the nomogram and to the data used to establish the nomogram are 8 %.

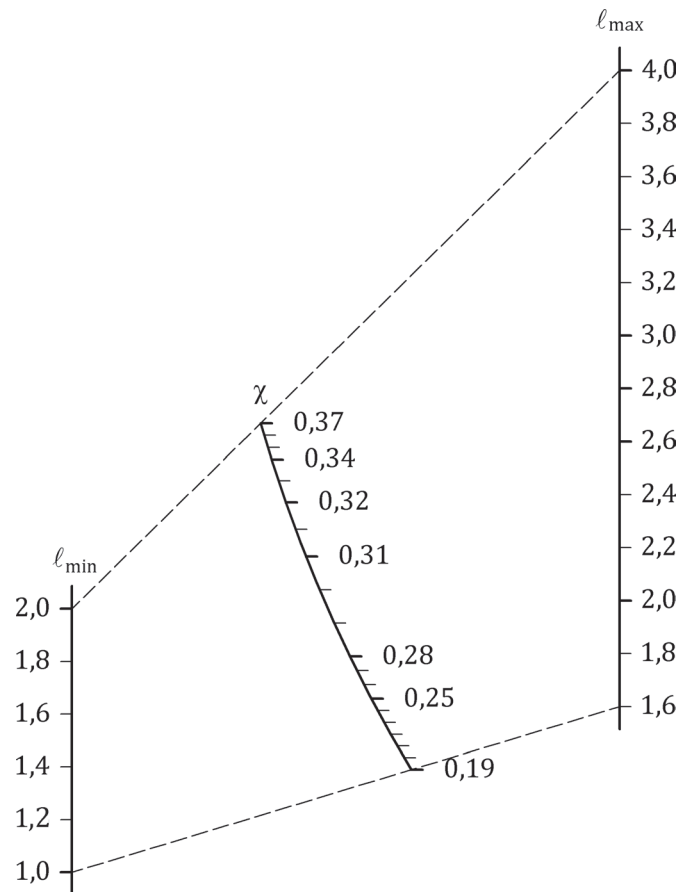


Figure 4 — Nomogram for defining the fraction of free volume in the entire volume containing granulated activated non-compressed charcoal to be used when free volume data are absent

8 Test performance

The test procedure is as follows.

- The specified conditions (as identified in [Clause 6](#)) are maintained stable during all the test.
- $\text{CH}_3^{131}\text{I}$ vapour injection into the gas flow is started, and gas mixing continues for enough time to identify a distribution along the sections (typically 3 h for around 15 cm thickness, to be adapted depending of the mass transfer zone). After this time, the injection is stopped and sorbent test is then terminated.
- The columns are removed from the test equipment and disassembled into separate sections (if any).
- ^{131}I activity is measured in each section. ^{131}I activity is measured in terms of gamma radiation line with 0,364 MeV energy and converted into Becquerel's. The measurement uncertainties shall be known.
- The environment protection column is removed from the plant and ^{131}I activity is also measured in the sorbent.
- Gas activity concentration is defined as the ratio of the activity measurement for the whole sectional columns and protection columns divided by the total volume of gas that passed through the sorbent.
- Mass concentration is defined as the ratio of all the activity measurement for sorbents in test and protection columns divided by the specific activity of $\text{CH}_3^{131}\text{I}$ and the total volume of gas that passed through the sorbent.

9 Determination of the sorption capacity index

9.1 Sorption capacity index determination

The determination procedure is as follows.

Determine the activity of sorbent for each section of column and the activity of the protection column.

Determine the activity relative to mass of sorbent for each section column A.

Calculate total sum activity A, Bq, using [Formula \(6\)](#):

$$A = A_{\text{col}} + A_{\text{pr}} \quad (6)$$

where

A_{col} activity of sectional column;

A_{pr} activity of protection column.

If injected activity is known, compare it with the total sum activity A. If the difference is higher than the accuracy of the tests measurement, the results of the test cannot be used and the installation shall be checked.

Calculate air flow rate in the inlet of the column containing tested sorbent Q_{col} (cm³/s) using [Formula \(7\)](#):

$$Q_{\text{col}} = \frac{(p_0 - \phi_1 \cdot p_1^0) \cdot Q_{\text{in}} \cdot T_2}{(p_2 - \phi_2 \cdot p_2^0) \cdot T_1} \cdot \left(1 + \frac{\phi_2 \cdot p_2^0}{p_2} \right) \quad (7)$$

where

p_0 barometric air pressure, Pa (kPa);

ϕ_1 relative humidity of atmospheric air inlet, before conditioning, fraction;

p_1^0 saturated water vapour pressure at T_1 , Pa (kPa);

Q_{in} air flow rate in the plant inlet, cm³/s;

T_1 atmospheric air temperature, K;

T_2 operating temperature of the column, K;

p_2 absolute pressure gas flow measured in the input to the column with tested sorbent, Pa (kPa);

ϕ_2 measured relative humidity of gas flow passing into the column with tested sorbent, fraction;

p_2^0 saturated water steam pressure at the column operating temperature with tested sorbent, Pa (kPa).

Mass concentration of methyl iodide in gas flow during performance testing sorbent is calculated using [Formula \(8\)](#):

$$C = \frac{A}{I \times V} \quad (8)$$

where

C mass concentration of methyl iodide, kg/m³ (mg/m³);

I mass activity concentration of methyl iodide labeled by isotope of ¹³¹I, Bq/g;

V total volume of gas passed through column during performance testing sorbent, m³.

Concentration shall be between 1 mg/m³ to 20 mg/m³.

Further to construct plot ($\ln A_i$) as function along layer of sorbent (L).

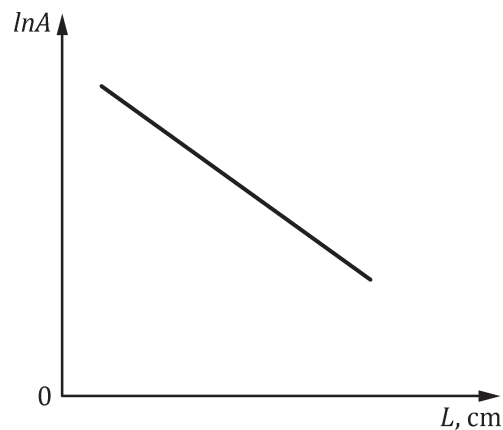


Figure 5 — Logarithmic activity distribution along sorbent layer

If the experimental line is linear ([Figure 5](#)) it means the distribution of radioactive methyl iodide is circumscribed exponential law and on the basis results of measurement can calculate sorption capacity index, if not the sorption capacity index cannot be calculated.

9.2 Calculating sorption capacity index

Determine volume of sorbent in each section column using [Formula \(9\)](#):

$$V_i = \frac{g_i}{\rho} \quad (9)$$

where

V_i volume of sorbent in section, cm³;

g_i mass of sorbent in section, g;

ρ bulk density, g/cm³.

Calculate $\ln \frac{A}{A - \sum_{i=1}^m A_i}$ for the layers of sorbent in column.

Calculate real contact time for each section using [Formula \(10\)](#), where $m \leq n$:

$$\tau_i = \frac{\chi \cdot \sum_{i=1}^n V_i}{Q_{\text{col}}} \quad (10)$$

where

Q_{col} air flow rate as calculated in [Formula \(7\)](#);

χ fraction free volume in sorbent volume.

Construct plot $\ln \frac{A}{A - \sum_{i=1}^m A_i}$ as a linear function of τ (see [Figure 6](#)).

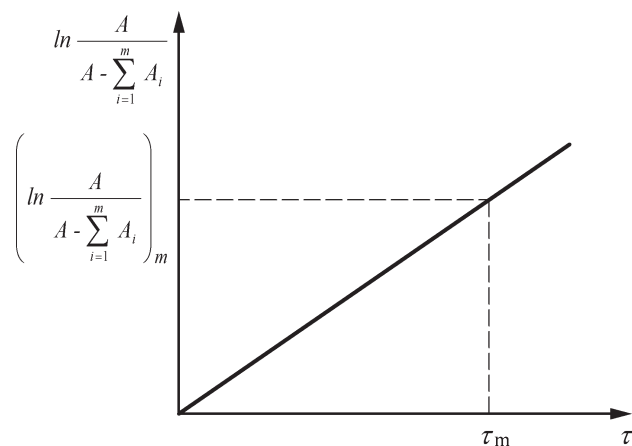


Figure 6 — Logarithm activity as function contact time

For any contact time, find the value logarithm ratio activities using the plot.

The sorption capacity index of the sorbent ξ , is calculated according to [Formula \(11\)](#) for the contact time 0,2 s to 0,4 s:

$$\xi = \frac{1}{\tau} \left(\ln \frac{A}{A - \sum_{i=1}^m A_i} \right)_m \quad (11)$$

For an example using sorption index, see [Annex D](#).

9.3 Uncertainties of measurements

All the uncertainties shall be consistent with the range of parameters to control defined in [Clause 6](#), and in any case shall be less than the ones described in the [Table 1](#).

Table 1 — Measurement accuracy requirement for instrumentation

Measuring parameters	Limiting error for the maximum sensor range
Atmospheric air	
— absolute pressure	±1,0 kPa
— temperature	±1,0 °C
— relative humidity	±1,5 %
— gas flow speed	±5 %
Inlet sectional column	
— absolute pressure	±1,0 %
— temperature	±0,5 °C
— relative humidity	±3,0 %
— pressure differential in the column	±1,0 %
Test sample	
— weighting sample	±0,01 g
Radiometric unit	
— sample activity	±3,0 %
Fraction of free volume	±8 %

All the uncertainties values in [Table 1](#) are expanded relative uncertainties (denoted U) of ±1 (66 % confidence interval).

The global uncertainty value is expressed at an enlarged confidence interval of 2 sigma (95 %).

10 Documenting test results

The test results shall comprise the following elements:

- test report (see [Annex A](#));
- internal test report (see [Annex B](#));
- measurement results (see [Annex C](#)).

For the purpose of solving potential controversial issues, the tested samples may be stored in the laboratory for a given period with a specified date for the sample.

Annex A (normative)

Format of test report (for the customer)

Laboratory

Title
Address
Phone (fax) No.
E-mail address

Date of testing

The person who conducted the test
Name
Position
Signature

Customer:

Title
Address
Phone (fax) No.

Rated test conditions (to be expressed with measurement uncertainties):

Sorbent (sample) reference

Temperature _____ K (°C)

Relative humidity _____ %

Gas flow rate _____ m³/s (cm³/s)

Column diameter _____ m (mm)

Sorbent layer thickness _____ m (mm)

Contact time _____ s

Injected activity (if known) _____ Bq

Conclusion:

1 Sorbent sorption capacity index (ξ) _____ s⁻¹;

2 Comments

_____ (approver name and signature)

Annex B (normative)

Format of internal test report

Sample characteristic and delivery data

Date of testing

Instrumentation references

Temperature measurement

Relative humidity measurement

Pressure measurement

Gas flow rate measurement

Activity detectors

Sorbent preliminary humidification conditions (to be expressed with measurement uncertainties)

Temperature _____ K (°C)

Relative humidity _____ %

Absolute pressure _____ Pa (kPa)

Gas flow rate _____ m³/s (cm³/s)

Preliminary humidification duration _____ hours

Iodine source activity

Iodine chemical form

Activity of the source (A) at date _____ Bq at

Mass of the source (M) _____ g

Mass activity concentration (A/M) _____ Bq/g

Sorbent test conditions

Temperature _____ K (°C)

Relative humidity _____ %

Absolute pressure _____ Pa (kPa)

Actual gas flow rate _____ m³/s (cm³/s)

CH₃¹³¹I activity concentration in gas flow _____ Bq/m³

Methyl iodide mass concentration in gas flow _____ mg/m³

Annex C (normative)

Measurements results

(to be expressed with measurement uncertainties)

Sorbent reference

Methyl iodide mass activity concentration _____ Bq/g (Bq/mg)

Activity of the sorbent in the column, Bq

section 1

section 2

section 3

section 4

section 5

section 6

section 7

section 8

section 9

section 10

section 11

section 12

section 13

section 14

section 15

Total activity of the sorbent in tested and protection _____ Bq
columns

Annex D (informative)

Example of expected results for sorption capacity index

Example of satisfactory radioiodine removal can be guaranteed on condition that concentration radioactive methyl iodide in gas phase reduces more than 100 times for the time that gas flow passes through the retention system of the ventilation^[4]. (DF for the global retention system >100).

Consequently, the sorption capacity index of the sorbent, ξ , shall be more than $\xi = \frac{4,605}{\tau}$ to be suitable for use in a nuclear facility.

The experimental results received with method of this document are described in [Table D.1](#).

Table D.1 — Example of results sorption capacity index (ξ) for testing the different iodine sorbents

Sorbent	Sire granules mm	Part of free volume	Contact time (τ), s	ξ s ⁻¹	$\xi = 4,605/\tau$ s ⁻¹
SKT-ZIK	1,0 to 2,5	0,28	0,24	20,7 ± 0,7	19,2
208 B5 + TEDA (5 % mass)	1,2 to 2,4	0,25	0,24	22,3 ± 0,9	19,2
CKT-3 + TEDA (3 % mass)	1,6 to 3,0	0,31	0,24	29,9 ± 0,9	19,2
NWC 6/12 + TEDA (6,5 % mass)	1,7 to 3,4	0,34	0,21	31,3 ± 1	21,9
NWC 6/12 + TEDA (3% mass) + BaI2 (2 % mass)	1,7 to 3,4	0,34	0,21	29,9 ± 0,9	21,9
Mass concentration of methyl iodide: (2 – 10) mg/m ³ ; Activity of CH ₃ ¹³¹ I: (10 ⁴ – 10 ⁶) Bq/m ³ ; Temperature: (30,0 ± 0,2) °C; Relative Humidity: (90,0 ± 1,5) %; TEDA – 1,4 - Diazabicyclo(2.2.2)octane.					

According to results of different iodine sorbents testing described in [Table D.1](#), all researched samples decrease CH₃¹³¹I concentration in 100 times in (0,21 to 0,24) s of contact time even if the relative gas humidity is high (90,0 ± 1,5) %.

NOTE Sorption capacity index increases with the decrease of relative humidity and increase of temperature^[5].

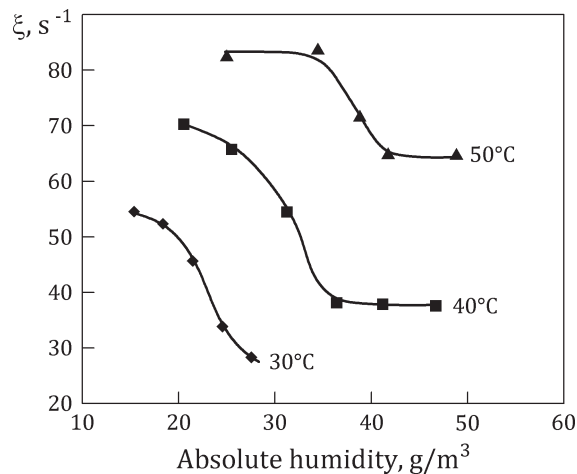


Figure D.1 — Temperature and air humidity influence on sorption capacity index

Sorbent: SKT-ZIK;

Contact time: (0,22±0,01) s;

Activity of $\text{CH}_3^{131}\text{I}$ $\text{CH}_3^{131}\text{I}$: ($10^5 - 10^6$) Bq/m³;

Mass concentration CH_3I in gas stream: (3 to 5) mg/m³.

WARNING — Work effectiveness of single iodine sorbents and their combinations in ventilation systems of nuclear facilities is defined by the decontamination factor value which depends mostly on device construction, sorption properties and granulation of used iodine sorbent, temperature, humidity and speed of the gas stream, height and density of sorbent layer filling in the tool, and other external factors.

Decontamination factor in the industrial ventilation systems used in the nuclear facilities shall be measured in *in situ* test and can be defined using different methods. These tests and methods are not in the scope of this document.

Bibliography

- [1] ASTM D3803-91, *Standard test method for nuclear-grade activated carbon*
- [2] GOST R 54443-2011, *Iodine sorbents for nuclear power plants method for defining sorption capacity index*
- [3] Testing and Monitoring of Off-Gas Cleanup Systems at Nuclear Facilities. *Technical Reports Series* N° 243. IAEA, Vienna, 1984, pp. 28
- [4] Radioiodine removal in nuclear facilities. *Methods and techniques for normal and emergency situations*. Technical Reports Series N° 201. IAEA, Vienna, 1980, pp. 22
- [5] Evaluation of the sorbent layer thickness in iodine filters — Journal. At. Energy. 2011, **110** (1) pp. 55–58 [L.N Rastunov and al.]
- [6] Sorption power — a control test for impregnated carbons for nuclear power plants — Journal. At. Energy. 2010, **109** (1) p. 3 [L.N Rastunov and al.]
- [7] Radiation protection and safety of radiation sources: international basic safety standards: general safety requirements. — GSR Part 3 — Interim edition. — Vienna: International Atomic Energy Agency, 2014
- [8] IAEA Safety Glossary. Terminology Used in Nuclear Safety and Radiation Protection, 2007 Edition, pp. 211-212

British Standards Institution (BSI)

BSI is the national body responsible for preparing British Standards and other standards-related publications, information and services.

BSI is incorporated by Royal Charter. British Standards and other standardization products are published by BSI Standards Limited.

About us

We bring together business, industry, government, consumers, innovators and others to shape their combined experience and expertise into standards-based solutions.

The knowledge embodied in our standards has been carefully assembled in a dependable format and refined through our open consultation process. Organizations of all sizes and across all sectors choose standards to help them achieve their goals.

Information on standards

We can provide you with the knowledge that your organization needs to succeed. Find out more about British Standards by visiting our website at bsigroup.com/standards or contacting our Customer Services team or Knowledge Centre.

Buying standards

You can buy and download PDF versions of BSI publications, including British and adopted European and international standards, through our website at bsigroup.com/shop, where hard copies can also be purchased.

If you need international and foreign standards from other Standards Development Organizations, hard copies can be ordered from our Customer Services team.

Copyright in BSI publications

All the content in BSI publications, including British Standards, is the property of and copyrighted by BSI or some person or entity that owns copyright in the information used (such as the international standardization bodies) and has formally licensed such information to BSI for commercial publication and use.

Save for the provisions below, you may not transfer, share or disseminate any portion of the standard to any other person. You may not adapt, distribute, commercially exploit, or publicly display the standard or any portion thereof in any manner whatsoever without BSI's prior written consent.

Storing and using standards

Standards purchased in soft copy format:

- A British Standard purchased in soft copy format is licensed to a sole named user for personal or internal company use only.
- The standard may be stored on more than 1 device provided that it is accessible by the sole named user only and that only 1 copy is accessed at any one time.
- A single paper copy may be printed for personal or internal company use only.

Standards purchased in hard copy format:

- A British Standard purchased in hard copy format is for personal or internal company use only.
- It may not be further reproduced – in any format – to create an additional copy. This includes scanning of the document.

If you need more than 1 copy of the document, or if you wish to share the document on an internal network, you can save money by choosing a subscription product (see 'Subscriptions').

Reproducing extracts

For permission to reproduce content from BSI publications contact the BSI Copyright & Licensing team.

Subscriptions

Our range of subscription services are designed to make using standards easier for you. For further information on our subscription products go to bsigroup.com/subscriptions.

With **British Standards Online (BSOL)** you'll have instant access to over 55,000 British and adopted European and international standards from your desktop. It's available 24/7 and is refreshed daily so you'll always be up to date.

You can keep in touch with standards developments and receive substantial discounts on the purchase price of standards, both in single copy and subscription format, by becoming a **BSI Subscribing Member**.

PLUS is an updating service exclusive to BSI Subscribing Members. You will automatically receive the latest hard copy of your standards when they're revised or replaced.

To find out more about becoming a BSI Subscribing Member and the benefits of membership, please visit bsigroup.com/shop.

With a **Multi-User Network Licence (MUNL)** you are able to host standards publications on your intranet. Licences can cover as few or as many users as you wish. With updates supplied as soon as they're available, you can be sure your documentation is current. For further information, email subscriptions@bsigroup.com.

Revisions

Our British Standards and other publications are updated by amendment or revision.

We continually improve the quality of our products and services to benefit your business. If you find an inaccuracy or ambiguity within a British Standard or other BSI publication please inform the Knowledge Centre.

Useful Contacts

Customer Services

Tel: +44 345 086 9001

Email (orders): orders@bsigroup.com

Email (enquiries): cservices@bsigroup.com

Subscriptions

Tel: +44 345 086 9001

Email: subscriptions@bsigroup.com

Knowledge Centre

Tel: +44 20 8996 7004

Email: knowledgecentre@bsigroup.com

Copyright & Licensing

Tel: +44 20 8996 7070

Email: copyright@bsigroup.com

BSI Group Headquarters

389 Chiswick High Road London W4 4AL UK