INTERNATIONAL STANDARD

ISO 14649-12

First edition 2005-12-15

Industrial automation systems and integration — Physical device control — Data model for computerized numerical controllers —

Part 12:

Process data for turning

Systèmes d'automatisation industrielle et intégration — Commande des dispositifs physiques — Modèle de données pour les contrôleurs numériques informatisés —

Partie 12: Données de procédé pour le tournage



Reference number ISO 14649-12:2005(E)

PDF disclaimer

This PDF file may contain embedded typefaces. In accordance with Adobe's licensing policy, this file may be printed or viewed but shall not be edited unless the typefaces which are embedded are licensed to and installed on the computer performing the editing. In downloading this file, parties accept therein the responsibility of not infringing Adobe's licensing policy. The ISO Central Secretariat accepts no liability in this area.

Adobe is a trademark of Adobe Systems Incorporated.

Details of the software products used to create this PDF file can be found in the General Info relative to the file; the PDF-creation parameters were optimized for printing. Every care has been taken to ensure that the file is suitable for use by ISO member bodies. In the unlikely event that a problem relating to it is found, please inform the Central Secretariat at the address given below.

© ISO 2005

All rights reserved. Unless otherwise specified, no part of this publication may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without permission in writing from either ISO at the address below or ISO's member body in the country of the requester.

ISO copyright office
Case postale 56 • CH-1211 Geneva 20
Tel. + 41 22 749 01 11
Fax + 41 22 749 09 47
E-mail copyright@iso.org
Web www.iso.org

Published in Switzerland

Contents Page

Foreword	vi
Introduction	vii
1 Scope	1
2 Normative references	1
3 Terms and definitions	2
3.1 Roughing	2
3.2 Finishing	2
4 Process data for turning	2
4.1 Header and references	2
4.2 Manufacturing features for turning	3
4.2.1 General	3
4.2.2 Turning feature	3
4.2.3 Outer round	4
4.2.3.1 General	4
4.2.3.2 Outer diameter	4
4.2.3.3 Outer diameter to shoulder	5
4.2.4 Revolved feature	6
4.2.4.1 General	6
4.2.4.2 Revolved flat	7
4.2.4.3 Revolved round	7
4.2.4.4 Groove	8
4.2.4.5 General revolution	9
4.2.5 Knurl	10
4.2.5.1 General	10
4.2.5.2 Straight knurl	11
4.2.5.3 Diagonal knurl	11
4.2.5.4 Diamond knurl	11
4.2.5.5 Tool knurl	12
4.3 Machining workingstep for turning	12
4.3.1 Turning workingstep	12
4.4 Machining operations for turning	13
4.4.1 General	13
4.4.2 Turning technology	13
4.4.2.1 General	

4.4.2.2 Spee	d select	14
4.4.2.3 Cons	t spindle speed	14
4.4.2.4 Cons	t cutting speed	14
4.4.2.5 Feed	select	15
4.4.2.6 Feed	velocity type	15
4.4.2.7 Feed	per rev type	15
4.4.3 Turnin	g machine functions	15
4.4.3.1 Gene	ral	15
4.4.3.2 Coola	ant select	16
4.4.4 Turnin	g machining strategy	17
4.4.4.1 Gene	ral	17
4.4.4.2 Unidi	rectional turning	18
4.4.4.3 Bidire	ectional turning	19
4.4.4.4 Conto	our turning	20
4.4.4.5 Threa	nd strategy	21
4.4.4.5.1	General	21
4.4.4.5.2	Thread cut depth type	21
4.4.4.5.3	Threading direction type	22
4.4.4.6 Groov	ving strategy	22
4.4.4.6.1	General	22
4.4.4.6.2	Multistep grooving strategy	23
4.4.4.7 Explic	cit turning strategy	24
4.4.5 Turnin	g machining operation	24
4.4.5.1 Gene	ral	24
4.4.5.2 Facin	g	25
4.4.5.2.1	General	25
4.4.5.2.2	Facing rough	25
4.4.5.2.3	Facing finish	26
4.4.5.3 Groov	ving	26
4.4.5.3.1	General	26
4.4.5.3.2	Grooving rough	26
4.4.5.3.3	Grooving finish	27
4.4.5.3.4	Cutting in	27
4.4.5.3.5	Dwell select	28
4.4.5.3.6	Dwell time	28
4.4.5.3.7	Dwell revolution	28
4.4.5.4 Conto	puring	28
4.4.5.4.1	General	28
4.4.5.4.2	Contouring rough	29

4.4.5.4.3	Contouring finish	29
4.4.5.5 Thre	eading	29
4.4.5.5.1	General	29
4.4.5.5.2	Threading rough	30
4.4.5.5.3	Threading finish	30
4.4.5.6 Knu	ırling	30
Annex A: (norma	ative) EXPRESS expanded listing	31
Annex B: (informative) EXPRESS-G diagramAnnex C: (informative) Turning specific features		39
		44
		44
C.2 Circular	face	44
C.2.1 General		44
C.2.2 Face radiused		45
C.2.3 Bottom transition		46
C.2.3.1 Bottom_transition_slope		46
C.2.3.2 Bottom_transition_round		46
C.3 Cut in		47
Annex D: (inform	native) Simple turning example	49
Annex E: (informative) Complex turning example		52
Index		58

Foreword

ISO (the International Organization for Standardization) is a worldwide federation of national standards bodies (ISO member bodies). The work of preparing International Standards is normally carried out through ISO technical committees. Each member body interested in a subject for which a technical committee has been established has the right to be represented on that committee. International organizations, governmental and non-governmental, in liaison with ISO, also take part in the work. ISO collaborates closely with the International Electrotechnical Commission (IEC) on all matters of electrotechnical standardization.

International Standards are drafted in accordance with the rules given in the ISO/IEC Directives, Part 2.

The main task of technical committees is to prepare International Standards. Draft International Standards adopted by the technical committees are circulated to the member bodies for voting. Publication as an International Standard requires approval by at least 75 % of the member bodies casting a vote.

Attention is drawn to the possibility that some of the elements of this document may be the subject of patent rights. ISO shall not be held responsible for identifying any or all such patent rights.

ISO 14649-12 was prepared by Technical Committee ISO/TC 184, *Industrial automation systems and integration*, Subcommittee SC 1, *Physical device control*.

ISO 14649 consists of the following parts, under the general title *Industrial automation systems and integration*— *Physical device control*— *Data model for computerized numerical controllers*:

- Part 1: Overview and fundamental principles
- Part 10: General process data
- Part 11: Process data for milling
- Part 12: Process data for turning
- Part 111: Tools for milling machines
- Part 121: Tools for turning machines

Gaps in the numbering were left to allow further additions. ISO 14649-10 is the ISO 10303 Application Reference Model (ARM) for process-independent data. ISO 10303 ARMs for specific technologies are added after part 10.

ISO 14649 is harmonized with ISO 10303 in the common field of Product Data over the whole life cycle.

Introduction

Modern manufacturing enterprises are built from facilities spread around the globe, which contain equipment from hundreds of different manufacturers. Immense volumes of product information must be transferred between the various facilities and machines. Today's digital communications standards have solved the problem of reliably transferring information across global networks. For mechanical parts, the description of product data has been standardized by ISO 10303. This leads to the possibility of using standard data throughout the entire process chain in the manufacturing enterprise. Impediments to realizing this principle are the data formats used at the machine level. Most computer numerical control (CNC) machines are programmed in the ISO 6983 "G and M code" language. Programs are typically generated by computer-aided manufacturing (CAM) systems that use computer-aided design (CAD) information. However, ISO 6983 limits program portability for three reasons. First, the language focuses on programming the tool center path with respect to machine axes, rather than the machining process with respect to the part. Second, the standard defines the syntax of program statements, but in most cases leaves the semantics ambiguous. Third, vendors usually supplement the language with extensions that are not covered in the limited scope of ISO 6983.

ISO 14649 is a new model of data transfer between CAD/CAM systems and CNC machines, which replaces ISO 6983. It remedies the shortcomings of ISO 6983 by specifying machining processes rather than machine tool motion, using the object-oriented concept of Workingsteps. Workingsteps correspond to high-level machining features and associated process parameters. CNCs are responsible for translating Workingsteps to axis motion and tool operation. A major benefit of ISO 14649 is its use of existing data models from ISO 10303. As ISO 14649 provides a comprehensive model of the manufacturing process, it can also be used as the basis for a bi- and multi-directional data exchange between all other information technology systems.

ISO 14649 represents an object oriented, information and context preserving approach for NC-programming, that supersedes data reduction to simple switching instructions or linear and circular movements. As it is object- and feature oriented and describes the machining operations executed on the workpiece, and not machine dependent axis motions, it will be running on different machine tools or controllers. This compatibility will spare all data adaptations by postprocessors, if the new data model is correctly implemented on the NC controllers. If old NC programs in ISO 6983 are to be used on such controllers, the corresponding interpreters shall be able to process the different NC program types in parallel.

ISO TC 184/SC 1/WG 7 envisions a gradual evolution from ISO 6983 programming to portable feature-based programming. Early adopters of ISO 14649 will certainly support data input of legacy "G and M codes" manually or through programs, just as modern controllers support both command-line interfaces and graphical user interfaces. This will likely be made easier as open-architecture controllers become more prevalent. Therefore, ISO 14649 does not include legacy program statements, which would otherwise dilute the effectiveness of the standard.

Figure 1 of ISO 14649-1 shows the different fields of standardization between ISO 14649, ISO 10303 and CNC manufacturers with respect to implementation and software development.

Industrial automation systems and integration — Physical device control — Data model for computerized numerical controllers —

Part 12:

Process data for turning

1 Scope

This part of ISO 14649 specifies the technology specific data elements needed as process data for turning. Together with the general process data described in ISO 14649-10, it describes the interface between a computerized numerical controller and the programming system (i.e. CAM system or shop floor programming system) for turning. It can be used for turning operations on all types of machines including turning machine or lathe, or turning centers. In this version, feature and operation data models for conventional turning, involving only x and z movements, are covered. Features and operations for the composite machining including caxis operation will be covered in the later version of this document or in a separate document. Also, the scope of this part of ISO 14649 does not include any other technologies, like milling, grinding, contour cutting, or EDM. These technologies will be described in other parts of the ISO 14649 series.

The subject of the turning schema, which is described in this document, is the definition of technology specific data types representing machining features and processes for turning operation on lathes. Not included in this schema are representations, executable objects, and base classes which are common for all technologies. They are referenced from ISO 10303's generic resources and ISO 14649-10. The description of process data is done using the EXPRESS language as defined in ISO 10303-11. The encoding of the data is done using ISO 10303-21.

2 Normative references

The following referenced documents are indispensable for the application of this document. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments) applies.

ISO 10303-11:2004, Industrial automation systems and integration — Product data representation and exchange — Part 11: Description methods: The EXPRESS language reference manual

ISO 10303-21:2002, Industrial automation systems and integration — Product data representation and exchange — Part 21: Implementation methods: Clear text encoding of the exchange structure

ISO 10303-224: 2001, Industrial automation systems and integration — Product data representation and exchange — Part 224: Application protocol: Mechanical product definition for process planning using machining features

ISO 14649-1:2003, Industrial automation systems and integration — Physical device control — Data model for computerized numerical controllers — Part 1: Overview and fundamental principles

ISO 14649-10:2003, Industrial automation systems and integration — Physical device control — Data model for computerized numerical controllers — Part 10: General process data

ISO 14649-11:2004, Industrial automation systems and integration — Physical device control — Data model for computerized numerical controllers — Part 11: Process data for milling

3 Terms and definitions

For the purposes of this document, the terms and definitions given in ISO 14649-10 and the following apply.

3.1

Roughing

machining operation used to cut a part

NOTE While the aim of roughing is to remove large quantities of material in a short time, the surface quality is usually not important. The roughing operation is usually followed by a finishing operation, cf. finishing.

3.2

Finishing

machining operation used to cut a par

NOTE The finishing operation usually follows a roughing operation. The goal of finishing is to reach the surface quality required, cf. roughing.

4 Process data for turning

4.1 Header and references

The following listing gives the header for the turning schema and the list of types and entities, which are referenced within this schema.

```
SCHEMA turning_schema;
( *
  Version: 15
  Date : 05.01.2005
Author : ISO TC184/SC1/WG7
  Contact : Suk-Hwan Suh <shs@postech.ac.kr>
          Stefan Heusinger <stefan.heusinger@isw.uni-stuttgart.de>
* )
ISO 14649-10
(* Types from machining_schema
REFERENCE FROM machining_schema(
  axis2_placement_3d,
  bounded_curve,
  cartesian_point,
  direction,
  general_profile,
  identifier
  in_process_geometry,
  label,
  length measure,
  linear_profile,
  machine_functions,
  machining_operation,
  manufacturing_feature,
  material,
  open_profile,
  partial_area_definition,
```

```
partial_circular_profile,
  plane_angle_measure,
  positive_length_measure,
  positive ratio measure,
  pressure measure,
  property_parameter,
  rot speed measure,
  round_hole,
  speed_measure,
  taper_select,
  technology,
  thread,
  time_measure,
  toleranced length measure,
  two5D manufacturing feature,
  vee profile,
  workingstep);
ISO 14649-11
                                                          * )
(* Types from milling_ schema
REFERENCE FROM milling schema(
  adaptive_control,
  approach_retract_strategy,
  process_model_list);
```

4.2 Manufacturing features for turning

4.2.1 General

The base class of all features used for turning is the *turning_feature*. The *turning_feature* is a subclass of the *two5D_manufacturing_feature* described in ISO 14649-10. The turning features described in this clause are fully harmonized with ISO 10303 AP224. Features that can be obtained by turning operation, as well as milling operation, such as *round_hole* and *thread*, are not described in this part of ISO 14649; but users can use these features by referencing ISO 14649-10. Also, *toolpath_feature* which is defined in ISO 14649-10 can be used for the toolpath type features in turning.

4.2.2 Turning feature

The entity *turning_feature* is the abstract base class for all features used for turning. The defined turning features are classified geometric shapes that can be obtained by turning the cylindrical workpiece with 2-axis (x and z) operation or 3-axis (x, z, and c) operation (Figure 1). In this version, features that can be obtained by 3-axis operation are not included as stated in Clause 1.

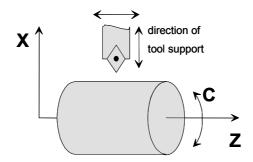


Figure 1: Axis and motion nomenclature of turning operation

Currently, the following features are included: outer_round (outer_diameter, outer_diameter_to_shoulder), revolved_feature (revolved_flat, revolved_round, groove, general_revolution), knurl (straight_knurl, diagonal_knurl, diamond_knurl, tool_knurl).

NOTE: Turning specific features; i.e., features which are not defined in AP224, but frequently used in common practice, such as *cut_in*, *circular_face* (including *end_face* and *step_face*) are described in Annex C of this document.

```
ENTITY turning_feature
   ABSTRACT SUPERTYPE OF (ONEOF(outer_round, revolved_feature, knurl))
   SUBTYPE OF (two5D_manufacturing_feature);
END_ENTITY;
```

4.2.3 Outer round

4.2.3.1 **General**

An *outer_round* is a type of *turning_feature* that is an outline or significant shape that is swept through a complete revolution about an axis. Each *outer_round* is either an *outer_diameter* or an *outer_diameter_to_shoulder*. The axis of revolution shall be the same as the z-axis of the feature.

```
ENTITY outer_round
   ABSTRACT SUPERTYPE OF (ONEOF (outer_diameter, outer_diameter_to_shoulder))
   SUBTYPE OF (turning_feature);
END ENTITY;
```

4.2.3.2 Outer diameter

The *outer_diameter* is a subtype of *outer_round* that is a sweeping of an outline specified by a line segment one complete revolution about an axis. The line is finite in length and coplanar with the axis. The *outer_diameter* (Figure 2) may have a constant diameter around the axis of rotation (cylinder; left figure), or it may be tapered (cone; right figure). In case of the definition of a cylinder the *diameter_at_placement* and the *feature_length* are sufficient. A cone describes a continual transition from one diameter to another diameter across a certain *feature_length*. For its definition the additional attribute *reduced_size* is used. In other words, cone and cylinder, which are commonly used on the shop floor, can be respectively represented by *outer_diameter* or *outer_diameter* with taper as shown in Figure 2.

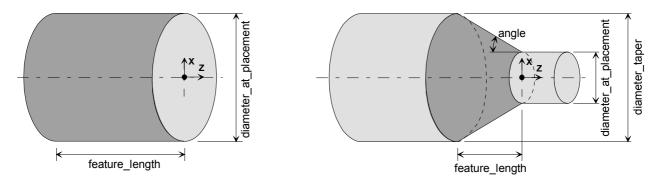


Figure 2: Outer_diameter (left) and outer_diameter with taper (right)

```
ENTITY outer_diameter
   SUBTYPE OF (outer_round);
   diameter_at_placement : toleranced_length_measure;
   feature_length : toleranced_length_measure;
   reduced_size : OPTIONAL taper_select;
END_ENTITY;
```

diameter_at_placement: This attribute describes the diameter at the side of the feature, where the origin of

the co-ordinate system of the feature's placement is defined.

feature_length: The length of the feature. Its length is measured along its rotation axis from z = 0 of

the feature's co-ordinate system to the leftmost point (negative value of z) of the

feature.

reduced_size: The optional attribute reduced_size makes it possible to distinguish between the

definition of cylinder and cone. If omitted, the feature *outer_diameter* describes a cylinder. A cone can be described by one of the methods defined in taper_select, which is defined in ISO 14649-10. For defining a cone, it can be selected between two possibilities. If a *diameter_taper* is used, this is the diameter of the opposite side of the feature's placement co-ordinate system. If an *angle_taper* is chosen for describing the cone, this angle is the angle between the negative z-axis and the line on the positive x-side of the z-axis defined by the intersection of the cone with the xz-plane of the feature, extended to meet the z-axis. An angle greater than 0 degrees and less than 90 degrees indicates a cone with increasing diameter for decreasing z-values, an angle between 0 degrees and –90 degrees indicates a cone

with decreasing diameter for decreasing z-values.

4.2.3.3 Outer diameter to shoulder

An outer_diameter_to_shoulder is a type of outer_round that is a sweeping of a shape one complete revolution about an axis. The shape shall be specified by two lines that connect at a point and extend infinitely. The enclosed angle shall be smaller than 180°.

NOTE: A turning specific feature which is frequently used on the shop floor, the *step_face* can be represented by *outer_diameter_to_shoulder*. Details for *step_face* are described in Annex C.2.

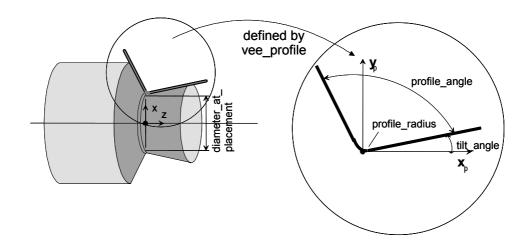


Figure 3: Outer_diameter_to_shoulder

```
ENTITY outer_diameter_to_shoulder
   SUBTYPE OF (outer_round);
   diameter_at_placement : toleranced_length_measure;
   v_shape_boundary : vee_profile;
END_ENTITY;
```

diameter_at_placement: This attribute describes the diameter at the feature's placement (co-ordinate

system). The z co-ordinate is the position where the two sides of the vee profile

come together.

v shape boundary: An outline or shape that shall be revolved about an axis. The vee profile specifies

the revolved shape required by an *outer_diameter_to_shoulder*. The placement of the profile shall be along the x-axis of the *outer_diameter_to_shoulder* at a specified distance away from the origin. The orientation of the y-axis of the *vee_profile* shall be the same as the x-axis of the *outer_diameter_to_shoulder* and the x-axis of the *vee_profile* shall be the same as the z-axis of the *outer_diameter_to_shoulder*.

4.2.4 Revolved feature

4.2.4.1 **General**

A revolved_feature is a subtype of turning_feature that is a sweeping of a planar profile on complete revolution about the z-axis. The planar profile shall be finite in length, coplanar with the axis of revolution, and shall not intersect the axis of revolution. The revolved_feature may be either an outer shape of a part or a volume removal, depending on the material side. Each revolved_feature is one of the following: general_revolution, groove, revolved_flat, or revolved_round.

```
ENTITY revolved_feature
   ABSTRACT SUPERTYPE OF (ONEOF (revolved_round, revolved_flat, groove,
   general_revolution))
   SUBTYPE OF (turning_feature);
   material_side : OPTIONAL direction;
   radius : length_measure;
END_ENTITY;
```

material_side: The *material_side* specifies the material removal direction; i.e., the direction towards

which the material moves as it is removed from the part. The material_side direction

is defined in the feature co-ordinate system.

The distance from the axis of rotation to define placement of the profile that will be swept about the axis. The value of this *length_measure* shall be greater or equal to

Ω

4.2.4.2 Revolved flat

radius:

The revolved_flat is a type of revolved_feature that is the sweeping of a straight line about an axis.

NOTE: A turning specific feature which is frequently used on the shop floor, the *circular_face* can be represented by *revolved_flat*. Details for this feature are described in Annex C.2.

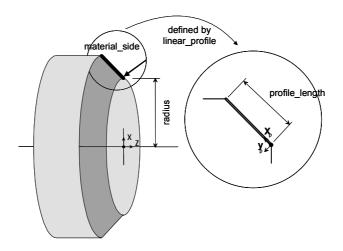


Figure 4: Revolved flat

```
ENTITY revolved_flat
   SUBTYPE OF (revolved_feature);
   flat_edge_shape : linear_profile;
END ENTITY;
```

flat edge shape:

A linear profile that when revolved about an axis defines the shape of an area of the part. The placement of the profile shall be along the x-axis of the <code>revolved_flat</code> at a distance specified by the inherited attribute <code>radius</code> away from the origin. The z-axis orientation of the <code>linear_profile</code> shall be the same as the y-axis of the <code>revolved_flat</code>, the x-axis and z-axis are independent of the orientation of the <code>revolved_flat</code> feature.

4.2.4.3 Revolved round

The revolved round is a subtype of revolved feature that is the sweeping of an arc about an axis.

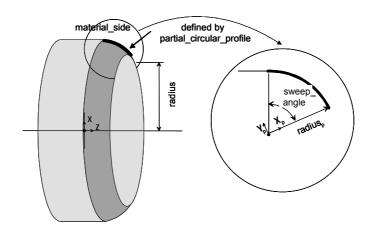


Figure 5: Revolved round

```
ENTITY revolved_round
   SUBTYPE OF (revolved_feature);
   rounded_edge_shape : partial_circular_profile;
END_ENTITY;
```

rounded edge shape:


This attribute specifies the arc that when revolved about an axis defines the shape of an area of the part. The placement of the profile shall be along the x-axis of the revolved_round at a distance specified by the inherited attribute radius away from the origin. The z-axis orientation of the partial_circular_profile shall be the same as the y-axis of the revolved_round, the x-axis and y-axis are independent of the orientation of the revolved_round feature.

4.2.4.4 Groove

The *groove* is a type of *revolved_feature* that is a narrow channel or depression that is swept through one complete revolution about an axis. The face shape that has the groove applied to it is determined by the profile orientation as shown in Figure 6.

NOTE:

A commonly used feature in shop floor, such as cut_in , the shape that is obtained by applying a cutting tool, can be represented by the groove feature. Refer to Annex C.3 for the details. Standardized undercuts for shoulders (represented by the turning feature $outer_diameter_to_shoulder$) and threads (represented by thread) may be represented by restrictions on a $square_u_profile$ defining the groove's shape.

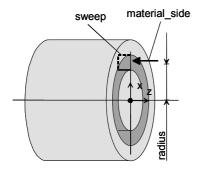

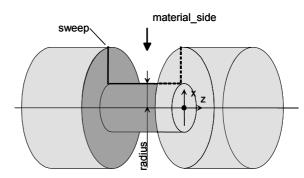


Figure 6: Groove

```
ENTITY groove
   SUBTYPE OF (revolved_feature);
   sweep : open_profile;
END ENTITY;
```

sweep:

An outline or shape that shall be revolved about an axis. The *open_profile* specifies the sweep shape required by a groove. The groove bottom condition can be described by using the subtypes of *open_profile* defined in ISO 14649-10, such as *square_u_profile*, *rounded_u_profile*, *partial_circular_profile*, and *general_profile*. The placement of the profile shall be along the x-axis of the *groove* at a distance specified by the inherited attribute *radius* away from the origin. The z-axis orientation of the *open_profile* shall be the same as the y-axis orientation of the *groove* feature. The x- and y-axis orientations of the *open_profile* are independent of the orientation of the *groove* feature. The *groove* feature may be defined on different faces of a part depending on the orientation of the profile.

4.2.4.5 General revolution

The general_revolution is a subtype of revolved_feature that is an arbitrary planar shape swept one complete revolution about a z-axis. The arbitrary planar shape shall be finite in length, coplanar with the axis of revolution, and shall not intersect the axis of revolution. The general_revolution may be either an outer shape of a part or a volume removal, depending on the material direction.

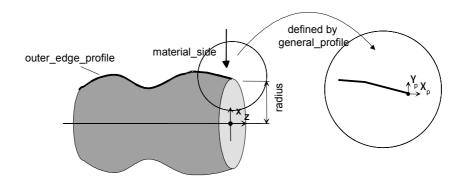


Figure 7: General revolution

```
ENTITY general_revolution
   SUBTYPE OF (revolved_feature);
   outer_edge_profile : general_profile;
END ENTITY;
```

outer_edge_profile:

This attribute describes the shape of a *general_revolution* using a *general_profile*. The placement of the profile shall be along the x-axis of the *general_revolution* at a specified distance away from the origin. This distance is expressed with the attribute *radius* inherited from the base class.

4.2.5 Knurl

4.2.5.1 General

A *knurl* is a type of *turning_feature* which is a scoring pattern consisting of a series of shallow cuts on a cylindrical surface. In general special tools are used for applying knurls. Each *knurl* is assigned on the cylindrical surface of the base feature. The entity *knurl* is the abstract base class for the following kind of knurls: *straight_knurl*, *diagonal_knurl*, *diamond_knurl*, and *tool_knurl*. The knurl's placement (shown in the figures as co-ordinate system with index "k"), which is inherited from the entity *turning_feature*, is relative to the placement of the base feature.

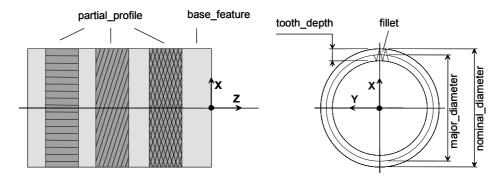


Figure 8: Knurl with basic parameters

```
ENTITY knurl
   ABSTRACT SUPERTYPE OF (ONEOF(straight_knurl, diagonal_knurl, diamond_knurl, tool_knurl))
   SUBTYPE OF (turning_feature);
   base_feature : turning_feature;
   partial_profile : OPTIONAL partial_area_definition;
   tooth_depth : OPTIONAL toleranced_length_measure;
   diametral_pitch : OPTIONAL toleranced_length_measure;
   root_fillet : OPTIONAL toleranced_length_measure;
   number_of_teeth : OPTIONAL INTEGER;
   major_diameter : OPTIONAL toleranced_length_measure;
   nominal_diameter : OPTIONAL toleranced_length_measure;
   END_ENTITY;
```

base feature: A reference to a feature on which the *knurl* is applied.

partial_profile: This optional attribute can be used for limiting the area, the *knurl* is applied on. If

omitted, the length of the base_feature is used.

tooth depth: The depth from the crest of a tooth to the point where two teeth intersect.

diametral_pitch: The ratio of the *nominal_diameter* to the number of teeth in the circumference.

root_fillet: The attribute root_fillet specifies the dimension of a radius between teeth on a

knurling tool.

number_of_teeth: The number of teeth in the circumference produced on the part surface. The

number_of_teeth need not be specified for a particular knurl. If nominal_diameter and diametral_pitch are also given, this attribute has to hold the quotient of

norminal_diameter to diametral_pitch.

major_diameter: The size of the part before a *knurl* is applied to it.

nominal_diameter: The size of the part after a *knurl* has been applied.

4.2.5.2 Straight knurl

A *straight_knurl* is a type of *knurl* in which the knurl scoring is parallel to the axis of the scored surface (z-axis). In Figure 9, x, z and x_k , z_k indicate the placement of the *base feature* and *knurl*, respectively.

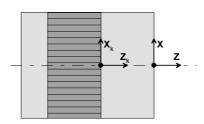


Figure 9: Straight knurl

```
ENTITY straight_knurl
   SUBTYPE OF (knurl);
END ENTITY;
```

4.2.5.3 Diagonal knurl

A diagonal_knurl is a type of knurl which makes it possible to define helical cuts at an angle about the axis of a surface.

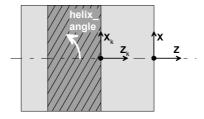


Figure 10: Diagonal knurl

```
ENTITY diagonal_knurl
   SUBTYPE OF (knurl);
   helix_angle : plane_angle_measure;
END ENTITY;
```

helix_angle: The helix_angle specifies the angle the knurl pattern makes with the orientation axis

of an applied to surface.

4.2.5.4 Diamond knurl

A diamond_knurl is a special knurl with two helical cuts on its surface. The angles of the two helixes are basically independent from each other.

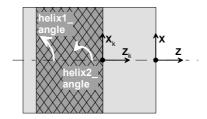


Figure 11: Diamond knurl

```
ENTITY diamond_knurl
   SUBTYPE OF (knurl);
   helix1_angle : plane_angle_measure;
   helix2_angle : OPTIONAL plane_angle_measure;
END ENTITY;
```

helix1 angle: This attribute specifies the angle of the first scratch against the z-axis.

helix2_angle: The angle of the second helical cut. If helix2_angle is not given, the angle of the

second scratch shall be calculated by the controller as: 180° - helix1_angle.

4.2.5.5 Tool knurl

A *tool_knurl* is the general knurl pattern that cannot be represented by any of above. A *tool_knurl* is only done with special tools, the *user_defined_turning_tool* for knurls defined in ISO 14649-121.

```
ENTITY tool_knurl
   SUBTYPE OF (knurl);
END_ENTITY;
```

4.3 Machining workingstep for turning

4.3.1 Turning workingstep

A single turning feature may be made using a *machining_workingstep* from ISO 14649-10. On a turning workpiece, however, it is often the case that several connected turning features can be made simultaneously by a single turning operation, and, for efficiency, should be made that way. A *machining_workingstep* is not able to perform an operation over a list of features. Therefore, the *turning_workingstep* has been defined that allows a single operation to be applied to a list of connected features. The connected features have to be ordered by decreasing z-values of the feature placement. The inherited attribute *its_secplane* refers to the first feature of the feature list. The operation might be a *contouring* operation using the *contour turning* strategy defined in 5.4.

```
ENTITY turning_workingstep
   SUBTYPE OF (workingstep);
   its_features : LIST [2:?] OF manufacturing_feature;
   its_operation : turning_machining_operation;
   its_effect : OPTIONAL in_process_geometry;
END_ENTITY;
```

its_features: This attribute describes a list of at least two manufacturing_features upon which the

turning_workingstep operates. It is used to connect several features to perform a

contouring operation.

its operation: The operation which will be performed upon the list of *manufacturing features*. The

operation must be a member of the *manufacturing feature*'s list of operations.

its_effect: The change to the geometry of the workpiece effected by the operation. A CAM

system can use this attribute to describe the predicted effect of this operation on the geometry of the workpiece. If given, the controller can compare the geometry change described by this attribute with the geometry change predicted by its internal algorithm. ISO 14649 does not describe how closely the two geometries must match

in order for the controller to be considered to be in conformance.

4.4 Machining operations for turning

4.4.1 General

In this section all machining operations and technology specific data are introduced which will be needed for turning.

4.4.2 Turning technology

4.4.2.1 General

This entity defines the technological parameters of the turning operation. It is a subtype of entity *technology* defined in ISO 14649-10 of this standard. The feed rate for the x- and z-axis is defined through the *feed_rate* property or alternatively by the *feed_per_revolution*, which is inherited from the entity's upper class. If its_adaptive_control is invoked, some or all of the values from *turning_technology* may be ignored.

```
ENTITY turning_technology
   SUBTYPE OF (technology);
   spindle_speed
                             : speed_select;
   feed per revolution
                             : OPTIONAL feed per rev type;
   sync spindle and z feed
                             : BOOLEAN;
   inhibit feedrate override : BOOLEAN;
   inhibit spindle override : BOOLEAN;
   its adaptive control
                             : OPTIONAL adaptive control;
WHERE
   WR1: (EXISTS(SELF.feedrate) AND NOT EXISTS(SELF.feedrate_per_revolution)) OR
  (NOT EXISTS(SELF.feedrate) AND EXISTS(SELF.feedrate_per_revolution));
END ENTITY;
```

spindle_speed: The attribute spindle_speed makes it possible to select between constant spindle

speed and constant speed at the surface.

feed per revolution: This optional attribute makes it possible to define the feed rate alternatively to the

inherited *feedrate* from the entity *technology* in millimetre per revolution.

sync_spindle_and_z_feed: If true, feed rate in z and spindle speed shall be synchronised. Therefore, the pitch of

tap can be kept constant at the beginning or the end of a thread when feed rate is

ISO 14649-12:2005(E)

being accelerated or decelerated. If false, feed rate in z and spindle speed are

controlled independently.

inhibit_feedrate_override: If true, the feed rate override through the operating panel or by adaptive control

systems shall not be allowed. If false, the feed rate override through the operating

panel or by adaptive control systems shall be allowed.

inhibit_spindle_override: If true, the spindle speed override through the operating panel or by adaptive control

systems shall not be allowed. If false, the spindle speed override through the

operating panel or by adaptive control systems shall be allowed.

its_adaptive_control: Any kind of vendor specific adaptive control strategy.

4.4.2.2 Speed select

This type is used for selecting the mode of speed control for the lathe spindle. In general two possibilities have to be considered. In the first case a constant spindle speed is given; this speed is measured in revolutions per second. The second case is used for keeping the speed at the surface of the workpiece constant; the unit of this speed is meter per second.

```
TYPE speed_select = SELECT (const_spindle_speed, const_cutting_speed);
END_TYPE;
```

4.4.2.3 Const spindle speed

With this entity, a constant rotational speed of the spindle can be given. The speed shall be kept constant at each position of the diameter.

```
ENTITY const_spindle_speed;
  rot_speed : rot_speed_measure;
END_ENTITY;
```

rot_speed:

Constant speed of the spindle. As defined for the property *rot_speed_measure*, positive values indicate counterclockwise rotation as viewed from the positive z-axis.

4.4.2.4 Const cutting speed

If this entity for defining the speed is chosen, the spindle speed shall be adapted in the way that the speed at the surface is constant. This means that the smaller the diameter of the machined surface is the higher is the spindle speed and vice versa.

```
ENTITY const_cutting_speed;
   speed : speed_measure;
   max_speed : OPTIONAL rot_speed_measure;
END_ENTITY;
```

speed: A constant speed at the surface of the workpiece. The speed means the tangential

velocity at the tool tip while removing material. Positive values indicate

counterclockwise rotation as viewed from the positive z-axis.

max_speed: With this optional attribute the maximal rotational speed can be limited. While

decreasing the diameter of the machined surface, the spindle speed has to be raised. For very small radii the spindle speed becomes very high and is limited by the capabilities of the lathe. If max_speed is given, it should always be positive as

the rotational speed will be limited by the absolute value of max_speed.

4.4.2.5 Feed select

This type is used to define the feed measure as velocity or as propagated distance per revolution.

```
TYPE feed_select = SELECT (feed_velocity_type, feed_per_rev_type);
END_TYPE;
```

4.4.2.6 Feed velocity type

This type is used to specify the feed in meters per second.

```
TYPE feed_velocity_type = speed_measure;
END_TYPE;
```

4.4.2.7 Feed per rev type

This type is used to specify the feed in millimeter per revolution.

```
TYPE feed_per_rev_type = REAL;
END_TYPE;
```

4.4.3 Turning machine functions

4.4.3.1 General

This entity describes the state of various functions of the machine, like coolant, chip removal, etc. to be applied during the time span of an operation. It is a subtype of entity *machine_functions* defined in ISO 14649-10. Note that some attributes of *turning_machine_functions* are the same as those of *milling_machine_functions* defined in ISO 14649-11.

```
ENTITY turning_machine_functions
  SUBTYPE OF (machine_functions);
  coolant : BOOLEAN;
  coolant_type : OPTIONAL coolant_select;
  coolant_pressure : OPTIONAL pressure_measure;
```

ISO 14649-12:2005(E)

axis_clamping : LIST [0:?] OF identifier;

tail_stock : OPTIONAL BOOLEAN;
steady_rest : OPTIONAL BOOLEAN;
follow_rest : OPTIONAL BOOLEAN;

END ENTITY;

coolant : If true, the coolant shall be activated. If false, the coolant shall not be activated.

coolant_type: Optional specification of the type of the coolant. Only valid if coolant is true.

coolant_pressure : Optional specification of the pressure of the coolant system. Only valid if coolant is

true.

axis clamping: Describes which axes are to be clamped, e.g. x, z, c. Note that this information is

machine dependent and should be avoided.

chip_removal: This attribute is used to define if the machine has additional capabilities for breaking

or removing chips. If the attribute is set to true, the chip removal system shall be

activated. If it is false, the chip removal system shall not be activated.

oriented_spindle_stop: If specified, the spindle will stop in the given direction relative to the machine zero

position of the c-axis in case a spindle stop occurs during or at the end of the workingstep. This option is especially used for complete machining, i.e. if a milling

operation is applied.

its_process_model: Optional information for process control.

other_functions : Optional list of other functions of generic type.

tail_stock: If true, the tail stock of the lathe shall be used to provide a fixture at the end of the

part opposite from the chuck. If false, the tail stock of the lathe shall not be used.

steady rest: If true, the steady rest of the lathe shall be used to make long and delicate spindle

turnings. If false, the follow rest of the lathe shall not be used.

follow rest: If true, the follow rest of the lathe shall be used to keep slender workpiece from

flexing and climbing the tool. If false, the follow rest of the lathe shall not be used.

4.4.3.2 Coolant select

This is to describe the type of coolant. It is one of three types; flood, mist and through_tool.

TYPE coolant_select = ENUMERATION OF (flood, mist, through_tool); END_TYPE;

4.4.4 Turning machining strategy

4.4.4.1 General

This entity is used as abstract supertype for the description of the strategy used for creating a turning toolpath. It is a subtype of entity *machining_strategy* defined in ISO 14649-10. All directions defined in subtypes are related to the workpiece co-ordinate system.

NOTE:

Milling and drilling type strategies such as two5d_milling_strategy and drilling_type_strategy are not described in this document. Although they are not defined as the subtypes of turning_machining_strategy, the user can use them by referencing the respective operations defined in ISO 14649-11.

```
ENTITY turning_machining_strategy

ABSTRACT SUPERTYPE OF (ONEOF (unidirectional_turning, bidirectional_turning, thread_strategy, contour_turning, grooving_strategy,
explicit_turning_strategy));
overcut_length : OPTIONAL length_measure;
allow_multiple_passes : OPTIONAL BOOLEAN;
cutting_depth : LIST[0:?] OF length_measure;
variable_feedrate : OPTIONAL positive_ratio_measure;
END ENTITY;
```

overcut length:

The over travel length on the open side(s) of the feature. It is not allowed for manufacturing of features which are bounded by material on all sides, e.g. grooves.

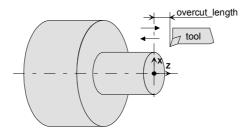


Figure 12: Overcut length of the tool

allow_multiple_passes:

Optional flag only for roughing workingsteps. If true, this is the standard roughing operation with multiple passes, i.e. several layers of material are removed sequentially, taking into account the list of cutting depth. If false, this is the special roughing operation for pre-cast features with one pass. Default is true.

cutting_depth:

If the material to be removed is too thick to be removed in a single pass, it must be removed in several passes. Each entry of the optional *cutting_depth* list stands for the thickness (not the total depth) that shall be removed in the respective pass (until all material to be removed is removed). The number of elements in the list is not required to be equal to the number of passes. If the cutting depth list is empty, the number of passes and the depth of each pass shall be implementation dependent. If there are more passes than list entries, the last entry shall be used for the remaining passes. If there are more list entries than passes, the surplus entries shall be ignored. If *allow_multiple_passes* is false and a *cutting_depth* list is given, only the first entry shall be used.

variable_feedrate:

The changed feed rate for the cutting of subsequent layer with respect to the current feed rate. For instance, 0.8 means that the feed rate for the second and third layer cut are respectively 0.8 * f, and 0.8 * 0.8 * f, where f is the feed rate given as feedrate or feed per revolution of turning technology.

4.4.4.2 Unidirectional turning

Unidirectional_turning means turning in a linear fashion, i.e. going from one side to the other, then lifting the tool and going back to the starting point of feed movement. The starting point has always to be outside of the contour. As shown in Figure 13 solid bold lines mean removal of material and the dashed lines are rapid movements. After the approach of the tool (1), the cutting begins in the feed_direction (2). By reaching the end position the tool shall be lifted up to a desired height (3); the back path is executed in rapid feed. The starting point for the next cutting is reached by moving the tool in a stepover_feed usually perpendicular to the feed_direction (4). The length of the component of this movement perpendicular to the feed_direction is the lift height plus the cutting depth (inherited from the upper class). After the last cut the tool shall be moved corresponding to the retract strategy (5) and then the retract rapid movement will be done (6). Especially for roughing operations, the tool might follow uneven feature outlines whilst feed movement before moving in back path direction.

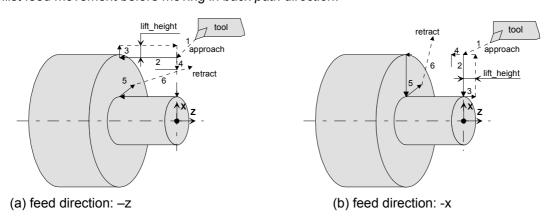


Figure 13: Unidirectional turning

```
ENTITY unidirectional_turning
   SUBTYPE OF (turning_machining_strategy);
   feed_direction : OPTIONAL direction;
   back_path_direction : OPTIONAL direction;
   lift_direction : OPTIONAL direction;
   stepover_direction : OPTIONAL direction;
   lift_height : OPTIONAL length_measure;
   lift_feed : OPTIONAL feed_select;
   stepover_feed : OPTIONAL feed_select;
```

feed_direction: This optional attribute describes the main direction of tool movement for removing

material. If this value is not specified, the feed_direction shall be parallel to the z-axis

and points to smaller values of z.

back path direction: The direction of the tool movement to go back where the infeed movement for the

next feed movement starts.

lift_direction: The direction of the tool movement from feed_direction to the back_path_direction. If

omitted, the *lift_direction* shall be perpendicular to the *feed_direction*.

stepover_direction: The direction of the tool movement from back_path_direction to the feed_direction. If

omitted, the stepover direction shall be perpendicular to the back path direction.

lift_height: This property specifies the length of the lift movement. If not given, the stepover

movement shall occur to the *retract_plane* of the corresponding operation.

lift_feed: Feed rate for a lift movement. If omitted, the feed of turning_technology is used.

stepover_feed: This optional attribute makes it possible to define a feed rate for the

stepover_direction.

4.4.4.3 Bidirectional turning

Turning in both directions of an axis as shown in Figure 14. *Bidirectional_turning* means that cutting is started from one side, e.g. after the approach (1). On reaching the other side via the toolpath (2) the cutting tool moves downwards (3) and then back to the first side, while also removing material (4). Note that special tools are needed for bi-directional turning (neutral tools). These tools must be able to cut their way in the stepover direction (3) and backward direction (4) too. For example a tool, used for grooving, which blade is along the front side is not able to cut sideways. For *bidirectional_turning*, direction (4) shall be opposite to direction (2) (turned 180 degrees).

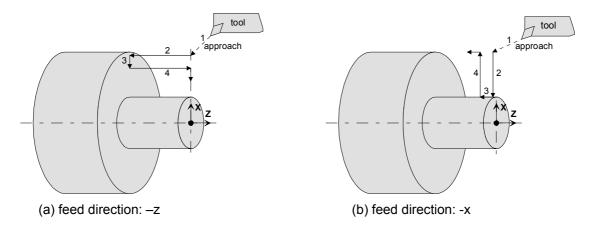


Figure 14: Bidirectional turning

```
ENTITY bidirectional_turning
   SUBTYPE OF (turning_machining_strategy);
   feed_direction : OPTIONAL direction;
   stepover_direction : OPTIONAL direction;
   stepover_feed : OPTIONAL feed_select;
END ENTITY;
```

feed direction: The direction of the first tool path for the cutting operation. If this value is not

specified, it shall be parallel to the z-axis and points to smaller values of z.

stepover_direction: The direction of the tool movement from one tool path to the next tool path. If

omitted, it shall be perpendicular to the feed direction.

stepover_feed: This optional attribute specifies the feed rate of stepover_direction if different to the

feed specified by turning technology.

4.4.4.4 Contour turning

This entity is a subtype of *turning_machining_strategy*. This strategy is to cut along feature's outline or profiles (Figure 15). Mainly, contour turning is used for roughing of pre-casted workpieces and finish cutting of features. The contour turning can be executed over a list of features (see *turning_workinstep* detailed in 4.3).

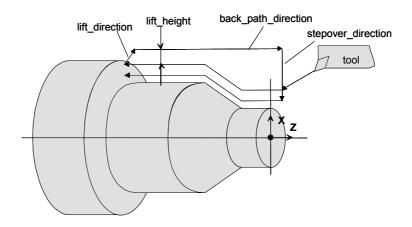


Figure 15: Contour turning

```
ENTITY contour_turning
   SUBTYPE OF (turning_machining_strategy);
   feed_direction
                         : OPTIONAL direction;
    back_path_direction
                           : OPTIONAL direction;
   lift_direction
                         : OPTIONAL direction;
   stepover_direction
                          : OPTIONAL direction;
   lift_height
                          : OPTIONAL length_measure;
   lift feed
                          : OPTIONAL feed select;
   stepover_feed
                          : OPTIONAL feed select;
   variable stepover feed : OPTIONAL positive ratio measure;
END ENTITY;
```

feed_direction: This optional attribute describes the main direction of tool movement for removing

material. If this value is not specified, the feed_direction shall be parallel to the z-axis

and points to smaller values of z.

back_path_direction: The direction of the tool movement to go back where the next feed movement starts.

lift_direction: The direction of the tool movement from feed_direction to the back_path_direction. If

omitted, the *lift_direction* shall be in direction of the surface normal of the feature end

point where the lift motion is initiated.

stepover_direction: The direction of the tool movement from back_path_direction to feed_direction. If

omitted, the stepover direction shall be perpendicular to the back path direction.

lift height: This property specifies the length of the stepover movement. If not given, the

stepover movement shall occur to the *retract_plane* of the corresponding operation.

lift feed: Feed rate for a lift movement. Default is the feed of turning technology.

stepover_feed: This optional attribute makes it possible to define a feed rate for the

stepover_direction.

variable_stepover_feed: The changed stepover feed of subsequent layer with respect to the current

 $stepover_feed$. For instance, 0.8 means that the stepover feed for the second and third layer cut are respectively 0.8 * f, and 0.8 * 0.8 * f, where f is the $stepover_feed$

given as an attribute of contour_turning.

4.4.4.5 Thread strategy

4.4.4.5.1 General

The *thread_strategy* is a subtype of *turning_machining_strategy* for cutting a thread.

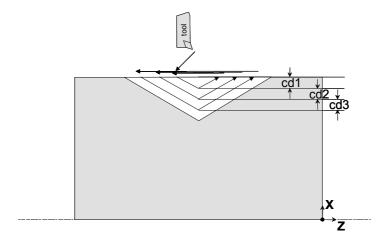


Figure 16: Thread strategy

```
ENTITY thread_strategy
   SUBTYPE OF (turning_machining_strategy);
   cut_in_amount_function : thread_cut_depth_type;
   threading_direction : threading_direction_type;
   path_return_angle : OPTIONAL plane_angle_measure;
   lift_height : OPTIONAL positive_length_measure;
END ENTITY;
```

cut in amount function: The attribute specifies the amount of cut-in depth.

threading direction: The attribute specifies the pass-pattern of machining a thread.

path_return_angle: The path_return_angle specifies the angle for the lift movement measured against

the positive z-axis of the thread.

lift_height: This optional attribute specifies the height of the back path movement over the

major_diameter of the thread.

4.4.4.5.2 Thread cut depth type

This entity describes the cutting depth for each pass. It is one of three types; constant_depth, variable_depth, and constant_removal_amount (Figure 17). If the constant_depth is used, the first entry of the cutting_depth list will be used. If the variable depth is used, the list of cutting_depth is used. If there are more passes than entries, the last

entry will be used for remained pass. If there are more entries than passes, other cutting depths are ignored. constant_removal_amount is to keep the same material removal volume for each of cut. If constant_removal_amount is selected, the actual cutting depth is determined by the CNC. In this case the first entry in the list for cutting_depth is applied for the first cut. If the list for cutting_depth is empty, the chosen depths are implementation dependent.

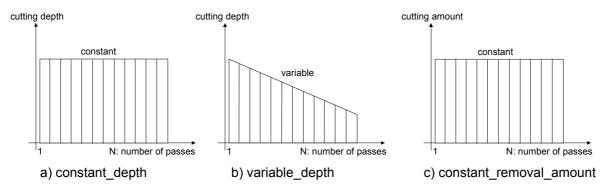


Figure 17: Thread cut depth type for threading

```
TYPE thread_cut_depth_type = ENUMERATION OF (constant_depth, variable_depth,
    constant_removal_amount);
END_TYPE;
```

4.4.4.5.3 Threading direction type

This entity describes the pass pattern of machining a thread. There are five directions to be distinguished.

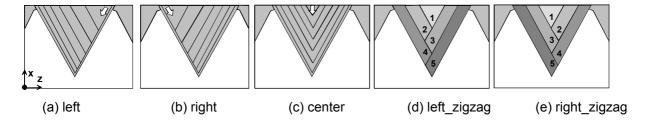


Figure 18: Threading direction type

```
TYPE threading_direction_type = ENUMERATION OF (left, right, center, left_zigzag,
    right_zigzag);
END_TYPE;
```

4.4.4.6 Grooving strategy

4.4.4.6.1 General

The *grooving_strategy* is a subtype of *turning_machining_strategy*. It is used for cutting any kind of grooves which can not be machined with contouring operations.

```
ENTITY grooving_strategy
   SUPERTYPE OF (multistep_grooving_strategy)
   SUBTYPE OF (turning_machining_strategy);
   grooving_direction : OPTIONAL direction;
   travel distance
                     : OPTIONAL length measure;
END ENTITY;
```

This optional attribute is used to specify the direction of the plunge movement. If grooving direction:

omitted, the material_side of the associated groove shall be applied.

travel distance: The optional attribute travel distance specifies the length of the tool movement to

the next path on the operation's retract plane. If omitted, the actual travel distance

may be chosen depending on the tool. Refer also to Figure 19.

4.4.4.6.2 Multistep grooving strategy

The multistep_grooving_strategy is a subtype of grooving_strategy. This strategy is used where the depth of the groove is too deep, so it is impossible to cut the groove with a single cut. The depth of each step is given by cutting depth defined in 4.4.3.

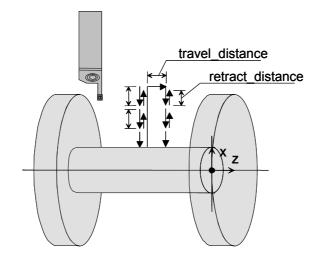


Figure 19: Grooving strategy, including multistep grooving strategy

```
ENTITY multistep_grooving_strategy
   SUBTYPE OF (grooving_strategy);
   retract_distance : length_measure;
END_ENTITY;
```

retract distance:

If retract distance is a positive value, the tool shall be retracted this value between steps to enable chip breaking in opposite direction of grooving direction. If retract distance is zero, tool motion shall stop briefly (long enough for the spindle to turn more than a quarter but less than a half revolution) between steps to break the chip. If retract distance is negative, the tool shall be retracted to the retract plane

between steps to clear the groove of chips.

4.4.4.7 Explicit turning strategy

Any turning strategy which cannot be described using any of the above given strategies can be specified using explicit_turning_strategy. In this case, an exact definition of all movements needs to be given in the attribute its_toolpath of the entity workingstep.

```
ENTITY explicit_turning_strategy
  SUBTYPE OF (turning_machining_strategy);
END ENTITY;
```

4.4.5 Turning machining operation

4.4.5.1 General

This is the base class of all operations for turning. It includes all necessary attributes to describe technology and cutting strategy. It is a subtype of entity machining_operation defined in ISO 14649-10. If the turning machining operation is referenced by a turning workingstep, the inherited attribute start point refers to the first feature in the list of the associated turning features.

In general, there are two types of machining operations: roughing and finishing. The roughing is to remove all material from the original raw piece surface down to the bottom or side of the feature minus the finishing allowance in multiple passes. The finishing will then remove the finishing allowance to yield the final form of the feature. Turning_machining_operation is one of the following: facing, grooving, contouring, threading, or knurling.

NOTE:

Milling and drilling type operations such as milling, drilling, boring, center drilling, reaming (which can be done by turning operation as well as milling operation) are not described in this document. Although they are not defined as the subtypes of turning_machining_operation, the user can use them by referencing the respective operations defined in ISO 14649-11.

```
ENTITY turning_machining_operation
  ABSTRACT SUPERTYPE OF (ONEOF(facing, grooving, contouring, threading,
  knurling))
  SUBTYPE OF (machining_operation);
                         : OPTIONAL approach_retract_strategy;
  approach
  retract
                         : OPTIONAL approach_retract_strategy;
  its_machining_strategy : OPTIONAL turning_machining_strategy;
END_ENTITY;
```

approach:

retract:

Optional information about approach strategy to reach the first cut. If multiple layers have to be cut, as specified by the attribute allow multiple passes, this strategy shall also be used to move from the back path movement to the start point of the next layer. Note that approach retract strategy is referenced from ISO 14649-11.

By default, the NC controller determines the approach strategy. It may decide not to use any approach movement at all if the start point of cutting coincides with the end point of cutting for the preceding operation. If its toolpath is given, this attribute shall be ignored.

Optional information about retract strategy after finishing the last cut. By default, the NC controller determines the retract strategy. It may decide not to use any retract movement at all if the end point of cutting coincides with the start point of cutting for the next operation. If its_toolpath is given, this attribute shall be ignored. Note that approach retract strategy is referenced from ISO 14649-11.

its machining strategy: Description of the strategy to be used while executing the turning operation

24

4.4.5.2 Facing

4.4.5.2.1 General

This entity describes a turning operation for face machining, which is used to describe machining of a plane surface on the end wall of a workpiece. The position of the feature is given through the attribute *feature_placement*. A plane face can also be obtained by cutting off the end of the workpiece (cutting off is dealt in a corresponding 4.4.5.3).

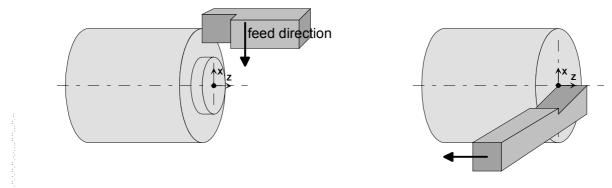


Figure 20: Facing (radial and axial tool movement)

```
ENTITY facing
   ABSTRACT SUPERTYPE OF (ONEOF(facing_rough, facing_finish))
   SUBTYPE OF (turning_machining_operation);
   allowance : OPTIONAL length_measure;
END_ENTITY;
```

allowance:

The *allowance* is a depth of material which shall be left on top of the surface defined by the associated manufacturing feature (in the direction of the surface normal). The remaining material will be removed by the finishing operation.

4.4.5.2.2 Facing rough

This turning operation is used for roughing operation for facing. This operation makes it possible to remove all material until the allowance measured from the feature's position is reached, disregarded special surface requirements.

```
ENTITY facing_rough
   SUBTYPE OF (facing);
WHERE
   WR1: EXISTS(SELF.allowance) AND (SELF.allowance >= 0.0);
END_ENTITY;
```

4.4.5.2.3 Facing finish

This turning operation is used as finishing operation for facing. It makes it possible to remove all material until the feature's position is reached, applying an appropriate strategy to maintain the given tolerances. If *allowance* is given, other special operations like grinding shall be applied for removing the material left.

```
ENTITY facing_finish
   SUBTYPE OF (facing);
END_ENTITY;
```

4.4.5.3 **Grooving**

4.4.5.3.1 General

This entity describes a turning operation for machining a *groove*. *Grooving* is a plunge cut operation mainly for making a bottom surface. For machining the side or wall of the groove, other operations (such as *facing* and *contouring*) may be necessary.

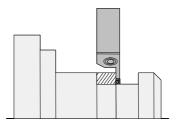


Figure 21: Grooving

```
ENTITY grooving
   ABSTRACT SUPERTYPE OF (ONEOF(grooving_rough, grooving_finish, cutting_in))
   SUBTYPE OF (turning_machining_operation);
   dwell : OPTIONAL dwell_select;
   allowance : OPTIONAL length_measure;
END_ENTITY;
```

dwell:

This is used to select the unit of dwell that the tool stays at the bottom of *groove*. It could be either time (seconds) or number of workpiece revolutions. If omitted, this

attribute shall be implementation dependent.

allowance:

The *allowance* is a depth of material which shall be left on top of the surface defined by the associated manufacturing feature (in the direction of the surface normal). The remaining material shall be removed by the finishing operation.

4.4.5.3.2 Grooving rough

Roughing operation for grooving. This operation makes it possible to remove all material until the allowance measured from the features position is reached, disregarded special surface requirements.

```
ENTITY grooving_rough
   SUBTYPE OF (grooving);
WHERE
   WR1: EXISTS(SELF.allowance) AND (SELF.allowance >= 0.0);
END_ENTITY;
```

4.4.5.3.3 Grooving finish

This turning operation is used for finishing grooving. It makes it possible to remove all material until the feature's position is reached, applying an appropriate strategy to maintain the given tolerances. If *allowance* is given, other special operations like grinding shall be applied for removing the material left.

```
ENTITY grooving_finish
   SUBTYPE OF (grooving);
END ENTITY;
```

4.4.5.3.4 Cutting in

This entity describes a turning operation for cutting into the material at a certain position without moving sideways. In this case the shape of the groove is dependent on the used tool. The *groove* machined by this operation is at most as wide as the tool. Since the requirements on the geometry of grooves machined by *cutting_in* operation are comparatively low, no roughing and finishing for *cutting_in* is distinguished. Figure 22 shows the *cutting_in* in radial and axial direction.

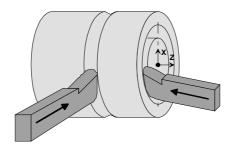


Figure 22: Cutting in (radial and axial direction)

If a shaft has a radial cut in the tool <u>must not</u> be moved in axial direction (i.e. perpendicular to the feed). If a *grooving_strategy* is applied and attribute *travel_length* is set, it will be ignored. The cutting in operation can be used for both, the cutting into the material and the cutting off. As mentioned in 4.4.5.2.1 it is possible to generate a face by cutting off the end of a shaft. For that the cutting in operation has to be done up to the center of the workpiece. In this case the tool tip must be able to reach this center (intersection between the x and z axis).

```
ENTITY cutting_in
   SUBTYPE OF (grooving);
WHERE
   WR1: NOT(EXISTS(SELF.allowance));
END ENTITY;
```

4.4.5.3.5 Dwell select

This type is used to select the unit of dwell, that the tool stays at the bottom of *groove*. It could be either time (seconds) or number of workpiece revolutions. For instance, depending on the *dwell_select* type, value of 1.5 means the tool has to stay for 1.5 seconds, or one and a half revolutions at the bottom.

```
TYPE dwell_select = SELECT (dwell_time, dwell_revolution);
END_TYPE;
```

4.4.5.3.6 Dwell time

This type is used to specify the time that the tool stays at the bottom of a *groove* in seconds.

```
TYPE dwell_time = time_measure;
END_TYPE;
```

4.4.5.3.7 Dwell revolution

This type is used to specify the number of workpiece revolutions that the tool stays at the bottom of a *groove*.

```
TYPE dwell_revolution = REAL;
END_TYPE;
```

4.4.5.4 Contouring

4.4.5.4.1 General

This operation may be used for turning of *outer_round* and *general_revolution*. It has to be distinguished between roughing and finishing operations. *Contouring* makes it possible to turn the contour of a given feature.

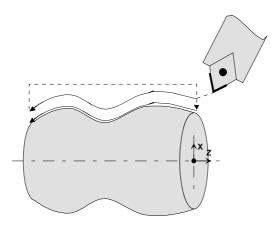


Figure 23: Contouring

```
ENTITY contouring
   ABSTRACT SUPERTYPE OF (ONEOF(contouring_rough, contouring_finish))
   SUBTYPE OF (turning_machining_operation);
   allowance : OPTIONAL length_measure;
END ENTITY;
```

allowance:

The *allowance* is a depth of material which shall be left on top of the surface defined by the associated manufacturing feature (in the direction of the surface normal). The remaining material shall be removed by the finishing operation.

4.4.5.4.2 Contouring rough

This turning operation is used for contour roughing. It makes it possible to remove of all material until the allowance measured from the position of the feature is reached, disregarded special surface requirements.

```
ENTITY contouring_rough
   SUBTYPE OF (contouring);
WHERE
   WR1: EXISTS(SELF.allowance) AND (SELF.allowance >= 0.0);
END_ENTITY;
```

4.4.5.4.3 Contouring finish

This turning operation is used for contour finishing. It makes it possible to remove all material until the feature's position is reached, applying an appropriate strategy to maintain the given tolerances. If *allowance* is given, other special operation like grinding shall be applied for removing the material left.

```
ENTITY contouring_finish
   SUBTYPE OF (contouring);
END_ENTITY;
```

4.4.5.5 Threading

4.4.5.5.1 General

This operation is used for turning threads. It has to be distinguished between roughing and finishing operations, leading to higher surface quality.

```
ENTITY threading
   ABSTRACT SUPERTYPE OF (ONEOF(threading_rough, threading_finish))
   SUBTYPE OF (turning_machining_operation);
   allowance : OPTIONAL length_measure;
END_ENTITY;
```

allowance:

The *allowance* is a depth of material which shall be left on top of the surface defined by the associated manufacturing feature (in the direction of the surface normal). The remaining material shall be removed by the finishing operation.

4.4.5.5.2 Threading rough

Roughing operation for turning threads. This operation makes it possible to remove all material until the allowance is reached, disregarded special surface requirements.

```
ENTITY threading_rough
   SUBTYPE OF (threading);
WHERE
   WR1: EXISTS(SELF.allowance) AND (SELF.allowance >= 0.0);
END_ENTITY;
```

4.4.5.5.3 Threading finish

This turning operation is used for finishing a thread. It makes it possible to remove all material until the feature's position is reached, applying an appropriate strategy to maintain the given tolerances. If *allowance* is given, other special operation like grinding shall be applied for removing the material left.

```
ENTITY threading_finish
   SUBTYPE OF (threading);
END_ENTITY;
```

4.4.5.6 Knurling

This operation is used for machine knurls. Knurling is done with special tools. It has not to be distinguished between roughing and finishing operations.

```
ENTITY knurling
   SUBTYPE OF (turning_machining_operation);
END_ENTITY;
```

Annex A:

(normative)

EXPRESS expanded listing

The following section shows the EXPRESS listing of ISO 14649-12: Process Data for Turning.

```
SCHEMA turning_schema;
( *
  Version: 15
  Date : 05.01.2005
Author : ISO TC184/SC1/WG7
  Contact : Suk-Hwan Suh <shs@postech.ac.kr>
           Stefan Heusinger <stefan.heusinger@isw.uni-stuttgart.de>
* )
ISO 14649-10
                                                                   * )
(* Types from machining_schema
REFERENCE FROM machining_schema(
  axis2_placement_3d,
  bounded_curve,
  cartesian_point,
  direction,
  general_profile,
  identifier,
  in_process_geometry,
  label,
  length_measure,
  linear_profile,
  machine_functions,
  machining_operation,
  manufacturing_feature,
  material,
  open_profile,
  partial area definition,
  partial_circular_profile,
  plane angle measure,
  positive length measure,
  positive ratio measure,
  pressure measure,
  property_parameter,
  rot_speed_measure,
  round_hole,
  speed_measure,
  taper_select,
  technology,
  thread,
  time_measure,
  toleranced_length_measure,
  two5D_manufacturing_feature,
```

ISO 14649-12:2005(E)

```
vee_profile,
  workingstep);
(* Types from milling_ schema
                                      ISO 14649-11
REFERENCE FROM milling schema(
  adaptive_control,
  approach_retract_strategy,
  process_model_list
);
ENTITY turning_feature
  ABSTRACT SUPERTYPE OF (ONEOF(outer_round, revolved_feature, knurl))
  SUBTYPE OF (two5D_manufacturing_feature);
END_ENTITY;
ENTITY outer_round
  ABSTRACT SUPERTYPE OF (ONEOF (outer_diameter, outer_diameter_to_shoulder))
  SUBTYPE OF (turning_feature);
END_ENTITY;
ENTITY outer_diameter
  SUBTYPE OF (outer_round);
 diameter_at_placement : toleranced_length_measure;
  feature_length : toleranced_length_measure;
reduced_size : OPTIONAL taper_select;
END ENTITY;
ENTITY outer_diameter_to_shoulder
  SUBTYPE OF (outer_round);
  diameter_at_placement : toleranced_length_measure;
  v_shape_boundary : vee_profile;
END ENTITY;
ENTITY revolved_feature
  ABSTRACT SUPERTYPE OF (ONEOF (revolved_round, revolved_flat, groove,
  general_revolution))
  SUBTYPE OF (turning_feature);
  material_side : OPTIONAL direction;
           : length_measure;
  radius
END ENTITY;
ENTITY revolved_flat
  SUBTYPE OF (revolved_feature);
  flat_edge_shape : linear_profile;
END_ENTITY;
ENTITY revolved round
```

```
SUBTYPE OF (revolved_feature);
  rounded_edge_shape : partial_circular_profile;
END_ENTITY;
ENTITY groove
  SUBTYPE OF (revolved_feature);
  sweep : open_profile;
END ENTITY;
ENTITY general_revolution
  SUBTYPE OF (revolved_feature);
  outer_edge_profile : general_profile;
END ENTITY;
ENTITY knurl
  ABSTRACT SUPERTYPE OF (ONEOF(straight_knurl, diagonal_knurl, diamond_knurl,
  tool_knurl))
  SUBTYPE OF (turning_feature);
  base_feature : turning_feature;
  partial_profile : OPTIONAL partial_area_definition;
  tooth_depth : OPTIONAL toleranced_length_measure;
  diametral_pitch : OPTIONAL toleranced_length_measure;
  root_fillet : OPTIONAL toleranced_length_measure;
  number_of_teeth : OPTIONAL INTEGER;
  major_diameter : OPTIONAL toleranced_length_measure;
  nominal_diameter : OPTIONAL toleranced_length_measure;
END_ENTITY;
ENTITY straight knurl
  SUBTYPE OF (knurl);
END ENTITY;
ENTITY diagonal_knurl
  SUBTYPE OF (knurl);
  helix_angle : plane_angle_measure;
END ENTITY;
ENTITY diamond knurl
  SUBTYPE OF (knurl);
  helix1_angle : plane_angle_measure;
  helix2_angle : OPTIONAL plane_angle_measure;
END_ENTITY;
ENTITY tool_knurl
  SUBTYPE OF (knurl);
END ENTITY;
ENTITY turning_workingstep
  SUBTYPE OF (workingstep);
```

```
its_features : LIST [2:?] OF manufacturing_feature;
   its_operation : turning_machining_operation;
               : OPTIONAL in_process_geometry;
   its_effect
END ENTITY;
ENTITY turning_technology
  SUBTYPE OF (technology);
                          : speed_select;
  spindle_speed
  feed_per_revolution
                          : OPTIONAL feed_per_rev_type;
  sync_spindle_and_z_feed : BOOLEAN;
  inhibit_feedrate_override : BOOLEAN;
  inhibit_spindle_override : BOOLEAN;
                         : OPTIONAL adaptive_control;
  its_adaptive_control
WHERE
  WR1: (EXISTS(SELF.feedrate) AND NOT EXISTS(SELF.feedrate_per_revolution)) OR
  (NOT EXISTS(SELF.feedrate) AND EXISTS(SELF.feedrate_per_revolution));
END_ENTITY;
TYPE speed_select = SELECT (const_spindle_speed, const_cutting_speed);
END TYPE;
ENTITY const_spindle_speed;
  rot_speed : rot_speed_measure;
END_ENTITY;
ENTITY const_cutting_speed;
         : speed measure;
  max_speed : OPTIONAL rot_speed_measure;
END_ENTITY;
TYPE feed_select = SELECT (feed_velocity_type, feed_per_rev_type);
END TYPE;
TYPE feed_velocity_type = speed_measure;
END TYPE;
TYPE feed_per_rev_type = REAL;
END_TYPE;
ENTITY turning_machine_functions
  SUBTYPE OF (machine_functions);
  : BOOLEAN;
coolant_type : ODTTO
  coolant_pressure : OPTIONAL coolant_select; axis_clamping : LIST [0:?] OF identification chip_removal
```

```
oriented_spindle_stop : OPTIONAL direction;
  END ENTITY;
TYPE coolant_select = ENUMERATION OF (flood, mist, through_tool);
END_TYPE;
ENTITY turning_machining_strategy
  ABSTRACT SUPERTYPE OF (ONEOF (unidirectional_turning, bidirectional_turning,
  thread_strategy, contour_turning, grooving_strategy,
  explicit_turning_strategy));
  overcut_length : OPTIONAL length_measure;
  allow_multiple_passes : OPTIONAL BOOLEAN;
  cutting_depth : OPTIONAL LIST[0:?] OF length_measure;
variable_feedrate : OPTIONAL positive_ratio_measure;
END ENTITY;
ENTITY unidirectional_turning
  SUBTYPE OF (turning_machining_strategy);
  feed_direction : OPTIONAL direction;
  back_path_direction : OPTIONAL direction;
  lift direction : OPTIONAL direction;
  stepover direction : OPTIONAL direction;
  lift_height : OPTIONAL length_measure;
  lift feed
                  : OPTIONAL feed select;
  stepover_feed : OPTIONAL feed_select;
END ENTITY;
ENTITY bidirectional_turning
  SUBTYPE OF (turning_machining_strategy);
  feed direction : OPTIONAL direction;
  stepover direction : OPTIONAL direction;
  stepover feed : OPTIONAL feed select;
END ENTITY;
ENTITY contour_turning
  SUBTYPE OF (turning_machining_strategy);
  : OPTIONAL length measure;
  lift_height
  lift_feed
                      : OPTIONAL feed_select;
                : OPTIONAL feed_select;
  stepover_feed
  variable_stepover_feed : OPTIONAL positive_ratio_measure;
END_ENTITY;
```

ISO 14649-12:2005(E)

```
ENTITY thread_strategy
   SUBTYPE OF (turning_machining_strategy);
   cut_in_amount_function : thread_cut_depth_type;
  threading_direction : threading_direction_type;
path_return_angle : OPTIONAL plane_angle_measure;
lift height : OPTIONAL positive length measure;
   lift_height
                          : OPTIONAL positive length measure;
END ENTITY;
TYPE thread_cut_depth_type = ENUMERATION OF (constant_depth, variable_depth,
  constant_removal_amount);
END_TYPE;
TYPE threading_direction_type = ENUMERATION OF (left, right, center, left_zigzag,
  right_zigzag);
END TYPE;
ENTITY grooving_strategy
   SUPERTYPE OF (multistep_grooving_strategy)
   SUBTYPE OF (turning_machining_strategy);
  grooving_direction : OPTIONAL direction;
   travel_distance : OPTIONAL length_measure;
END ENTITY;
ENTITY multistep_grooving_strategy
   SUBTYPE OF (grooving_strategy);
   retract_distance : length_measure;
END_ENTITY;
ENTITY explicit_turning_strategy
   SUBTYPE OF (turning_machining_strategy);
END_ENTITY;
ENTITY turning_machining_operation
  ABSTRACT SUPERTYPE OF (ONEOF(facing, grooving, contouring, threading,
  knurling))
  SUBTYPE OF (machining_operation);
                          : OPTIONAL approach_retract_strategy;
   approach
   retract
                          : OPTIONAL approach_retract_strategy;
   its_machining_strategy : OPTIONAL turning_machining_strategy;
END_ENTITY;
ENTITY facing
   ABSTRACT SUPERTYPE OF (ONEOF(facing_rough, facing_finish))
   SUBTYPE OF (turning_machining_operation);
   allowance : OPTIONAL length_measure;
END_ENTITY;
ENTITY facing_rough
   SUBTYPE OF (facing);
```

```
WR1: EXISTS(SELF.allowance) AND (SELF.allowance >= 0.0);
END_ENTITY;
ENTITY facing_finish
  SUBTYPE OF (facing);
END ENTITY;
ENTITY grooving
  ABSTRACT SUPERTYPE OF (ONEOF(grooving_rough, grooving_finish, cutting_in))
   SUBTYPE OF (turning_machining_operation);
           : OPTIONAL dwell_select;
   allowance : OPTIONAL length_measure;
END ENTITY;
ENTITY grooving_rough
  SUBTYPE OF (grooving);
  WR1: EXISTS(SELF.allowance) AND (SELF.allowance >= 0.0);
END ENTITY;
ENTITY grooving_finish
   SUBTYPE OF (grooving);
END_ENTITY;
ENTITY cutting_in
  SUBTYPE OF (grooving);
   WR1: NOT(EXISTS(SELF.allowance));
END ENTITY;
TYPE dwell_select = SELECT (dwell_time, dwell_revolution);
END_TYPE;
TYPE dwell_time = time_measure;
END TYPE;
TYPE dwell_revolution = REAL;
END_TYPE;
ENTITY contouring
   ABSTRACT SUPERTYPE OF (ONEOF(contouring_rough, contouring_finish))
   SUBTYPE OF (turning_machining_operation);
   allowance : OPTIONAL length_measure;
END_ENTITY;
ENTITY contouring_rough
   SUBTYPE OF (contouring);
WHERE
   WR1: EXISTS(SELF.allowance) AND (SELF.allowance >= 0.0);
```

ISO 14649-12:2005(E)

```
END_ENTITY;
ENTITY contouring_finish
  SUBTYPE OF (contouring);
END ENTITY;
ENTITY threading
  ABSTRACT SUPERTYPE OF (ONEOF(threading_rough, threading_finish))
   SUBTYPE OF (turning_machining_operation);
  allowance : OPTIONAL length_measure;
END_ENTITY;
ENTITY threading_rough
  SUBTYPE OF (threading);
WHERE
  WR1: EXISTS(SELF.allowance) AND (SELF.allowance >= 0.0);
END_ENTITY;
ENTITY threading_finish
  SUBTYPE OF (threading);
END_ENTITY;
ENTITY knurling
  SUBTYPE OF (turning_machining_operation);
END_ENTITY;
END_SCHEMA; (* turning_schema *)
```

Annex B: (informative)

EXPRESS-G diagram

The following section shows the EXPRESS-G figures of this part of ISO 14649: Process Data for Turning. According to the notation of EXPRESS-G the used symbols and their respective meaning are listed in brief.

Schema	Schema name
Entity	Entity name
Simple type	Predefined type like boolean, real, or string
Defined type	User defined types
Enumeration	Enumeration like [left, right]
(ThisPage#, RefNo# (FromPage#,)	Reference target from other pages. RefNo will be unique within this page.
ToPage#, RefNo#, Name	Refers to the page where e.g. an entity will be found.
	Relationship for attributes.
	Relationship for optional attributes.
	Relationship supertype <-> subtype (inheritance).

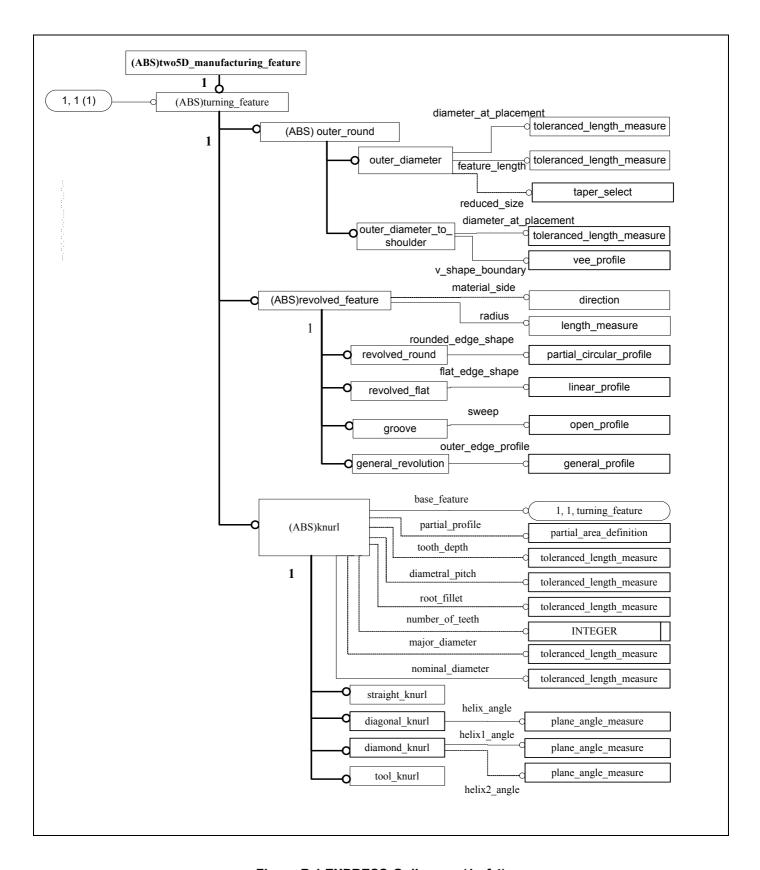


Figure B.1 EXPRESS-G diagram (1 of 4)

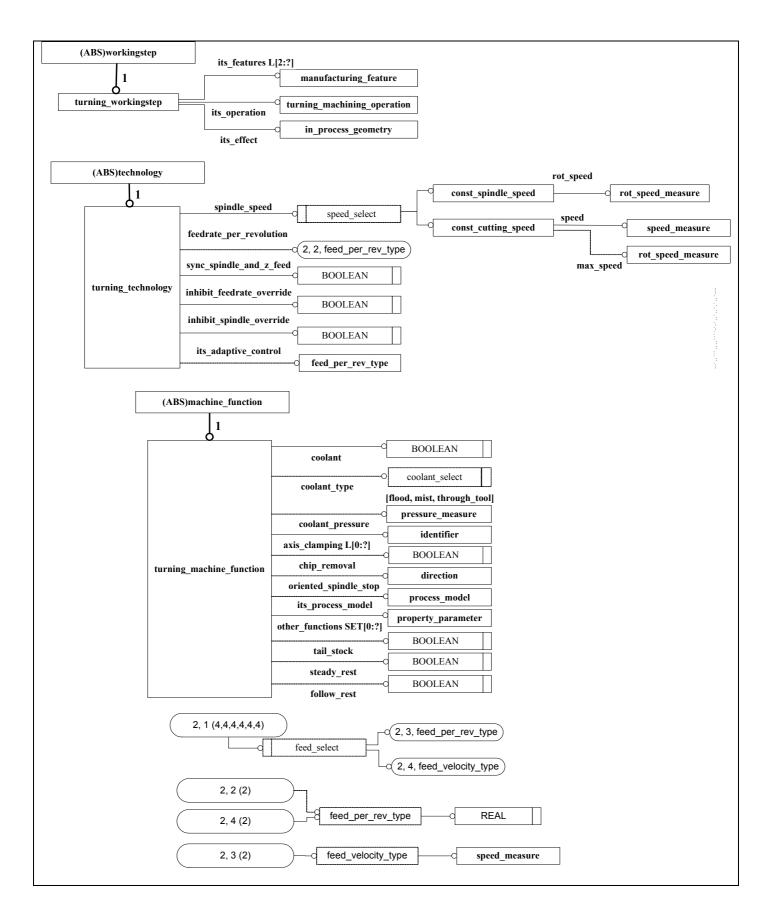


Figure B.2 EXPRESS-G diagram (2 of 4)

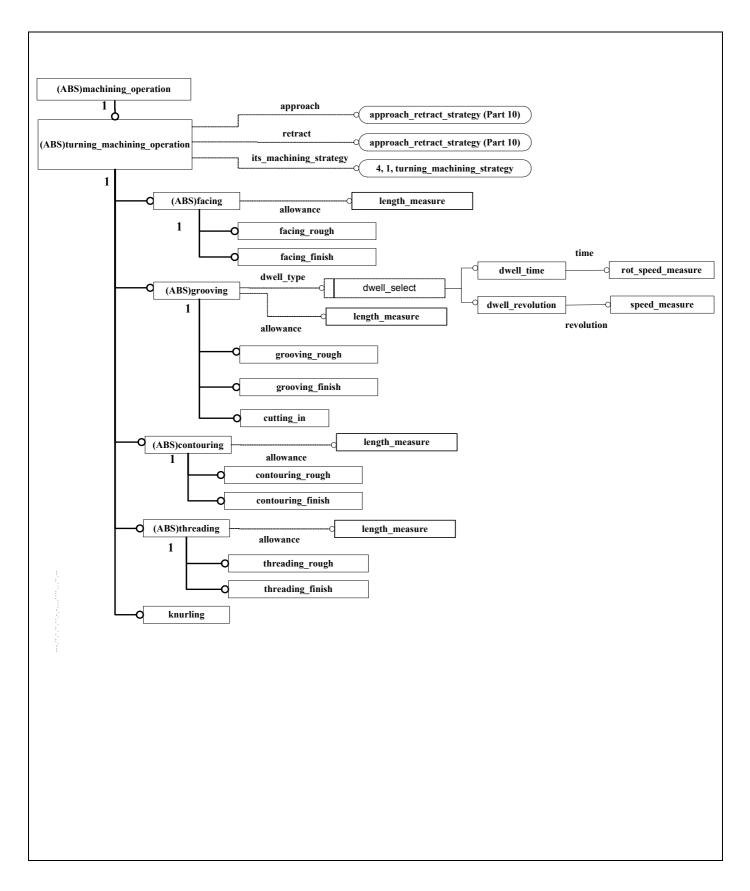


Figure B.3 EXPRESS-G diagram (3 of 4)

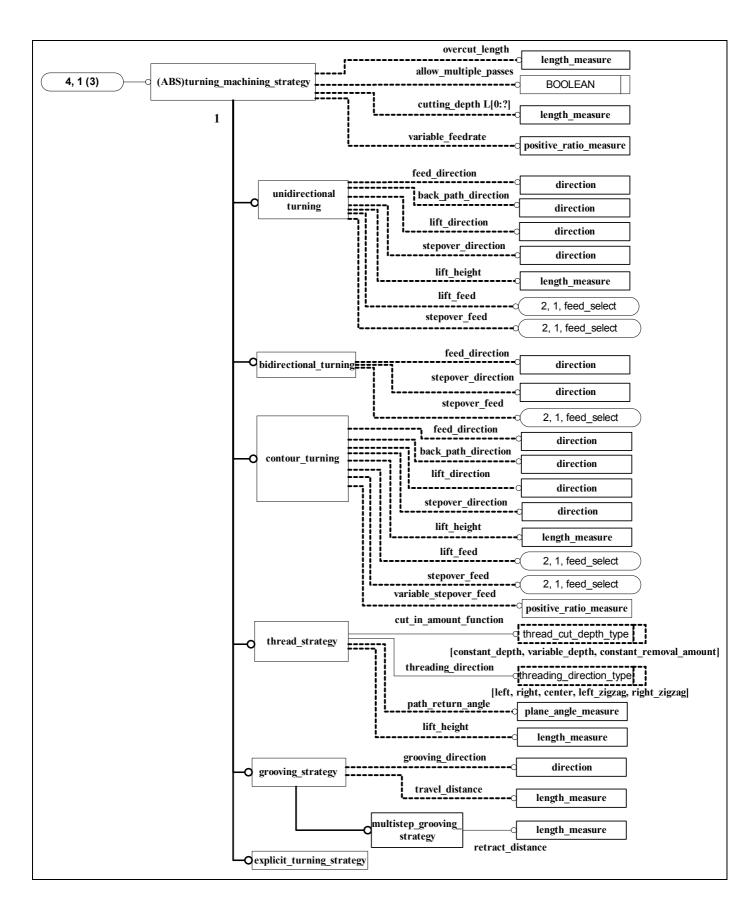


Figure B.4 EXPRESS-G diagram (4 of 4)

Annex C: (informative)

Turning specific features

C.1 General


Turning features defined in the main text of this document are referenced from AP 224 of ISO 10303; i.e., fully compliant with ISO 10303 AP 224. These features are taken as standard for STEP-NC data model, for the sake of compliance with the existing standard ISO 10303 AP 224. In addition to these features, there exist turning specific features, such as *circular_face* and *cut_in*, which are often used in the industrial practice. Thus, these features can be formally implemented by the vendor. In Annex C, definition of turning specific features and relationship with *turning features* are given.

C.2 Circular face

C.2.1 General

A *circular_face* is a plane face in radial direction. It can be used to describe plane surfaces perpendicular to the rotation axis with special surface requirements. How the circular face looks like depends on its lower diameter (Figure C.1). If the lower diameter is omitted or zero, the face will be the end wall of the workpiece (*end_face*; left figure). Otherwise it is a kind of transition (*step_face*; right figure) between two features.

NOTE: These two kinds of circular_face (end_face and step_face) can be represented by revolved_flat and outer_diameter_to_shoulder, respectively.

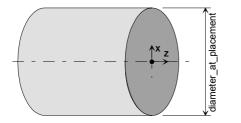

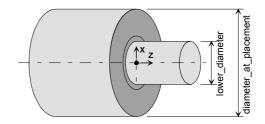


Figure C.1: Circular face (left: end face; right: step face).

```
ENTITY circular_face;
   SUBTYPE OF (turning_feature);
   diameter_at_placement : toleranced_length_measure;
   lower_diameter : OPTIONAL toleranced_length_measure;
   transition : OPTIONAL bottom_transition;
   its_condition : OPTIONAL face_radiused;
   (* Informal proposition : If lower_diameter is not omitted, it has to be lower than diameter_at_placement.
   *)
END_ENTITY;
```

diameter_at_placement :

This attribute describes the diameter at the side of the feature, where the origin of the coordinate system of the feature's placement is defined.

lower_diameter: The optional property *lower_diameter* is the smaller diameter of the feature. If this

parameter is omitted or zero, no boss will be left around the center of the rotation

axis. In this case the property *transition* will not be evaluated.

transition: This optional attribute describes the shape of the transition at the lower diameter

(bottom) of the feature, such as bottom transition as defined in C.2.3.

its_condition: This optional attribute makes it possible to define the shape of the surface, such as

face radiused as defined in C.2.2. If omitted, a straight wall perpendicular to the z-

axis is assumed.

C.2.2 Face radiused

This entity makes it possible to describe a circular face with a radiused shape. It is obvious that the applied circle (or ellipse) has to be symmetrical to the z-axis.

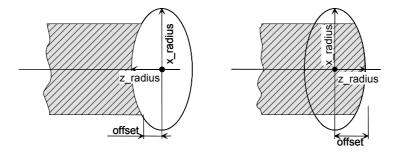


Figure C.2: Circular face with radiused shape.

ENTITY face_radiused;

offset : length_measure;

z_radius : toleranced_length_measure;

x_radius : OPTIONAL toleranced_length_measure;

END_ENTITY;

offset: This attribute gives the distance between the placement of the wall and the center of

the ellipse. Because the workpiece rotates, the shape will be symmetrical referring to the z-axis. Thus, only the distance in direction of z is given. If this radius points from the outside to the surface, the shape will be concave, in the other case convex.

Positive values are pointing in positive z-direction.

z_radius: The attribute z_radius is the radius of the ellipse's semi axis, which is parallel to the

z-axis. If this radius points from the outside to the surface, the shape will be concave, in the other case convex. Positive values are pointing in positive z-

direction.

 x_radius : The optional attribute x_radius is the radius of the ellipse's semi axis, which is

parallel to the x-axis. If omitted or both radii are equal, the ellipse builds as special

case a circle.

C.2.3 Bottom transition

This entity is the abstract base class for the actual description of the transition at the bottom of a turning feature. Two bottom transitions are foreseen: a slope and a round.

```
ENTITY bottom_transition;
   ABSTRACT SUPERTYPE OF (ONEOF(bottom_transition_slope,
   bottom_transition_round));
END_ENTITY;
```

C.2.3.1 Bottom_transition_slope

This entity describes the linear transition from the vertical to the horizontal part at the bottom of a turning feature. The shape of the slope is determined by its offset in the horizontal and its angle against the bottom of the feature. The origin of the coordinate system is at the point where the z-axis intersects the plane of the wall.

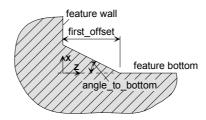


Figure C.3 : Slope at the bottom.

```
ENTITY bottom_transition_slope;
   SUBTYPE OF (bottom_transition);
   angle_to_bottom : plane_angle_measure;
   first_offset : toleranced_length_measure;
END ENTITY;
```

angle_to_bottom: This attribute describes an angle that is 180 degree minus the angle between the

slope and the bottom of the feature.

first_offset: This attribute defines the distance between the wall and the bottom along the z-axis.

C.2.3.2 Bottom_transition_round

This entity describes the curved transition from the vertical to the horizontal part at the bottom of a turning feature. The shape of the curve is determined by two offsets and its radius.

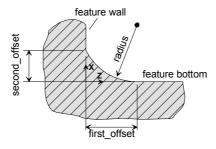


Figure C.4: Round between bottom and wall.

```
ENTITY bottom_transition_round;
   SUBTYPE OF (bottom_transition);
   radius : toleranced_length_measure;
   first_offset : OPTIONAL toleranced_length_measure;
   second_offset : OPTIONAL toleranced_length_measure;
END_ENTITY;
```

radius: Radius of the bottom transition.

first offset: This attribute defines the distance between the wall and the bottom along the z-axis.

If omitted the curve is tangent to the bottom. Note that it is not allowed that the

attribute first offset has a larger value than the radius.

second offset: This attribute defines the distance between the wall and the bottom along the x-axis.

If omitted the curve is tangent to the wall. Note that it is not allowed that the attribute

second_offset has a larger value than the radius.

C.3 Cut in

Cut_in is a kind of slot or groove; i.e, the geometrical shape of cut_in is similar to that of groove, but its shape is identical to the shape of the used tool. The orientation of the cut_in can be defined by attribute direction, and the amount of cut_in along the direction by attribute depth. The coordinate system of the feature is placed at the point of the part surface where the tool first contacts along cut_in_direction without regarding tool gouging.

NOTE 1: Cut_in can be represented by groove defined in 4.2.4.4.

NOTE 2: Cut_in may be represented by a toolpath_feature.

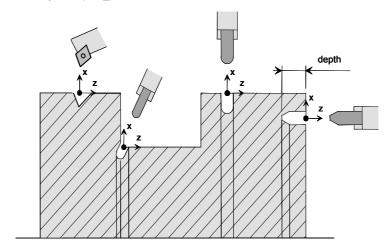


Figure C.5 : Cut_in.

```
ENTITY cut_in;
SUBTYPE OF (turning_feature);
depth : toleranced_length_measure;
cut_in_direction : OPTIONAL direction;
END_ENTITY;
```

ISO 14649-12:2005(E)

depth:	The attribute depth	stands for the	depth of the cu	ut_in measured	from its coordinate
--------	---------------------	----------------	-----------------	----------------	---------------------

system in the given direction. By using an appropriate tool (length), it is possible to cut off the end of a bar (shaft), if the z-axis can be reached. For example, if the tool direction is perpendicular to the z-axis and the depth is equal to the radius of the

shaft, the end of the shaft is cut off.

cut_in_direction: This optional attribute makes it possible to specify the direction of the cut_in. If

omitted, the direction of the tool movement will be perpendicular to the z-axis.

Annex D: (informative) Simple turning example

The following picture shows a simple workpiece. The workpiece has an end face and a cone on its right side. The measurement can be found in the picture. Below the listing of the NC program is printed.

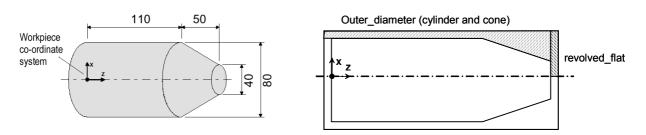


Figure D.1: simple turning example.

ISO-10303-21;

HEADER:

FILE_DESCRIPTION(('ISO14649','SIMPLE EXAMPLE OF NC PROGRAM FOR TURNING: REVOLVED_FLAT, OUTER_DIAMETER.').'1'):

FILE_NAME('EXAMPLE1.STP','2003-04-08',('STEFAN HEUSINGER','MICHAEL WOSNIK'),('ISW UNI-STUTTGART','GERMANY'),',",");

FILE_SCHEMA(('MACHINING_SCHEMA', 'MILLING_SCHEMA', 'TURNING_SCHEMA', 'TURNING_MACHINE_TOOL SCHEMA'));

ENDSEC;

DATA;

```
/* ***** Workpiece definition ***** */
#1=WORKPIECE('SIMPLE WORKPIECE',#2,0.010,$,$,$,());
#2=MATERIAL('DIN EN 10027-1','E 295',(#3));
#3=NUMERIC PARAMETER('ELASTIC MODULUS', 2.E11, 'pa');
/* **** Manufacturing features **** */
#10=REVOLVED FLAT('END FACE',#1,(#20,#21),#70,#80,0.000,#91);
#11=OUTER DIAMETER('CONE',#1,(#22,#23),#76,#83,#93,#95);
#12=OUTER DIAMETER('CYLINDER',#1,(#22,#23),#78,#72,#74,$);
/* ***** Turning operations ***** */
#20=FACING ROUGH($,$,'ROUGH END FACE',$,$,#100,#41,#40,#52,#53,#50,0.500);
#21=FACING FINISH($,$,'FINISH END FACE',$,$,#110,#42,#40,#52,#53,#51,0.000);
#22=CONTOURING ROUGH($,$,'ROUGH CONTOUR',$,$,#100,#43,#40,#56,#56,#54,0.500);
#23=CONTOURING FINISH($,$,'FINISH CONTOUR',$,$,#110,#44,#40,#56,#56,#55,0.000);
/* ***** Project ***** */
```


ISO 14649-12:2005(E)

```
#29=PROJECT('TURNING EXAMPLE 1',#30,(#1),$,$,$);
#30=WORKPLAN('MAIN WORKPLAN',(#31,#32,#33,#34),$,#37,$);
#31=MACHINING_WORKINGSTEP('WS ROUGH END FACE',#63,#10,#20,$);
#32=MACHINING_WORKINGSTEP('WS FINISH END FACE',#63,#10,#21,$);
#33=TURNING_WORKINGSTEP('WS ROUGH CONTOUR',#63,(#11,#12),#22,$);
#34=TURNING WORKINGSTEP('WS FINISH CONTOUR',#63,(#11,#12),#23,$);
#37=SETUP('SETUP FOR TURNING EXAMPLE 1',$,#63,(#38));
#38=WORKPIECE SETUP(#1,#64,$,$,());
/* **** Functions / Technology ***** */
#40=TURNING MACHINE FUNCTIONS(.T.,$,$,(),.F.,$,$,(),$,$,$);
#41=TURNING TECHNOLOGY($.,TCP.,#45,0.300,,F.,,F.,,F.,$);
#42=TURNING_TECHNOLOGY($,.TCP.,#46,0.200,.F.,.F.,.F.,$);
#43=TURNING_TECHNOLOGY($,.TCP.,#47,0.300,.F.,.F.,.F.,$);
#44=TURNING TECHNOLOGY($,.TCP.,#48,0.200,.F.,.F.,.F.,$);
#45=CONST SPINDLE SPEED(5.000);
#46=CONST CUTTING SPEED(2.500,10.000);
#47=CONST CUTTING SPEED(2.500,10.000);
#48=CONST_CUTTING_SPEED(2.200,10.000);
/* **** Strategies **** */
#50=UNIDIRECTIONAL_TURNING($,$,(3.000),$,$,#82,$,$,2.000,$,$);
#51=UNIDIRECTIONAL_TURNING($,$,(0.500),$,$,#82,$,$,2.000,$,$);
#52=AP_RETRACT_TANGENT($,60.000);
#53=AP RETRACT ANGLE($,100.000,2.000);
#54=UNIDIRECTIONAL TURNING($,$,(3.000),$,$,$,$,$,$,2.000,$,$);
#55=CONTOUR TURNING($,$,(0.500),$,$,#81,$,$,$,$);
#56=AP RETRACT ANGLE($,45.000,4.000);
/* **** Placements / Lengths / Planes **** */
#63=PLANE('SECURITY PLANE',#68);
#64=AXIS2 PLACEMENT 3D('WORKPIECE', #65, #66, #67);
#65=CARTESIAN POINT(WORKPIECE: LOCATION',(0.000,0.000,0.000));
#66=DIRECTION('WORKPIECE: AXIS',(0.000,0.000,1.000));
#67=DIRECTION('WORKPIECE: REF_DIRECTION',(1.000,0.000,0.000));
#68=AXIS2 PLACEMENT 3D('SECURITY PLANE',#69,$,$);
#69=CARTESIAN POINT('SECPLANE: LOCATION',(90.000,0.000,200.000));
#70=AXIS2_PLACEMENT_3D('PLACEMENT END FACE',#71,$,$);
#71=CARTESIAN POINT('END FACE: LOCATION',(0.000,0.000,160.000));
#72=TOLERANCED LENGTH MEASURE(80.000,#73);
#73=PLUS_MINUS_VALUE(0.100,0.100,1);
#74=TOLERANCED_LENGTH_MEASURE(110.000,#75);
#75=PLUS MINUS VALUE(0.100,0.100,1);
#76=AXIS2 PLACEMENT 3D('PLACEMENT CONE', #77, $,$);
#77=CARTESIAN POINT(CONE: LOCATION', (0.000, 0.000, 160.000));
#78=AXIS2 PLACEMENT 3D('PLACEMENT CYLINDER', #79,$,$);
#79=CARTESIAN POINT('CYLINDER: LOCATION', (0.000, 0.000, 110.000));
#80=DIRECTION('END FACE: FRONT',(0.000,0.000,-1.000));
#81=DIRECTION('STEPOVER DIRECTION FOR CONTOUR',(1.,0.,0.));
#82=DIRECTION('FACING DIRECTION'.(-1.000.0.000.0.000)):
#83=TOLERANCED LENGTH MEASURE(40.000,#90);
#89=PLUS MINUS VALUE(0.000,0.200,1);
#91=LINEAR PROFILE($,#92);
#92=NUMERIC PARAMETER('LINEAR PROFILE LENGTH',20.000,'mm');
#93=TOLERANCED LENGTH MEASURE(50.000,#94);
#94=PLUS MINUS VALUE(0.100,0.100,1);
```


Annex E: (informative)

Complex turning example

The following picture shows a more complex workpiece. The workpiece has 7 machining_features: 2 circular_face, 2 outer_diameter, 1 general_revolution, 1 groove, 1 cut_in. The final shape is machined by 2 setups; setup 1 is for right side features and setup 2 if for left side features. The measurement can be found in the picture. Below the listing of the NC program is printed.

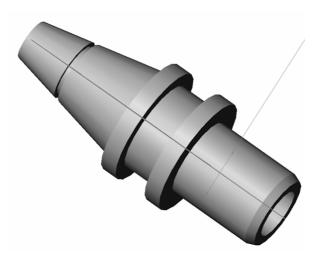

(a) Example part

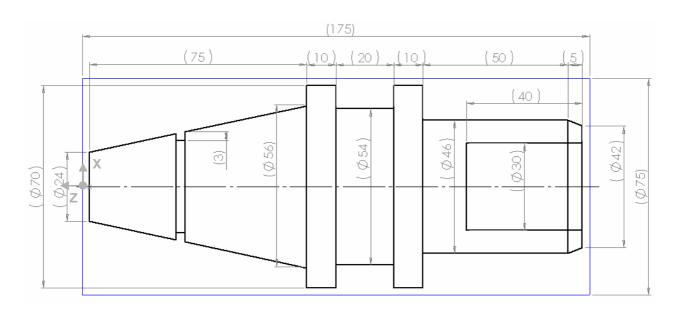

(b) Dimension of the example part

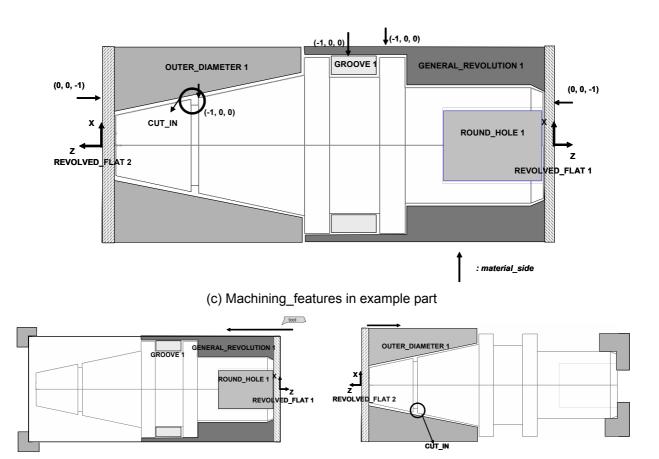


Figure E.1: complex turning example.

(e) Set-up 2

```
ISO-10303-21:
HEADER;
FILE DESCRIPTION(('EXAMPLE OF NC PROGRAMME FOR TURNING: COMPLEX DESIGN.'),'1');
FILE NAME('EXAMPLE1.STP',$,('ISO14649'),("),'SUH','POSTECH', 'KOREA');
FILE SCHEMA(('MACHINING SCHEMA', 'TURNING SCHEMA'));
ENDSEC;
DATA;
(* ***** Workpiece definition ******)
#1=WORKPIECE('SIMPLE WORKPIECE',#2,0.01,$,$,$,());
#2=MATERIAL('ST-50','STEEL',(#3));
#3=PROPERTY PARAMETER('E=200000N/M2');
#4=RIGHT_CIRCULAR_CYLINDER('WORKPIECE PIECE', #5,175.0, 35.0);
#5=AXIS1 PLACEMENT('WORKPIECE PIECE PLACEMENT',#6,#7);
#6=CARTESIAN POINT('WORKPIECE PIECE: LOCATION',(0.000,0.000,0.000));
#7=DIRECTION( AXIS ',(0.000,0.000,1.000));
(* **** Manufacturing features **** *)
#10=REVOLVED FLAT('REVOLVED FLAT 1',#1,(#22,#23),#172,#176,21.0,#178);
#11=REVOLVED FLAT('REVOLVED FLAT 2',#1,(#31,#32),#183#187,12.0,#189);
#12=GENERAL REVOLUTION('GENERAL REVOLUTION 1',#1,(#20,#21),#194,#198,21.0,#200);
#13=ROUND HOLE('HOLE1 FLAT BOTTOM',#1,(#26,#27,#28),#207,#215,#216,$,#217);
#14=OUTER DIAMETER('OUTER DIAMETER 1',#1,(#29,#30), #218,#222,#223,#224);
#15=GROOVE('GROOVE 1',#1,(#24,#25), #226,#230,35.0,#232);
```

(d) Set-up 1

```
#16=GROOVE('CUT IN',#1,(#33),#236,#240,18.4,#242);
(* ***** Turning operations ***** *)
#20=CONTOURING_ROUGH($,$,'ROUGH GENERALREVOLUTION1',30.000,$,#280,#61,#60,#130,#130,#131,0.5);
#21=CONTOURING FINISH($,$,'FINISH GENERAL REVOLUTION 1',30.000,$,#280,#61,#60,#130,#130,#132,0.0);
#22=FACING ROUGH($,$,'ROUGH CIRCULAR FACE 2',50.000,$,#280,#63,#60,#133,#134,#135,0.500);
#23=FACING FINISH($,$,'FINISH CIRCULAR FACE 2',50.000,$,#280,#63,#60,#133,#134,#136,0.0);
#24=GROOVING ROUGH($,$,'ROUGH GROOVE 1',30.000,$,#285,#65,#60,#137,#137,#138,$,0.500);
#25=GROOVING FINISH($,$,'FINISH GROOVE 1',30.000,$,#285,#65,#60,#137,#137,#139,$,0.0);
#26= DRILLING($.$,'DRILL HOLE1',30.000,$,#289,#66,#67,$,$,$,$,$,$,$,#140);
#27= REAMING($,$,'REAM HOLE1',30.000,$,#293,#69,#67,$,$,$,$,$,$,$,#141,.T.,$,$);
#29=CONTOURING ROUGH($,$,'ROUGH OUTER DIAMETER 1',30.000,$,#280,#61,#60,#130,#131,0.5);
#30=CONTOURING FINISH($,$,'FINISH OUTER DIAMETER 1',30.000,$,#280,#61,#60,#130,#130,#132,0.0);
#31=FACING ROUGH($,$,'ROUGH CIRCULAR FACE 1',50.000,$,#280,#63,#60,#133,#134,#135,0.500);
#32=FACING FINISH($,$,'FINISH CIRCULAR FACE 1',50.000,$,#280,#63,#60,#133,#134,#136,0.0);
#33=CUTTING IN($,$,'CUTTING IN 1',50.000,$,#297,#70,#60,#142,#142,#143,$,0.0);
(* ***** Project ***** *)
#34=PROJECT('TURNING EXAMPLE 1',#35,(#1),$,$,$);
#35=WORKPLAN('MAIN WORKPLAN',(#36,#37),$,#52,$);
#36=WORKPLAN('WORK PLAN FOR SETUP1',(#38,#39,#40,#41,#42,#43,#44,#45),$,$,$);
#37=WORKPLAN('WORK PLAN FOR SETUP2',(#47,#48,#49,#50,#51),$,#54,$);
#38=MACHINING_WORKINGSTEP('WS ROUGH CIRCULAR FACE 2', #56, #11, #22, $);
#39=MACHINING_WORKINGSTEP('WS FINISH CIRCULAR_FACE 2',#56,#11,#23,$);
#40=MACHINING WORKINGSTEP('WS ROUGH GENERAL REVOLUTION 1',#56,#12,#20,$);
#41=MACHINING WORKINGSTEP('WS FINISH GENERAL REVOLUTION 1',#56,#12,#21,$);
#42=MACHINING WORKINGSTEP('WS ROUGH GROOVE 1',#56,#15,#24,$);
#43=MACHINING WORKINGSTEP('WS FINISH GROOVE 1',#56,#15,#25,$);
#44=MACHINING WORKINGSTEP('WS DRILLING', #56, #13, #26,$);
#45=MACHINING WORKINGSTEP('WS REAMING', #56, #13, #27,$);
#47=MACHINING WORKINGSTEP('WS ROUGH CIRCULAR FACE 1'.#56.#10.#30.$):
#48=MACHINING WORKINGSTEP('WS FINISH CIRCULAR_FACE 1',#56,#10,#31,$);
#49=MACHINING WORKINGSTEP('WS ROUGH OUTER_DIAMETER 2',#56,#14,#28,$);
#50=MACHINING WORKINGSTEP('WS FINISH OUTER DIAMETER 2',#56,#14,#29,$);
#51=MACHINING WORKINGSTEP('WS FINISH CUT IN 1',#56,#16,#32,$);
#52=SETUP('SETUP 1',#103,#56,(#53));
#53=WORKPIECE SETUP(#1,#107,$,$,$);
#54=SETUP('SETUP 2',#111,#56,(#55));
#55=WORKPIECE SETUP(#1,#115,$,$,$);
#56=PLANE('SECURITY PLANE',#119);
(* ***** Functions / Technology ***** *)
#60=TURNING MACHINE FUNCTIONS(.T.,$,$,(),.F.,$,$,(),$,$,$);
#61=TURNING TECHNOLOGY($,.TCP.,#62,0.300,.F.,.F.,.F.,$);
#62=CONST SPINDLE SPEED(500);
#63=TURNING TECHNOLOGY($,.TCP.,#64,0.300,.F.,.F.,.F.,$);
#64=CONST SPINDLE SPEED(500);
#65=TURNING TECHNOLOGY($..TCP..#66,0.300..F...F...F...$);
#66=CONST SPINDLE SPEED(200):
#67= MILLING MACHINE FUNCTIONS(.T.,$,$,.F.,$,(),.T.,$,$,());
#66= MILLING TECHNOLOGY(0.030, TCP., $,16.000, $,.F.,.F.,.F.,$);
#69= MILLING TECHNOLOGY(0.030, TCP., $18.000, $, F., F., F., $);
#70=TURNING TECHNOLOGY($,.TCP.,#71,0.300,.F.,.F.,.$);
#71= CONST SPINDLE SPEED (100);
```

```
(* ***** Strategies ***** *)
#130=PLUNGE RAMP($,45.000);
#131=UNIDIRECTIONAL_TURNING($,$,(3.000),$,$,$,$,$,2.000,$,$);
#132=UNIDIRECTIONAL_TURNING($,$,(0.500),$,$,$,$,$,$,$,$);
#133=PLUNGE RAMP($,30.000);
#134=PLUNGE_RAMP($,40.000);
#131=UNIDIRECTIONAL TURNING($,.T.,(3.000),$,$,$,$,$,$,2.000,$,$);
#132=UNIDIRECTIONAL TURNING($,.F.,(0.500),$,$,$,$,$,$,$,$);
#137=PLUNGE TOOL AXIS($);
#138=MULTISTEP GROOVING STRATEGY($,.T.,(3.000),$,$,5.0,3.0);
#139=CONTOUR TURNING($,.F.,(0.500),$,$,$);
#140= DRILLING TYPE STRATEGY(75.000,50.000,50.000,50.000,75.000,40.000);
#141= DRILLING TYPE STRATEGY($,$,$,$,$,$);
#142=PLUNGE TOOL AXIS($);
#143= GROOVING_STRATEGY($,.T.,(1.0),$,$,5.000);
(* **** Placements / Lengths **** *)
#103=AXIS2 PLACEMENT 3D('SETUP 1',#104,#105,#106);
#104=CARTESIAN POINT('SETUP1: LOCATION',(0.000,0.000,0.000));
#105=DIRECTION('AXIS',(1.000,0.000,0.000));
#106=DIRECTION('REF_DIRECTION',(0.000,0.000,1.000));
#107=AXIS2_PLACEMENT_3D('WORKPIECE',#108,#109,#110);
#108=CARTESIAN POINT('WORKPIECE1: LOCATION',(0.000,0.000,0.000));
#109=DIRECTION('AXIS',(1.000,0.000,0.000));
#110=DIRECTION('REF DIRECTION',(0.000,0.000,1.000));
#111=AXIS2 PLACEMENT 3D('SETUP 2',#111,#112,#113);
#112=CARTESIAN POINT('SETUP2: LOCATION',(0.000,0.000,0.000));
#113=DIRECTION('AXIS',(1.000,0.000,0.000));
#114=DIRECTION('REF DIRECTION',(0.000,0.000,1.000));
#115=AXIS2 PLACEMENT 3D('WORKPIECE1',#116,#117,#118);
#116=CARTESIAN POINT('WORKPIECE1: LOCATION',(0.000,0.000,0.000));
#117=DIRECTION('AXIS',(1.000,0.000,0.000));
#118=DIRECTION('REF DIRECTION',(0.000,0.000,1.000));
#119=AXIS2 PLACEMENT 3D('SECURITY PLANE', #120, #121, #122);
#120=CARTESIAN POINT('SECPLANE: LOCATION',(0.000,0.000,50.000));
#121=DIRECTION('AXIS',(1.000,0.000,0.000));
#122=DIRECTION('REF DIRECTION',(0.000,0.000,1.000));
#172=AXIS2 PLACEMENT 3D('PLACEMENT END FACE 1',#173,#174,#175);
#173=CARTESIAN POINT('END FACE 1: LOCATION',(0.000,0.000,-2.500));
#174=DIRECTION('AXIS',(1.000,0.000,0.000));
#175=DIRECTION('REF_DIRECTION',(0.000,0.000,1.000));
#176=DIRECTION('MATERIAL_SIDE',(0.000,0.000,-1.000));
#178=LINEAR PROFILE('REVOLVED_FLAT_RADIUS',#179,21.000);
#179=AXIS2 PLACEMENT 3D('PLACEMENT END FACE 1',#180,#181,#182);
#180=CARTESIAN POINT('END FACE 1: LOCATION',(0.000,0.000,0.000));
#181=DIRECTION( AXIS ',(0.000,0.000,1.000));
#182=DIRECTION('REF DIRECTION',(1.000,0.000,0.000));
#183=AXIS2 PLACEMENT 3D('PLACEMENT REVOLVED FLAT 2',#73,#74,#75);
#184=CARTESIAN POINT('REVOLVED FLAT2: LOCATION',(0.000,0.000,-2.500));
#185=DIRECTION('AXIS',(1.000,0.000,0.000));
#186=DIRECTION('REF DIRECTION'.(0.000.0.000.1.000)):
#187=DIRECTION(' MATERIAL SIDE',(0.000,0.000,-1.000));
#189=LINEAR PROFILE('REVOLVED FLAT RADIUS',#190,12.000);
#190=AXIS2 PLACEMENT 3D('LINEAR PROFILE', #191, #192, #193);
#191=CARTESIAN POINT('END FACE 1: LOCATION',(0.000,0.000,0.000));
#192=DIRECTION('AXIS',(0.000,0.000,1.000));
#193=DIRECTION('REF DIRECTION',(1.000,0.000,0.000));
```

```
#194=AXIS2 PLACEMENT 3D('PLACEMENT GENERAL REVOLUTION 1',#195,#196,#197);
#195=CARTESIAN POINT('GENERAL REVOLUTION: LOCATION',(0.000,0.000, -2.500));
#196=DIRECTION('AXIS',(1.000,0.000,0.000));
#197=DIRECTION('REF_DIRECTION',(0.000,0.000,1.000));
#198=DIRECTION('MATERIAL_SIDE',(-1.000,0.000,0.000));
#200=GENERAL PROFILE($,#201);
#201=POLYLINE(",(#202,#203,#204,#205,#206));
#202=CARTESIAN POINT(",(21.000,0.000, 0.000));
#203=CARTESIAN POINT(",(23.000,0.000, 5.000));
#204=CARTESIAN POINT(",(23.000,0.000, 55.000));
#205=CARTESIAN POINT(",(35.000,0.000, 55.000));
#206=CARTESIAN POINT(",(35.000,0.000, 95.000));
#207= AXIS2 PLACEMENT 3D('HOLE3', #208, #209, #210);
#208 = DIRECTION(",(0.,0.,1.));
#209= DIRECTION(",(1.,0.,0.));
#210= CARTESIAN POINT(",(0.,0.,0.));
#211=AXIS2_PLACEMENT_3D(",#212,#213,#214);
#212=CARTESIAN POINT(",(0.000,0.000,-40.000));
#213=DIRECTION(",(0.000000,0.000000,1.000000));
#214=DIRECTION(",(1.000000,0.000000,0.000000));
#215=PLANE(",#211);
#216= TOLERANCED_LENGTH_MEASURE(15.0,#251);
#217= FLAT_HOLE_BOTTOM();
#218=AXIS2_PLACEMENT_3D('PLACEMENT OUTER DIAMETER 1',#219,#220,#221);
#219=CARTESIAN_POINT('OUTER_DIAMETER 2: LOCATION',(0.000,0.000, -77.500));
#220=DIRECTION('AXIS',(1.000,0.000,0.000));
#221=DIRECTION('REF DIRECTION',(0.000,0.000,1.000));
#222=TOLERANCED LENGTH MEASURE(56.000,#251);
#223=TOLERANCED LENGTH MEASURE(75.000,#251);
#224=DIAMETER TAPER(#225);
#225=TOLERANCED LENGTH MEASURE(24.000,#251);
#226=AXIS2 PLACEMENT 3D('PLACEMENT GROOVE 1',#227,#228,#229);
#227=CARTESIAN POINT('GROOVE 1: LOCATION',(0.000,0.000, -67.500));
#228=DIRECTION('AXIS',(1.000,0.000,0.000));
#229=DIRECTION('REF DIRECTION',(0.000,0.000,1.000));
#230=DIRECTION('MATERIAL SIDE',(-1.000,0.000,0.000));
#232=SQUARE U PROFILE(#233,#234,0,#235,0);
#233=TOLERANCED_LENGTH_MEASURE(20.000,#251);
#234=TOLERANCED LENGTH MEASURE(0.000,#251);
#235=TOLERANCED LENGTH MEASURE(0.000,#251);
#236=AXIS2_PLACEMENT_3D('PLACEMENT CUT_IN 1',#237,#238,#239);
#237=CARTESIAN POINT('CUT IN 1: LOCATION',(0.000,0.000, -32.500));
#238=DIRECTION('AXIS',(1.000,0.000,0.000));
#239=DIRECTION('REF_DIRECTION',(0.000,0.000,1.000));
#240=DIRECTION('MATERIAL_SIDE',(-1.000,0.000,0.000));
#242=SQUARE U PROFILE(#243,#244,0.0,#245,0.0);
#243=TOLERANCED LENGTH MEASURE(3.000,#251);
#244=TOLERANCED LENGTH MEASURE(0.000,#251);
#245=TOLERANCED LENGTH MEASURE(0.000,#251);
#251= PLUS MINUS VALUE(0.100,0.100,3);
(* ***** Tools ***** *)
#280=GENERAL TURNING TOOL('general turning tool 1',120.0,45.0,$,$,$,#282,,LEFT.);
#282=CUTTING EDGE PROPERTIES(#283,$,$,10.0,110.0,$,45.0,(),$,$);
#283= MATERIAL('TIN','TIN',());
#285=GROOVING TOOL('grooving tool',100.0,30.0,$,#286,.LEFT.,3.0,5.0,$,$,$);
#286=CUTTING EDGE PROPERTIES (#287,$,$,$,90.0,$,90.0,(),$,$);
```

```
#287= MATERIAL('TIN','TIN',());

#289=DRILLING_CUTTING_TOOL('DRILL 30',(#290,#290),165.00,30.0,50.0, RIGHT.,F.,120.0);

#290=CUTTING_COMPONENT(0.00000000000,#291,$,1350.0000000000,#66);

#291= MATERIAL('TIN','TIN',());

#293=REAMING_CUTTING_TOOL('REAMER 30',(#294,#294),140.0,30.000,60.0, RIGHT.,F.,5.0);

#294=CUTTING_COMPONENT(0.00000000000,#295,$,1000.000000000,#69);

#295= MATERIAL('TIN','TIN',());

#297=GROOVING_TOOL('grooving tool',100.0,30.0,$,#298,LEFT.,3.0,5.0,$,$,$);

#298=CUTTING_EDGE_PROPERTIES (#299,$,$,$,90.0,$,90.0,(),$,$);

#299= MATERIAL('TIN','TIN',());

ENDSEC;
END-ISO-10303-21;
```

Index

В		\boldsymbol{G}	
		general_revolution	9
bidirectional_turning	19	groove	8
		grooving	26
\boldsymbol{C}		grooving_finish	27
const_cutting_speed	14	grooving_rough	26
const_spindle_speed		grooving_strategy	22
contour turning			
contouring		K	
contouring finish			
contouring rough		knurl	10
coolant_select	16	knurling	30
cutting in	27	-	
 .		M	
D			
		multistep_grooving_strategy	23
diagonal_knurl	11		
diamond_knurl	11	o	
dwell_revolution	28		
dwell_select	28	outer diameter	Δ
dwell_time	28	outer_diameter_to_shoulder	
		outer round	
E		outer_round	
		R	
explicit_turning_strategy	24		
		and the defeators	
F		revolved_feature	
		revolved_flat	
facing	25	revolved_round	/
facing_finish	26	S	
facing_rough		S	
feed_per_rev_type			
feed_select		straight_knurl	
feed velocity type	15	speed_select	14

$\boldsymbol{\mathit{T}}$

$thread_cut_depth_type21$
thread_strategy
threading
threading_direction_type
threading_finish30
threading_rough30
tool_knurl12
turning_feature
turning_machine_functions
turning_machining_operation24
turning_machining_strategy17
turning_technology13
turning_workingstep12
U
unidirectional_turning



ICS 25.040.20

Price based on 59 pages