



# Standard Practice for Sampling With a Composite Liquid Waste Sampler (COLIWASA)<sup>1</sup>

This standard is issued under the fixed designation D5495; the number immediately following the designation indicates the year of original adoption or, in the case of revision, the year of last revision. A number in parentheses indicates the year of last reapproval. A superscript epsilon ( $\epsilon$ ) indicates an editorial change since the last revision or reapproval.

## 1. Scope

1.1 This practice describes the procedure for sampling liquids with the composite liquid waste sampler, or “COLIWASA.” The COLIWASA is an appropriate device for obtaining a representative sample from stratified or unstratified liquids. Its most common use is for sampling containerized liquids, such as tanks, barrels, and drums. It may also be used for pools and other open bodies of stagnant liquid.

NOTE 1—A limitation of the COLIWASA is that the stopper mechanism may not allow collection of approximately the bottom inch of material, depending on construction of the stopper.

1.2 The COLIWASA should not be used to sample flowing or moving liquids.

1.3 The values stated in SI units are to be regarded as standard. No other units of measurement are included in this standard.

1.4 *This standard does not purport to address all of the safety problems, if any, associated with its use. It is the responsibility of the user of this standard to establish appropriate safety and health practices and determine the applicability of regulatory limitations prior to use.*

## 2. Referenced Documents

### 2.1 ASTM Standards:<sup>2</sup>

[D4687 Guide for General Planning of Waste Sampling](#)

[D5088 Practice for Decontamination of Field Equipment Used at Waste Sites](#)

[D5283 Practice for Generation of Environmental Data Related to Waste Management Activities: Quality Assurance](#)

<sup>1</sup> This practice is under the jurisdiction of ASTM Committee D34 on Waste Management and is the direct responsibility of Subcommittee D34.01.03 on Sampling Equipment.

Current edition approved Sept. 1, 2016. Published September 2016. Originally approved in 1994. Last previous edition approved in 2011 as D5495 – 03 (2011). DOI: 10.1520/D5495-03R16.

<sup>2</sup> For referenced ASTM standards, visit the ASTM website, [www.astm.org](http://www.astm.org), or contact ASTM Customer Service at [service@astm.org](mailto:service@astm.org). For *Annual Book of ASTM Standards* volume information, refer to the standard’s Document Summary page on the ASTM website.

[and Quality Control Planning and Implementation](#)  
[D5743 Practice for Sampling Single or Multilayered Liquids, With or Without Solids, in Drums or Similar Containers](#)

[D6232 Guide for Selection of Sampling Equipment for Waste and Contaminated Media Data Collection Activities](#)

## 3. Summary of Practice

3.1 A clean device is slowly lowered into the liquid to be sampled. After it has filled, the bottom of the sampling tube is closed and the device is retrieved. The contents are subsequently discharged into a sample container.

## 4. Significance and Use

4.1 This practice is applicable to sampling liquid wastes and other stratified liquids. The COLIWASA is used to obtain a vertical column of liquid representing an accurate cross-section of the sampled material. To obtain a representative sample of stratified liquids, the COLIWASA should be open at both ends so that material flows through it as it is slowly lowered to the desired sampling depth. The COLIWASA must not be lowered with the stopper in place. Opening the stopper after the tube is submerged will cause material to flow in from the bottom layer only, resulting in gross over-representation of that layer.

4.2 This practice is to be used by personnel acquiring samples.

4.3 This practice should be used in conjunction with Guide [D4687](#) which covers sampling plans, safety, QA, preservation, decontamination, labeling and chain-of-custody procedures; Practice [D5088](#) which covers decontamination of field equipment used at waste sites; Practice [D5283](#) which covers project specifications and practices for environmental field operations, and Practice [D5743](#) which covers drum sampling.

## 5. Sampling Equipment

5.1 COLIWASAs are available commercially with different types of stoppers and locking mechanisms, but they all operate using the same principle. They can also be constructed from materials such as polyvinylchloride (PVC), glass, metal, or

polytetrafluoroethylene (PTFE). A traditional model of the COLIWASA is shown in Fig. 1 [de Vera et al.]<sup>3,4</sup>; however, the design can be modified or adapted, or both, to meet the needs of the sampler. COLIWASAs must be selected that are constructed of materials compatible with the waste being sampled and with the analyses or tests to be performed. Due to the unknown nature of most containerized liquid wastes, COLIWASAs made of glass or polytetrafluoroethylene are best for general use.

## 6. Sample Containers

6.1 Plastic, glass or other nonreactive containers should be used. Refer to Guide **D6232** for further information on containers.

## 7. Procedure

7.1 Make certain the COLIWASA is clean and functioning properly. It is essential that the stopper at the bottom of the sampling tube closes securely.

---

<sup>3</sup> de Vera, E. R., Simmons, B. P., Stephens, R. C., and Storm, D. L., "Samplers and Sampling Procedures for Hazardous Waste Streams," EPA-600/2-80-018, January 1980.

<sup>4</sup> Ford, P. J., Turina, P. J., and Seeley, D. E., "Characterization of Hazardous Waste Sites—A Methods Manual: Volume II," Available Sampling Methods, Second Edition, EPA-600/4-84-076, December 1984.

7.2 Open the COLIWASA by placing the stopper mechanism in the open position.

7.3 Lower the COLIWASA into the liquid slowly so that the levels of the liquid inside and outside the sampler tube remain about the same. If the level of the liquid in the sample tube is lower than that outside the sampler, the sampling rate is too fast and a nonrepresentative sample will result.

7.4 Use the stopper mechanism to close the COLIWASA when it reaches the desired depth in the liquid.

7.5 Withdraw the sampler from the liquid. Either wipe the exterior of the sampler tube with a disposable cloth or rag or allow excess liquid to drain back into the waste container.

7.6 Carefully discharge the sample into a suitable container by slowly opening the stopper mechanism while the lower end of the COLIWASA is positioned in the sample container.

7.7 Seal the sample container; attach the label and seal; record in the field logbook; and complete the chain-of-custody record.

7.8 Decontaminate the used equipment in accordance with Practice **D5088**.

## 8. Keywords

8.1 COLIWASA; drum sampling; liquid sampling; sampling; waste

Pipe, PVC, translucent,  
4.13 cm (1 5/8") I.D.,  
4.76 cm (1 7/8") O.D.

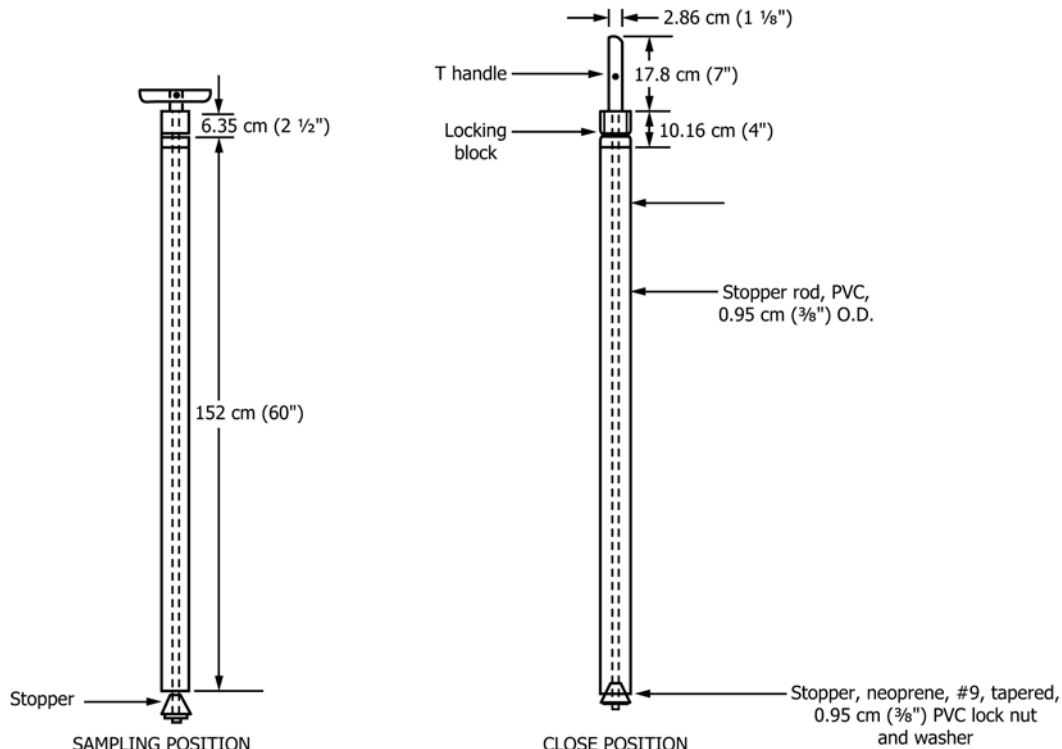


FIG. 1 Composite Liquid Waste Sampler (COLIWASA) (Typical)

## APPENDIX

### X1. PERFORMANCE DATA FOR THE COLIWASA

X1.1 Independent testing was conducted to determine the bias and precision of using a COLIWASA for the collection of stratified liquids from drums or simulated drums. Results from a single set of experiments are presented. Improper procedural use or bias by a sampler may adversely impact the precision of a sample by a COLIWASA sampling device. Refer to Practice [D5743](#).

#### X1.2 Experimental Design

X1.2.1 All samples were collected under controlled laboratory conditions. Samples were collected from 55-gal drums or a 34 in. acrylic cylinder (that is, simulated drum).

X1.2.2 Measured volumes of corn oil and water were placed in the drums or cylinders to known stratified conditions of 5:95, 50:50, and 95:5 corn oil:water.

X1.2.3 A single operator tested each of the three corn oil:water ratios using a 250-mL and 1000-mL COLIWASA. Thirty-six samples were collected from each corn oil:water ratio.

#### X1.3 Bias

X1.3.1 Bias was determined by comparing the known volumes of corn oil and water to the volumes collected by the two different size COLIWASAs.

X1.3.2 For the 50:50 corn oil:water sample, the 250-mL COLIWASA over sampled the water by approximately 5 % and the 1000-mL COLIWASA over sampled the water by approximately 9 %.

X1.3.3 For the 95:5 corn oil:water sample, the 250-mL COLIWASA over sampled the water by approximately 2 % and the 1000-mL COLIWASA over sampled the water by approximately 5 %.

X1.3.4 For the 5:95 corn oil:water sample, the 250-mL COLIWASA over sampled the water by approximately 70 % and the 1000-mL COLIWASA over sampled the water by approximately 4 %. The distinctly larger over sampling of the upper corn oil layer by the 250-mL COLIWASA was attributed to the stopper interfering with the uptake of the thin corn oil layer during sampler insertion.

**X1.4 Precision**

X1.4.1 Precision was measured by calculating the percent relative standard deviation (% RSD) from 50 sets of 5

measurements of the 50:50 corn oil:water sample by a single sampler. The precision for both the 250–mL COLIWASA and 1000–mL COLIWASA was less than 3% RSD.

*ASTM International takes no position respecting the validity of any patent rights asserted in connection with any item mentioned in this standard. Users of this standard are expressly advised that determination of the validity of any such patent rights, and the risk of infringement of such rights, are entirely their own responsibility.*

*This standard is subject to revision at any time by the responsible technical committee and must be reviewed every five years and if not revised, either reapproved or withdrawn. Your comments are invited either for revision of this standard or for additional standards and should be addressed to ASTM International Headquarters. Your comments will receive careful consideration at a meeting of the responsible technical committee, which you may attend. If you feel that your comments have not received a fair hearing you should make your views known to the ASTM Committee on Standards, at the address shown below.*

*This standard is copyrighted by ASTM International, 100 Barr Harbor Drive, PO Box C700, West Conshohocken, PA 19428-2959, United States. Individual reprints (single or multiple copies) of this standard may be obtained by contacting ASTM at the above address or at 610-832-9585 (phone), 610-832-9555 (fax), or [service@astm.org](mailto:service@astm.org) (e-mail); or through the ASTM website ([www.astm.org](http://www.astm.org)). Permission rights to photocopy the standard may also be secured from the Copyright Clearance Center, 222 Rosewood Drive, Danvers, MA 01923, Tel: (978) 646-2600; <http://www.copyright.com/>*