



Standard Test Method for Testing Wood-Base Panel Corner Impact Resistance¹

This standard is issued under the fixed designation D6643; the number immediately following the designation indicates the year of original adoption or, in the case of revision, the year of last revision. A number in parentheses indicates the year of last reapproval. A superscript epsilon (ϵ) indicates an editorial change since the last revision or reapproval.

INTRODUCTION

Corner impact resistance may be an important property for wood-base panel applications such as pallets, cargo crates, concrete form boards, fruit and vegetable boxes and furniture. There is a need to have suitable corner impact resistance in such products to ensure satisfactory end-use performance. This test method provides a technique to assess relative corner impact resistance of wood-base panels.

This test method uses a vertical test frame to create corner impact on a panel specimen. The test specimen is held in a fixture that free-falls to the floor. The test specimen is examined for distance of impact damage and for qualitative damage.

1. Scope

1.1 This test method shall be used to measure the relative corner impact resistance and other damage that may occur during the rough handling of wood-base panels or composite materials. This test method is suitable for all wood-base panels such as plywood, oriented strand board, hardboard, particleboard and medium density fiberboard as well as other composite panel products.

1.2 This test method covers determination and evaluation of the effects of panels being dropped from various heights with a predetermined amount of dead load and angle of impact to simulate an equivalent field application.

1.3 The values of all information will be stated in English units and regarded as standard. The SI values are written in parentheses.

1.4 *This standard does not purport to address all of the safety concerns, if any, associated with its use. It is the responsibility of the user of this standard to establish appropriate safety and health practices and determine the applicability of regulatory limitations prior to use.*

2. Referenced Documents

2.1 *ASTM Standards:*²

[D2395 Test Methods for Density and Specific Gravity \(Rela-](#)

[tive Density\) of Wood and Wood-Based Materials](#)
[D4442 Test Methods for Direct Moisture Content Measurement of Wood and Wood-Based Materials](#)

3. Terminology

3.1 *Definitions:*

3.1.1 *actual damage, n*—distance of damage counted from tip to damage line after dropping.

3.1.2 *damage line, n*—the innermost line where crushing occurs.

3.1.3 *dropping head, n*—the part of the machine connected to the quick release mechanism that holds the test specimen and added amount of dead load. The dropping head free-falls to create the impact between the panel specimen and the floor.

3.1.4 *impact tip, n*—the part of the specimen that will make initial contact with the floor after dropping.

3.1.5 *peeling, n*—the furthest splintering from the damage line. This provides additional understanding of damage characteristics.

3.1.6 *pull cord, n*—cord that is connected to the quick release mechanism that allows a quick release of the dropping head by pulling.

3.1.7 *quick release mechanism, n*—the equipment that allows for free release of the head when the pull cord is activated.

3.1.8 *reference line, n*—line from which all measurements are taken. This allows samples to be cut to approximate size and still ensure accurate values.

4. Summary of Test Method

4.1 Specimens are cut from the corners of the sample panel. The specimens are fastened to the lower edge of a dropping

¹ This test method is under the jurisdiction of ASTM Committee D07 on Wood and is the direct responsibility of Subcommittee D07.03 on Panel Products.

Current edition approved May 1, 2016. Published June 2016. Originally approved in 2001. Last previous edition approved in 2011 as D6643 – 01 (2011). DOI: 10.1520/D6643-01R16.

² For referenced ASTM standards, visit the ASTM website, www.astm.org, or contact ASTM Customer Service at service@astm.org. For *Annual Book of ASTM Standards* volume information, refer to the standard's Document Summary page on the ASTM website.

head and clamped into position. The weight of the dropping head is controlled to simulate the weight of the real application. The dropping head is raised to specified heights and released to fall to a rigid floor or other surface. The corner damage as well as peeling is measured to indicate the corner impact resistance. Peeling beyond the damage line may also be reported.

4.2 Optionally, sample can be subjected to wet-dry cycles to simulate end-use applications.

5. Significance and Use

5.1 This test method determines the corner impact damage that could be used to measure the relative corner impact resistance.

6. Apparatus

6.1 The drop test frame shall accommodate the test specimens as defined in Section 8. A test frame 15-ft (4572-mm) tall, 27-in. (686-mm) wide and 15-in. (381-mm) deep has been found suitable. The drop test frame shall be made of steel or other suitable material with two guide poles placed on either side to allow for smooth, low friction dropping from controlled heights. The lower half of the frame should be covered with a metal mesh to provide protection from flying debris. A door should be placed at the bottom of the frame to provide access for loading the specimens and changing the weight. A test frame found suitable for this method is shown in Fig. 1.

6.2 The dropping head should be large enough to attach to guide poles on either side of the test frame as well as be able to firmly attach the test specimen and hold additional weight. The weight of the dropping head, excluding the panel specimen shall be 31.5 ± 0.25 lb (14.29 ± 0.11 kg).

NOTE 1—The weight of the dropping head may be adjusted to target a different weight if relevant to a specific intended application. This typically requires additional weight to be added to the dropping head.

6.3 Metal bars should support the dropping head while changing specimens and the dead load to ensure no accidents occur during adjustments. The test specimen should be clamped to the bottom of the dropping head to make sure the corner of the specimen will contact the floor first. A hook is mounted at the top of the dropping head to attach to the quick release mechanism.

6.4 Attached to the quick release mechanism is a pull cord for the operator to start the test. A hand winch with a cable is also connected to the quick release mechanism to winch the dropping head and test specimen to the desired height.

6.5 The test frame is equipped with a measuring device to control the drop height as measured from the lowest tip of the panel specimen to the floor. The drop height is measured to the nearest $\frac{1}{8}$ in. (3 mm).

6.6 The test frame shall be mounted on a concrete floor or other solid rigid surface that will provide negligible deformation upon impact. The panel specimen impacts directly on the floor or other rigid surface.

NOTE 2—If the field condition involves impact at an angle, the impact surface may be angled to simulate the condition.



FIG. 1 Drop Test Machine

6.7 The dropping head, with panel specimen affixed, is dropped from heights of increasing 1-ft (305-mm) increments starting at 1 ft (305 mm). A new panel specimen is used for each drop. After each drop, the performance of the specimen is reported (see Section 12). Drop height is increased up to 15 ft (4572 mm), or until the impact damage exceeds practical limitations of the panels ability to perform for the intended application.

NOTE 3—Testing may begin at drop heights greater than 1 ft (305 mm) if lower drops deemed unnecessary. Similarly, incremental heights may be spaced greater than 1 ft (305 mm) as desired.

7. Hazards

7.1 *Safety Hazards*—Protective measures should be taken as test panel impact may create flying debris.

8. Test Specimen

8.1 The drop test specimens shall be cut in pentagonal shape with 4 sides measuring an equal 12 in. (305 mm) and the side directly opposite the impact tip shall measure 17 in. (432 mm).

The impact tip should be cut from the corner of the panel (Fig. 2) or from representative areas of the panel.

8.2 A reference line should be drawn on each specimen (Fig. 3), 15 in. (381 mm) from the impact tip. The reference line is drawn parallel to the back edge. Two holes shall be drilled close to the back edge to allow the sample to be clamped into the dropping head. The thickness shall be measured at the center of the two edges adjacent to the impact corner to an accuracy of $\pm 1\%$.

9. Specimen Moisture Condition

9.1 Specimens for dry testing shall be conditioned to constant weight and moisture content in a conditioning chamber at a relative humidity of $65 \pm 5\%$ and a temperature of $20 \pm 6^\circ\text{C}$ ($68 \pm 12^\circ\text{F}$).

NOTE 4—Other moisture conditions may be used to simulate the condition of the intended application.

10. Procedure

- 10.1 Cut and prepare specimens as indicated above.
- 10.2 Mark the specimens and measure the distance from impact tip to reference line.
- 10.3 Clamp the conditioned test specimen on the dropping head.
- 10.4 Add additional weight to simulate a particular application.
- 10.5 Raise head and drop at desired height (see 6.7). The dropping head can be raised to any height up to 15 ft (4572 mm) for testing.
- 10.6 Remove specimen and record the distance from the innermost part of the damage line to reference line.
- 10.7 Record all data such as added dead load, sample thickness, drop height and angle of impact.
- 10.8 Record the appearance of the failure that includes the peeling damage, actual damage, cracking, etc. Fig. 4 demonstrates some examples of corner appearance after impact.
- 10.9 Test each specimen only once.

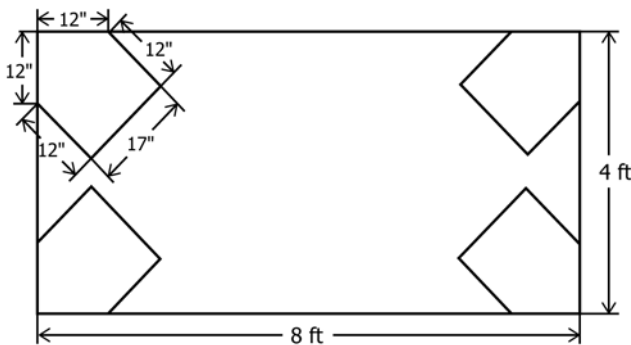


FIG. 2 Cutting Diagram

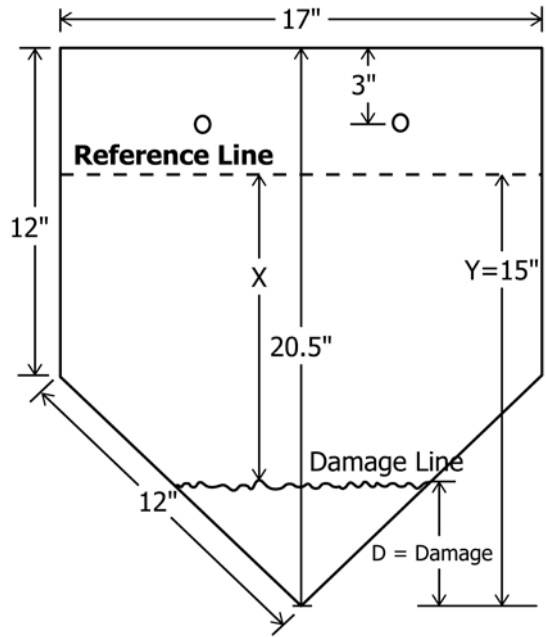


FIG. 3 Specimen and Measuring Diagram (Example)

10.10 Test moisture content of a sound portion of the specimen in accordance with Test Methods D4442 and density according to Test Method D2395.

11. Calculation

11.1 Calculate the actual damage; these values indicate the corner impact resistance.

$$\text{Damage distance} = Y - X$$

where:

- Y = distance from impact tip to reference line, 15 in. (381 mm), and
- X = distance from innermost part of damage line to reference line.

12. Report

12.1 The report shall include the test specimen moisture content, weight of the test specimen, impact angle, specimen thickness, total weight of the load head (including test specimen), drop height, damage distance and the description of the failure mode. Photographs may be helpful in illustrating the damage.

12.2 For optional cyclic testing, the report should also include wet and dry exposure conditions, and number of cycles.

13. Precision and Bias

13.1 Data are not presently available to develop a precision and bias statement.

14. Keywords

14.1 corner impact resistance; impact damage; wood-base panel

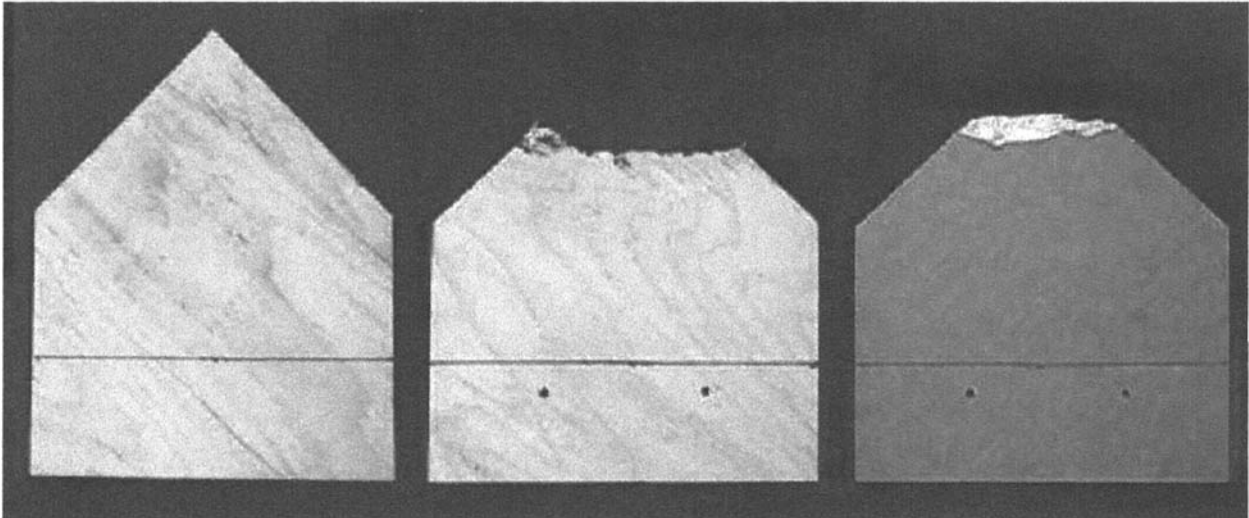


FIG. 4 Examples of Panel Corner Impact Damage Before and After Testing

ASTM International takes no position respecting the validity of any patent rights asserted in connection with any item mentioned in this standard. Users of this standard are expressly advised that determination of the validity of any such patent rights, and the risk of infringement of such rights, are entirely their own responsibility.

This standard is subject to revision at any time by the responsible technical committee and must be reviewed every five years and if not revised, either reapproved or withdrawn. Your comments are invited either for revision of this standard or for additional standards and should be addressed to ASTM International Headquarters. Your comments will receive careful consideration at a meeting of the responsible technical committee, which you may attend. If you feel that your comments have not received a fair hearing you should make your views known to the ASTM Committee on Standards, at the address shown below.

This standard is copyrighted by ASTM International, 100 Barr Harbor Drive, PO Box C700, West Conshohocken, PA 19428-2959, United States. Individual reprints (single or multiple copies) of this standard may be obtained by contacting ASTM at the above address or at 610-832-9585 (phone), 610-832-9555 (fax), or service@astm.org (e-mail); or through the ASTM website (www.astm.org). Permission rights to photocopy the standard may also be secured from the Copyright Clearance Center, 222 Rosewood Drive, Danvers, MA 01923, Tel: (978) 646-2600; <http://www.copyright.com/>