

Footwear — Test methods for uppers and lining — Flex resistance

The European Standard EN 13512:2001 has the status of a
British Standard

ICS 61.060

National foreword

This British Standard is the official English language version of EN 13512:2001.

The UK participation in its preparation was entrusted to Technical Committee TCI/69, Footwear and leather, which has the responsibility to:

- aid enquirers to understand the text;
- present to the responsible European committee any enquiries on the interpretation, or proposals for change, and keep the UK interests informed;
- monitor related international and European developments and promulgate them in the UK.

A list of organizations represented on this committee can be obtained on request to its secretary.

Cross-references

The British Standards which implement international or European publications referred to in this document may be found in the BSI Standards Catalogue under the section entitled “International Standards Correspondence Index”, or by using the “Find” facility of the BSI Standards Electronic Catalogue.

A British Standard does not purport to include all the necessary provisions of a contract. Users of British Standards are responsible for their correct application.

Compliance with a British Standard does not of itself confer immunity from legal obligations.

This British Standard, having been prepared under the direction of the Materials and Chemicals Sector Policy and Strategy Committee, was published under the authority of the Standards Policy and Strategy Committee on 25 January 2002

Summary of pages

This document comprises a front cover, an inside front cover, the EN title page, pages 2 to 8, an inside back cover and a back cover.

The BSI copyright date displayed in this document indicates when the document was last issued.

Amendments issued since publication

Amd. No.	Date	Comments

© BSI 25 January 2002

ISBN 0 580 38926 X

ICS 61.060

English version

Footwear - Test methods for uppers and lining - Flex resistance

Chaussures - Méthodes d'essai pour les tiges et les doublures - Résistance à la flexion

Schuhe - Prüfverfahren für Schäfte und Futter - Knickfestigkeit

This European Standard was approved by CEN on 3 October 2001.

CEN members are bound to comply with the CEN/CENELEC Internal Regulations which stipulate the conditions for giving this European Standard the status of a national standard without any alteration. Up-to-date lists and bibliographical references concerning such national standards may be obtained on application to the Management Centre or to any CEN member.

This European Standard exists in three official versions (English, French, German). A version in any other language made by translation under the responsibility of a CEN member into its own language and notified to the Management Centre has the same status as the official versions.

CEN members are the national standards bodies of Austria, Belgium, Czech Republic, Denmark, Finland, France, Germany, Greece, Iceland, Ireland, Italy, Luxembourg, Netherlands, Norway, Portugal, Spain, Sweden, Switzerland and United Kingdom.



EUROPEAN COMMITTEE FOR STANDARDIZATION
COMITÉ EUROPÉEN DE NORMALISATION
EUROPÄISCHES KOMITEE FÜR NORMUNG

Management Centre: rue de Stassart, 36 B-1050 Brussels

Contents

	page
Foreword.....	3
1 Scope	4
2 Normative references	4
3 Term and definition.....	4
4 Apparatus and material	4
5 Sampling and conditioning.....	5
6 Test method.....	6
6.1 Principle	6
6.2 Procedure	6
7 Test Report	8

Foreword

This European Standard has been prepared by Technical Committee CEN/TC 309 "Footwear", the secretariat of which is held by AENOR.

This European Standard shall be given the status of a national standard, either by publication of an identical text or by endorsement, at the latest by May 2002, and conflicting national standards shall be withdrawn at the latest by May 2002.

This European Standard is based on the IULTCS/IUP 20 method.

According to the CEN/CENELEC Internal Regulations, the national standards organizations of the following countries are bound to implement this European Standard: Austria, Belgium, Czech Republic, Denmark, Finland, France, Germany, Greece, Iceland, Ireland, Italy, Luxembourg, Netherlands, Norway, Portugal, Spain, Sweden, Switzerland and the United Kingdom.

1 Scope

This European Standard specifies a test method for determining the flex resistance of uppers and linings irrespective of the material, in order to assess the suitability for the end use.

2 Normative references

This European Standard incorporates by dated or undated reference, provisions from other publications. These normative references are cited at the appropriate places in the text, and the publications are listed hereafter. For dated references, subsequent amendments to or revisions of any of these publications apply to this European Standard only when incorporated in it by amendment or revision. For undated references the latest edition of the publication referred to applies (including amendments).

EN 12222, *Footwear - Standard atmospheres for conditioning and testing of footwear and components for footwear.*

EN 13400, *Footwear - Sampling location, preparation and duration of conditioning of samples and test pieces.*

EN ISO 3696, *Water for analytical laboratory use - Specification and test methods (ISO 3696:1987).*

3 Term and definition

For the purposes of this European Standard, the following term and definition applies.

3.1

flex resistance

resistance of a material to crack or otherwise fail at flexing creases


4 Apparatus and material

The following apparatus and material shall be used:

4.1 **Test machine**, including the following:

4.1.1 At least four pairs of clamps. The upper clamp consists of a pair of flat plates as shown in Figure 1.

The lower clamp is fixed and lies in the same vertical plane as the upper clamp.

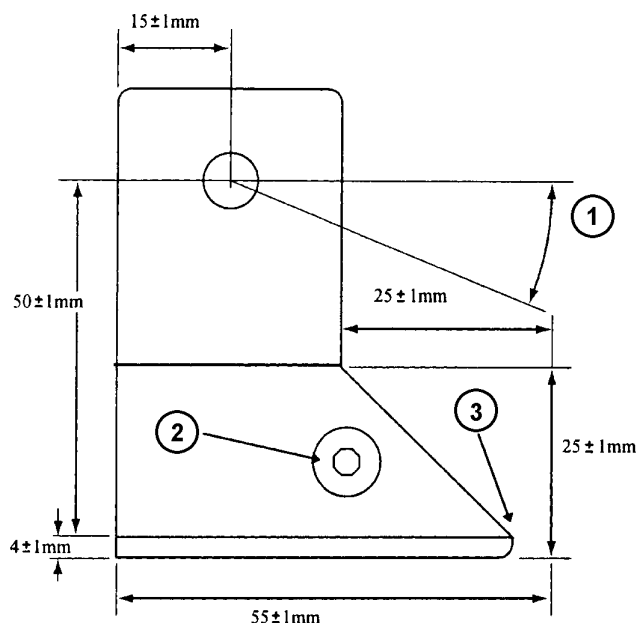

Key

- 1 Flexing angle $22^{\circ}30' \pm 0^{\circ}30'$
- 2 Clamp tightening screw
- 3 2 mm radius

Figure 1 — Upper clamp dimensions

4.1.2 Means of applying a simple harmonic reciprocating action to repeatedly move the upper clamp through an angle of $22^{\circ}30' \pm 0^{\circ}30'$. The speed of oscillation shall be $100 \text{ cycles/min} \pm 5 \text{ cycles/min}$.

The distance between the upper and lower clamp, when the upper clamp is in the horizontal position, shall be $25 \text{ mm} \pm 1 \text{ mm}$.

4.1.3 Means of counting the total number of cycles

4.2 For conducting cold tests, a **cabinet** capable of maintaining an internal atmospheric temperature of at least $-5^{\circ}\text{C} \pm 2^{\circ}\text{C}$ and large enough to contain the test machine. If required, temperatures down to -30°C can be used.

4.3 Press knife ($70 \text{ mm} \pm 1 \text{ mm}$) x ($45 \text{ mm} \pm 1 \text{ mm}$) or similar for cutting test specimens.

4.4 For wetting test specimens:

4.4.1 Pipette, with a capacity greater than 1 cm^3 .

4.4.2 Clean hard flat water resistant surface greater than $71 \text{ mm} \times 65 \text{ mm}$.

4.4.3 Glass rod or scraper.

4.4.4 Distilled or deionised water complying with Grade 3 of EN ISO 3696.

4.5 Optical magnifier or stereoscopic microscope, with a magnification of approximately 10 times.

5 Sampling and conditioning

5.1 Cut out the required number (see Table 1) of rectangular test specimens ($70 \text{ mm} \pm 1 \text{ mm}$) x ($45 \text{ mm} \pm 1 \text{ mm}$). Cut half the required number of test specimens with the longer edge parallel with the along direction of the material

(backbone direction for leather and selvedge (warp) or machine direction for non-leather materials) and half perpendicular to this. For test specimens cut from uppers the along direction is the X axis as defined in EN 13400.

For uppers, cut a test specimen from the centre of the forepart so that the centre of the test specimen aligns with the point of most flexing in the shoe.

For materials cut test specimens from a range of positions across the full usable width and length of the sheet material. For a material with a woven structure this shall prevent any two test specimens containing the same warp or weft threads.

It can be that it is impossible to cut a test specimen of sufficient size from certain types of footwear especially children's. The test specimen size may be reduced slightly but it is preferred to test the materials themselves and if necessary introduce perforations or seams (or other design features) similar to that found in the forepart the shoe.

Table 1 — Standard test conditions and number of test specimens

Type of material being tested	Testing conditions		
	Dry	Wet	Cold
Grain leather	2	2	-
Coated leather	2	2	2
Suede	-	2	-
Coated fabric	4	-	4
Fabric	4	-	-

5.2 Place all the test specimens which will be tested dry in a standard controlled atmosphere complying with EN 12222 for at least 24 h prior to test.

6 Test method

6.1 Principle

A rectangular test specimen is clamped in a flexing machine. The mounting of the test specimen is complex. One end of the test specimen is held in an upper clamp with the face or grain surface folded inwards so that these surfaces touch and the fold line is horizontal. It is then turned inside out and bent through 90° before being inserted in the lower clamp. In the lower clamp the test specimen is folded so that the reverse or flesh surface of the test specimen touch and the fold line is vertical. The test simulates the damage caused by the inward folding of the vamp of the upper but does not readily reproduce damage occurring on outward folds.

During the test the clamps oscillate at a constant speed so that the test specimen is repeatedly flexed. The tests can be carried out with either wet or dry test specimens at room temperature, or dry test specimens at sub-zero temperatures. After a predetermined number of cycles the tests are stopped and the test specimen is visually examined for signs of damage or salt spue.

6.2 Procedure

6.2.1 Mark on the back of each test specimen the along direction of the material, e.g. with an arrow, and determine the required testing conditions. It should be noted that linings will be tested face down and uppers face up.

6.2.2 Carry out the test in the conditioned standard atmosphere specified in EN 12222.

6.2.3 Place any test specimens that are to be tested wet onto the surface (see 6.1) with their reverse face uppermost. Spot 1 cm³ of water from a pipette onto the reverse side of the test specimen and use the glass rod (see 4.4.3) to work it uniformly into the material, to within 5 mm of the edge of the test specimen. It usually takes between 1 min and 2 min for the water to be absorbed. When testing leather two of the four test specimens shall normally be tested wet.

6.2.4 If conducting a cold test, ensure that the atmosphere surrounding the flexing machine is at the required temperature (usually $-5\text{ °C} \pm 2\text{ °C}$). Flexing of the test specimens shall commence 10 min \pm 1 min after they are placed in the cold environment. Therefore the procedure for loading the test specimens onto the flexing machine shall not take longer than 11 min.

6.2.5 Load each test specimen as follows:

6.2.5.1 Set the machine so that each upper clamp is horizontal, i.e. until it is at the upper extremity of its flexing stroke.

6.2.5.2 Unscrew the clamping plates of the upper clamp so that they are separated by a distance that is approximately twice the thickness of the material being tested.

6.2.5.3 Fold the test specimen with the face or grain surface inwards, so that the two longer edges of the test specimen are brought together. Insert one end of the folded test specimen between the clamping plates of the upper clamp so that the fold line is horizontal and rests on the ledge of the clamp (see Figure 2).

6.2.5.4 Tighten the clamping plates of the upper clamp to hold the test specimen in place.

6.2.5.5 Fold the test specimen inside out round the upper clamp to bring the reverse or flesh sides of the material into contact (see Figure 2).

6.2.5.6 Bend the test specimen through 90° and insert the free end of the test specimen (folded so that the reverse or flesh surface of the specimen touch) in the lower clamp, see Figure 2. Tighten the plates of the lower clamp to hold the test specimen in place ensuring that the specimen is taut and there is no bagginess around the top clamp.

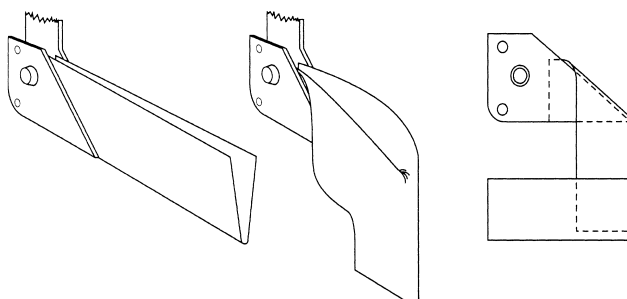


Figure 2 — Loading of test specimens

6.2.6 Run the machine until the first inspection stage, see Table 2.

6.2.7 In addition to the normal inspection stages wet test specimens shall be removed from the machine after every 6 000 cycles and assessed for salt spue before rewetting by repeating the procedure in 6.2.3.

Table 2 — Suitable inspection stages

	Dry	Wet	Sub zero
1 000	NO	YES	YES
2 000	NO	YES	YES
5 000	NO	YES	YES
10 000	YES	YES	YES
25 000	YES	NO	NO
50 000	YES	NO	NO
100 000	YES	NO	NO

The inspection stages used during each individual test will depend on the total time available for the test and the expected performance of the material.

6.2.8 Stop the test and remove the test specimens. Use both the unaided eye and the optical magnifier (see 4.5) to assess the flexing damage. When looking for damage inspect the specimen both folded and flat. Inspect the inward fold (i.e. the central fold close to the edge of the upper clamp) of each test specimen and record any signs of damage. Any damage to the parts of the test specimen held within either clamp of the flexing machine shall be ignored as shall any damage caused by rubbing of the test specimen on the clamps.

6.2.9 For materials with a continuous surface coating record the following:

- a) whether the specimen shows slight or heavy creasing in the fold;
- b) the number of cracks in fold;
- c) the depth of the deepest crack in the fold using the terms:
 - into but not through the surface finish;
 - extending through the surface finish to expose an underlying layer - state whether the exposed layer is a contrasting colour;
 - extending through the surface finish to expose the underlying material substrate;
- d) whether there is any delamination or flaking of the surface finish.

6.2.10 For fabric, where it is feasible to do so, count and record the number of broken yarns and state whether the yarns were warp or weft and whether the damage was on inward or outward folds.

6.2.11 For leather test specimens which are being assessed specifically for salt spue grade the amount of spue as "light", "marked", or "heavy", as judged by the unaided eye.

6.2.12 Replace the test specimens, start the flexing machine, and repeat the procedure in 6.2.8 to 6.2.12 at a number of suitable intervals, see Table 2, throughout the test.

7 Test Report

The test report shall include the following information:

- a) for each test specimen record:
 - whether it was tested wet or dry;
 - the temperature and if relevant, the humidity of the surrounding environment;
 - the testing direction and whether face up or face down;
 - the severity of flexing damage or salt spue and total number of flexing cycles at each inspection stage;
 - the total number of flexes;
- b) if testing finished footwear or uppers, a description of the style of shoe tested including commercial style codes;
- c) a description of the material tested, including commercial reference if known;
- d) reference to the method of test;
- e) date of testing;
- f) any deviations from this test method.

BSI — British Standards Institution

BSI is the independent national body responsible for preparing British Standards. It presents the UK view on standards in Europe and at the international level. It is incorporated by Royal Charter.

Revisions

British Standards are updated by amendment or revision. Users of British Standards should make sure that they possess the latest amendments or editions.

It is the constant aim of BSI to improve the quality of our products and services. We would be grateful if anyone finding an inaccuracy or ambiguity while using this British Standard would inform the Secretary of the technical committee responsible, the identity of which can be found on the inside front cover.
Tel: +44 (0)20 8996 9000. Fax: +44 (0)20 8996 7400.

BSI offers members an individual updating service called PLUS which ensures that subscribers automatically receive the latest editions of standards.

Buying standards

Orders for all BSI, international and foreign standards publications should be addressed to Customer Services. Tel: +44 (0)20 8996 9001.
Fax: +44 (0)20 8996 7001. Email: orders@bsi-global.com. Standards are also available from the BSI website at <http://www.bsi-global.com>.

In response to orders for international standards, it is BSI policy to supply the BSI implementation of those that have been published as British Standards, unless otherwise requested.

Information on standards

BSI provides a wide range of information on national, European and international standards through its Library and its Technical Help to Exporters Service. Various BSI electronic information services are also available which give details on all its products and services. Contact the Information Centre.
Tel: +44 (0)20 8996 7111. Fax: +44 (0)20 8996 7048. Email: info@bsi-global.com.

Subscribing members of BSI are kept up to date with standards developments and receive substantial discounts on the purchase price of standards. For details of these and other benefits contact Membership Administration.
Tel: +44 (0)20 8996 7002. Fax: +44 (0)20 8996 7001.
Email: membership@bsi-global.com.

Information regarding online access to British Standards via British Standards Online can be found at <http://www.bsi-global.com/bsonline>.

Further information about BSI is available on the BSI website at <http://www.bsi-global.com>.

Copyright

Copyright subsists in all BSI publications. BSI also holds the copyright, in the UK, of the publications of the international standardization bodies. Except as permitted under the Copyright, Designs and Patents Act 1988 no extract may be reproduced, stored in a retrieval system or transmitted in any form or by any means – electronic, photocopying, recording or otherwise – without prior written permission from BSI.

This does not preclude the free use, in the course of implementing the standard, of necessary details such as symbols, and size, type or grade designations. If these details are to be used for any other purpose than implementation then the prior written permission of BSI must be obtained.

Details and advice can be obtained from the Copyright & Licensing Manager.
Tel: +44 (0)20 8996 7070. Fax: +44 (0)20 8996 7553.
Email: copyright@bsi-global.com.