



BSI Standards Publication

**Ships and marine technology — Guidelines
for the operation and installation of
voyage data recorder (VDR)**

National foreword

This British Standard is the UK implementation of ISO 22472:2016. It supersedes BS ISO 22472:2006, which is withdrawn.

The UK participation in its preparation was entrusted to Technical Committee EPL/80, Maritime navigation and radiocommunication equipment and systems.

A list of organizations represented on this committee can be obtained on request to its secretary.

This publication does not purport to include all the necessary provisions of a contract. Users are responsible for its correct application.

© The British Standards Institution 2016
Published by BSI Standards Limited 2016

ISBN 978 0 580 89143 4

ICS 47.040

Compliance with a British Standard cannot confer immunity from legal obligations.

This British Standard was published under the authority of the Standards Policy and Strategy Committee on 31 October 2016

Amendments/corrigenda issued since publication

Date	Text affected
------	---------------

INTERNATIONAL
STANDARD

ISO
22472

Second edition
2016-09-15

**Ships and marine technology —
Guidelines for the operation
and installation of voyage data
recorder (VDR)**

*Navires et technologie maritime — Lignes directrices pour le
fonctionnement et l'installation des enregistreurs de données de
voyage (VDR)*



Reference number
ISO 22472:2016(E)

© ISO 2016



COPYRIGHT PROTECTED DOCUMENT

© ISO 2016, Published in Switzerland

All rights reserved. Unless otherwise specified, no part of this publication may be reproduced or utilized otherwise in any form or by any means, electronic or mechanical, including photocopying, or posting on the internet or an intranet, without prior written permission. Permission can be requested from either ISO at the address below or ISO's member body in the country of the requester.

ISO copyright office
Ch. de Blandonnet 8 • CP 401
CH-1214 Vernier, Geneva, Switzerland
Tel. +41 22 749 01 11
Fax +41 22 749 09 47
copyright@iso.org
www.iso.org

Contents

Page

Foreword	v
1 Scope	1
2 Normative references	1
3 Terms, definitions and abbreviated terms	2
3.1 Terms and definitions.....	2
3.2 Abbreviated terms.....	4
4 VDR interface	4
4.1 General.....	4
4.2 Input signals required for VDR interfaces.....	4
4.2.1 Signals defined in applicable parts of IEC 61162 series.....	4
4.2.2 Signals other than IEC 61162 format.....	5
4.2.3 Bridge audible sound captured by microphones.....	6
4.2.4 VHF radio connection.....	6
4.2.5 Radar display connection.....	6
4.2.6 ECDIS display connection.....	6
4.3 Main alarms.....	7
4.4 AIS.....	7
4.5 Bridge alert management interface.....	7
5 Details of interfaces between sensors and VDR	7
5.1 General.....	7
5.2 Date and time (IEC 61996-1:2013, 4.6.1).....	7
5.3 Ship's position (IEC 61996-1:2013, 4.6.2).....	8
5.4 Speed (IEC 61996-1:2013, 4.6.3).....	8
5.5 Heading (IEC 61996-1:2013, 4.6.4).....	8
5.6 Bridge audio (IEC 61996-1:2013, 4.6.5).....	9
5.7 VHF communication audio (IEC 61996-1:2013, 4.6.6).....	9
5.8 Radar data-post-display selection (IEC 61996-1:2013, 4.6.7).....	9
5.9 ECDIS (IEC 61996-1:2013, 4.6.8).....	11
5.10 Depth (Echo sounder) (IEC 61996-1:2013, 4.6.9).....	12
5.11 Main alarms on the bridge (IEC 61996-1:2013, 4.6.10).....	12
5.12 Rudder order and response (IEC 61996-1:2013, 4.6.11).....	13
5.12.1 Rudder order and response from HCS or TCS (if installed).....	13
5.12.2 Rudder order and response from steering system.....	13
5.13 Engine and thruster order and response (IEC 61996-1:2013, 4.6.12).....	14
5.13.1 Engine order and response.....	14
5.13.2 Thruster order and response.....	14
5.14 Hull openings (doors) status (IEC 61996-1:2013, 4.6.13).....	15
5.15 Watertight and fire door status (IEC 61996-1:2013, 4.6.14).....	15
5.15.1 Watertight and fire door status.....	15
5.16 Accelerations and hull stresses (IEC 61996-1:2013, 4.6.15).....	16
5.17 Wind speed and direction (IEC 61996-1:2013, 4.6.16).....	16
5.18 AIS data (IEC 61996-1:2013, 4.6.17).....	16
5.19 Rolling motion (IEC 61996-1:2013, 4.6.18).....	17
5.20 Configuration (IEC 61996-1:2013, 4.6.19).....	17
5.21 Electronic logbook (IEC 61996-1:2013, 4.6.20).....	17
6 Installation	18
6.1 Required VDR equipment.....	18
6.2 Power supply of the VDR and interfaces.....	18
6.2.1 Power supply from the ship's emergency source of electrical power.....	18
6.2.2 Power supply from the reserve power source.....	18
6.3 Installation of the protective capsule and float free capsule (IEC 61996-1:2013, 5.1.1).....	18

6.4	Positions of microphones (IEC 61996-1:2013, 4.6.5)	19
6.5	Cable connections	19
6.6	Ship specific documentation	19
6.6.1	Planning and approval documentation	19
7	Acceptance test (Commissioning)	20
8	Performance Tests	20
8.1	General	20
8.2	Operational Performance Test (IEC 61996-1:2013, 5.12)	20
8.3	Annual Performance Test	21
9	Download and playback equipment for investigation authorities	21
9.1	General	21
9.2	Information for use by an investigation authority (IEC 61996-1)	21
Annex A	(informative) Mandatory alarms (IEC 61996-1:2013, Annex B)	22
Annex B	(informative) LAN image protocol (IEC 61996-1:2013, Annex E)	25
Annex C	(informative) Network for image transmission (IEC 61996-1:2013, Annex F)	30
Annex D	(informative) ECDIS display source information (IEC 61996-1:2013, Annex G)	33
Annex E	(informative) Manufacturer's documentation (IEC 61996-1:2013, 5.5)	39
Annex F	(informative) Performance test report (IMO Circular MSC.1/Circ.1222 Appendix)	41
Bibliography		46

Foreword

ISO (the International Organization for Standardization) is a worldwide federation of national standards bodies (ISO member bodies). The work of preparing International Standards is normally carried out through ISO technical committees. Each member body interested in a subject for which a technical committee has been established has the right to be represented on that committee. International organizations, governmental and non-governmental, in liaison with ISO, also take part in the work. ISO collaborates closely with the International Electrotechnical Commission (IEC) on all matters of electrotechnical standardization.

The procedures used to develop this document and those intended for its further maintenance are described in the ISO/IEC Directives, Part 1. In particular the different approval criteria needed for the different types of ISO documents should be noted. This document was drafted in accordance with the editorial rules of the ISO/IEC Directives, Part 2 (see www.iso.org/directives).

Attention is drawn to the possibility that some of the elements of this document may be the subject of patent rights. ISO shall not be held responsible for identifying any or all such patent rights. Details of any patent rights identified during the development of the document will be in the Introduction and/or on the ISO list of patent declarations received (see www.iso.org/patents).

Any trade name used in this document is information given for the convenience of users and does not constitute an endorsement.

For an explanation on the meaning of ISO specific terms and expressions related to conformity assessment, as well as information about ISO's adherence to the World Trade Organization (WTO) principles in the Technical Barriers to Trade (TBT) see the following URL: www.iso.org/iso/foreword.html.

The committee responsible for this document is ISO/TC 8, *Ships and marine technology*, Subcommittee SC 6, *Navigation and ship operations*.

This second edition cancels and replaces the first edition (ISO 22472:2006), which has been technically revised.

Ships and marine technology — Guidelines for the operation and installation of voyage data recorder (VDR)

1 Scope

The purpose of this International Standard is to provide guidance for the planning, installation and operational testing of voyage data recorder (VDR) installations according to specifications of IMO Resolution MSC.333 (90) and associated IEC 61996-1. This International Standard mainly covers interfaces between VDR and external sensors, which are the main subject for technical agreements among users, shipyards, VDR suppliers and/or sensor manufacturers when installations are planned. In addition, matters of performance test and playback are described as well. Furthermore, details for checking of items related to the interfaces and the installation are introduced. This International Standard is not intended for the standardization of performance factors and functional requirements related to VDR.

When whole or partial replacement of an existing simplified VDR (S-VDR) is required, this International Standard provides guidance according to the requirements of IMO Resolution MSC.163 (78) and IEC 61996-2 for installation of the items concerned.

NOTE Texts of this International Standard that are identical to that of IMO Resolution MSC.333 (90) and/or IEC 61996-1 are formatted in *italics*, and the regulation and associated performance standard clause numbers are indicated in brackets, where necessary.

2 Normative references

The following documents, in whole or in part, are normatively referenced in this document and are indispensable for its application. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments) applies.

IEC 60945, *Maritime navigation and radiocommunication equipment and systems — General requirements — Methods of testing and required testing results*

IEC 61097-7, *Global maritime distress and safety system (GMDSS) — Part 7: Shipborne VHF radiotelephone transmitter and receiver — Operational and performance requirements, methods of testing and required test results*

IEC 61162-1, *Maritime navigation and radiocommunication equipment and systems — Digital interfaces — Part1: Single talker and multiple listeners*

IEC 61162-2, *Maritime navigation and radiocommunication equipment and systems — Digital interfaces — Part2: Single talker and multiple listeners, high-speed transmission*

IEC 61162-450, *Maritime navigation and radiocommunication equipment and systems — Digital interfaces — Part 450: Multiple talkers and multiple listeners — Ethernet interconnection*

IEC 61996-1, *Marine navigation and radiocommunication equipment and systems — Shipborne voyage data recorder (VDR) — Performance requirements — Methods of testing and required test results*

IMO Resolution MSC.333 (90):2012, *Performance standards for shipborne voyage data recorders (VDRs)*

3 Terms, definitions and abbreviated terms

For the purposes of this document, the following terms and definitions apply.

3.1 Terms and definitions

3.1.1

alert

announcement of abnormal situations and conditions requiring attention

Note 1 to entry: *Alerts are divided in four priorities: emergency alarms, alarms, warnings and caution.*

3.1.2

alarm

condition requiring immediate attention and action, to maintain the safe navigation and operation of the ship

Note 1 to entry: *An alarm is a high priority of an alert.*

3.1.3

bridge work station

position at which a person is expected to be when performing one of the normal bridge duties

EXAMPLE *The following work stations as described in MSC/Circ.982:*

- workstation for navigating and manoeuvring;
- workstation for monitoring;
- workstation for manual steering;
- workstation for docking;
- workstation for planning and documentation;
- workstation for safety; and
- workstation for communication.

3.1.4

combined EPIRB/VDR capsule

single unit which meets all the requirements of a satellite EPIRB (as required by the carriage requirements of SOLAS IV) and all the relevant requirements of a VDR (as required by the carriage requirements of SOLAS V)

Note 1 to entry: *Combined EPIRB/VDR capsule was defined by IMO COMSAR 8.*

3.1.5

configuration data

describes the vessel's equipment, its installation on the vessel and its relation to the VDR

Note 1 to entry: *The storage and playback software uses this data to store the data record and to convert the data record into information that assists casualty investigation during playback.*

3.1.6

data

any item of information received by the VDR for recording, including numerical values, text and audio or radar signals and including all configuration data, except where specifically stated or where the context dictates otherwise

3.1.7

dedicated reserve power source

battery, with suitable automatic charging arrangements, dedicated solely to the VDR, of sufficient capacity to operate it as required by IMO Resolution MSC.333 (90):2012, 5.4.2

3.1.8

final recording medium

items of hardware on which the data is recorded such that access to any one of them would enable the data to be recovered and played back by use of suitable equipment

Note 1 to entry: *The combination of a fixed recording medium (3.1.9) and float-free recording medium (3.1.10) and long-term recording medium (3.1.11), together, is recognized as the final recording medium.*

3.1.9

fixed recording medium

part of the final recording medium (3.1.8) which is protected against fire, shock, penetration and a prolonged period on the ocean floor

Note 1 to entry: *to entry: It is expected to be recovered from the deck of the vessel that has sunk. It has a means of indicating location.*

3.1.10

float-free recording medium

part of the final recording medium (3.1.8) which should float-free after a sinking

Note 1 to entry: *It has a means of indicating location.*

3.1.11

long-term recording medium

permanently installed part of the final recording medium (3.1.8)

Note 1 to entry: *It provides the longest record duration and has a readily accessible interface for downloading the stored data.*

3.1.12

playback equipment

any data medium with the playback software, the operational instructions and any special parts required for connecting a commercial-off-the-shelf laptop computer to the VDR

3.1.13

playback software

copy of the software program to provide the capability to download the stored data and play back the information

Note 1 to entry: *The software should be compatible with an operating system available with commercial-off-the-shelf laptop computers and where non-standard or proprietary formats are used for storing the data in the VDR, the software should convert the stored data into open industry standard formats.*

3.1.14

playback system

system including the playback equipment that is capable of downloading and playing back the recorded data

3.1.15

voyage data recorder

VDR

complete system, including any items required to interface with the sources of input signals, their processing and encoding, the final recording medium, the playback equipment, the power supply and dedicated reserve power source

3.1.16

resolution

smallest detectable increment between two values

3.1.17

signal source

any sensor or device external to the VDR, to which the VDR is connected and from which it obtains signals and data to be recorded

3.2 Abbreviated terms

EPFS Electronic Position Fixing System

IMO International Maritime Organization

IEC International Electrotechnical Commission

INS Integrated Navigation System

LAN Local area network

ROV Remotely operated vehicle

UTC Coordinated universal time

VHF Very high frequency

4 VDR interface

4.1 General

According to IMO Resolution MSC.333 (90):2012, Clause 8 and IEC 61996-1:2013, 4.3.5, *interfacing between the various sensors and VDR shall be in accordance with the relevant international interface standard (IEC 61162 series), where possible*. As a minimum, the sentences that VDR is to support are given in IEC 61996-1:2013, Annex A.

In case there is no free interface port available for the connection to the VDR, a “data splitter”-interface should be added for providing the additionally required output port of a sensor. A “data splitter”-interface shall comply with IEC 60945.

It is also specified that *any connection to any item of the ship's equipment shall be such that operation of that equipment suffers no deterioration, even if the VDR system develops faults*. [IMO Resolution MSC.333 (90):2012, Clause 8].

It may be noted that the use of signals defined under common standards results in fewer problems for the installation of any VDR, even if the interfaces of several mandatory shipborne equipment are (still) not internationally standardized, such as VHF communication signals, radar image, watertight door/fire door/hull opening (door) status signals and alert signals. It is therefore desired on the installation planning phase that equipment output signals should at least be in accordance with the alternative signals that are specified in [Clause 5](#).

4.2 Input signals required for VDR interfaces

To promote common understanding among equipment manufacturers, ship builders and operators, the signals used for the interfaces between sensors and the VDR are described in [4.2.1](#) to [4.2.6](#), [4.3](#) and [4.4](#). Forms for filling in and checking the details for each individual input to the VDR are provided in [5.2](#) to [5.21](#).

4.2.1 Signals defined in applicable parts of IEC 61162 series

The characteristics of “talkers” and “listeners” referred to IEC 61162-1. With regard to VDR interfacing, the VDR is considered the “listener” and the sensors are considered the “talkers”. Thus, when planning VDR installation, care shall be taken to ensure that sensors and VDR are compatible in terms of interface signal types.

a) IEC 61162-1 and IEC 61162-2

IEC 61162-1 and IEC 61162-2 are of the single-talker and multi-listener type communication. The difference between types is the communication speed, i.e. 4 800 bps by IEC 61162-1 and 38,4 kbps

by IEC 61162-2. At present, IEC 61162-1 is normally used for communications between marine equipment, except that IEC 61162-2 is used for AIS interfaces and sometimes gyro compass.

Table 1 — Sentences used for interface of VDR (referred to in IEC 61996-1:2013, Annex A)

	Parameter to be recorded	IEC 61996-1:2013 clause(s)	Sentence format
1	Date and time	4.6.1	ZDA
2	Ship's position and datum used	4.6.2	GNS, DTM, GLL, GGA, RMC, NSR
3	Speed (water and/or ground)	4.6.3	VBW, VLW, VTG
4	Heading (true)	4.6.4	THS, HDT
5	Heading (magnetic)	4.6.4	HDG
6	Depth (echo sounder)	4.6.9	DPT
7	Alarms	4.6.10	ALR, ALA, FIR, WAT, ACM, HBT, ALC, ALF
8	Rudder order/response manual	4.6.11	RSA, ROR
9	Rudder order/response automatic	4.6.11	HTC, HTD
10	Engine order/response	4.6.12	ETL, PRC, TRC, TRD, RPM, XDR, ROR, RSA
11	Hull openings, watertight doors, Fire doors	4.6.13, 4.6.14	DOR, GEN, XDR
12	Accelerations and hull stress	4.6.15	HSS, XDR
13	Wind speed and direction	4.6.16	MWV, MWD
14	AIS	4.6.17	VDM, VDO, ALR
15	VDR alert output		ALC, HBT

NOTE No. 15 is a "talker" and not recording data for VDR.

b) IEC 61162-450

IEC 61162-450 is based on the application of an appropriate suite of existing international standards to provide a framework for implementing data transfer between devices on a shipboard Ethernet network. IEC 61162-450 provides a higher speed and higher capacity alternative to the IEC 61162-1 and IEC 61162-2 standards while retaining these standards' basic data format.

Sentences available for use for VDRs are listed in [Table 1](#).

NOTE 1 Appropriate methods to ensure network safety and security may be applied.

NOTE 2 IEC 61162-460 is published.

4.2.2 Signals other than IEC 61162 format

Any interface units which may be required to convert non-IEC 61162 signals, shall conform to the requirements of IEC 60945 (IEC 61996-1:2013, 4.3.5).

According to the requirement that *any connection to any item of the ship's equipment shall be such that operation of that equipment suffers no deterioration, even if the VDR system develops faults [IMO Resolution MSC.333 (90):2012, Clause 8]*, interface signals shall be provided by the sensors in such a way, that failures of the VDR or of cables connecting the VDR cannot hamper the functionality of the source equipment, i.e. contacts or signals of equipment for primary ship manoeuvring functions shall be provided as "dry contacts" or through isolation amplifiers.

Signal formats not specified in IEC 61996-1 such as "contact" signal and analogue signals (e.g. voltage, current, synchro and pulse, etc.) except Bridge and Communications audio signals, have to be converted to a "serial signal" before they can be interfaced to VDR.

In some VDR units, a signal converter will be included. In other instances, it will be possible to insert a converter between the sensor and the VDR. Thus in most instances of non-standard signals, it should still be possible to achieve an interface. However, there are still many sensors which output analogue signals and it is recommended that operators, shipbuilders and owners ensure that interface between specific equipment is possible.

4.2.3 Bridge audible sound captured by microphones

In accordance with IEC 61996-1:2013, 4.6.5 [IMO Resolution MSC.333 (90):2012, 5.5.5], requirement of microphone is as follows. *Microphones shall be positioned on the bridge covering all work stations as described in MSC/Circ.982 so that conversation is recorded. The recording shall be such that, on playback, a normal speaking voice shall provide adequate intelligibility while the ship is performing its normal operations. This performance shall be maintained at all work stations while there is a single audio alarm anywhere on the bridge or any noise, including noise from faulty equipment or mounting, or wind. This shall be achieved through the use of at least two channels of audio recording. Microphones positioned outside on bridge wings, shall be recorded on at least one additional separate channel.*

In addition, it is stated in IEC 61996-1:2013, 5.6.1 that *the microphones forming the bridge audio data source are to be considered to be parts of the VDR. The form of the connections, signal levels and impedances, are at the option of the manufacturer.*

4.2.3.1 Location of microphones

Microphones shall be installed to cover certain areas around main workstations on the bridge, and also at each wing or other manoeuvring workstation outside the wheelhouse, whereby suitable locations shall be selected considering ambient noise and work area's circumstances, which shall also include their proximity to forced air flow, ventilation systems and speakers. Even on an enclosed bridge, attention shall be paid not only to main workstations but also to wing sides as well.

4.2.4 VHF radio connection

In accordance with IEC 61996-1:2013, 4.6.6 Communications audio [IMO Resolution MSC.333 (90):2012, 5.5.6], *VHF communications relating to ship operations shall be recorded, VHF communications relating to ship operations shall be recorded on an additional separate channel to those referred to in 4.4.5, independently of the bridge audio. The recording shall include both transmitted and received audio signals and shall be continuous from a directly connected fixed VHF set to be designated at installation. Although more than one VHF communication equipment may normally be installed on the bridge, the IMO requirements do not define which VHF shall be interfaced to the VDR. Where the bridge workstation design or standard bridge operation makes two VHF radio readily available for navigating and manoeuvring communications, the receive and transmit audio of each may connect to the VDR by wire on a separate channel if available, or else they may share a channel provided they are the only inputs on a channel. Other VHF transceivers may be connected by wire or monitored with microphone(s).*

4.2.5 Radar display connection

In accordance with IEC 61996-1:2013, 4.6.7 [IMO Resolution MSC.333 (90):2012, 5.5.7], *the electronic signals of the main displays of both ship's radar installations as required by SOLAS regulations shall be recorded. The recording method shall be such that, on playback, it is possible to present a faithful replica of the entire radar display that was on view at the time of recording, albeit within the limitations of any bandwidth compression techniques that are essential to the working of the VDR.*

NOTE In the case of a ship fitted with an INS, "Radar display" signifies "collision avoidance task with related information".

4.2.6 ECDIS display connection

In accordance with IEC 61996-1:2013, 4.6.8 [IMO Resolution MSC.333 (90):2012, 5.5.58], *where a vessel is fitted with an ECDIS installation, the VDR shall record the electronic signals of the ECDIS display in use*

at the time as the primary means of navigation. The recording method shall be such that, on playback, it is possible to present a faithful replica of the entire ECDIS display that was on view at the time of recording, albeit within the limitations of any bandwidth compression techniques that are essential to the working of the VDR and in addition the source of the chart data and the version used.

NOTE 1 Only the ECDIS, either standalone unit(s) or part of INS, installed on board and type approved in accordance with IEC 61174 needs to comply with the above requirement.

NOTE 2 In the case of a ship fitted with an INS, "ECDIS display" signifies "route monitoring task or voyage planning task with related information".

4.3 Main alarms

In accordance with IEC 61996-1:2013, 4.6.10 [IMO Resolution MSC.333 (90):2012, 5.5.10], this shall include the status of all IMO mandatory alarms on the bridge as given in Resolution A.1021 (26) Table 10.1.1 (see [Annex A](#)) or as received from the Bridge Alert Management system, if installed, recorded as individually identified alarms.

NOTE The Bridge Alert Management is defined in IMO Resolution MSC.302 (87). The Central Alert Management defined on MSC.302 (87) does not transmit all received alerts to VDR.

4.4 AIS

In accordance with IEC 61996-1:2013, 4.6.17 [IMO Resolution MSC.333 (90):2012, 5.5.17], all AIS data shall be recorded.

4.5 Bridge alert management interface

In accordance with IEC 61996-1:2013, 5.13, the VDR shall output alerts to a bridge alert management system if fitted.

NOTE The Bridge Alert Management system means the Central Alert Management system in this paragraph.

5 Details of interfaces between sensors and VDR

5.1 General

By using the following sections for each system, the factors related to the interfaces between VDR and sensors can be confirmed between the parties involved.

5.2 Date and time (IEC 61996-1:2013, 4.6.1)

- a) Standard: Date and time, referenced to UTC, shall be obtained from a source external to the ship and an internal clock shall be synchronized with valid date and time data.

Data to be recorded	Relevant Standard		IEC 61162-1	Remarks (Confirmed type of signal)
	IMO Resolution MSC.333 (90):2012	IEC 61996-1:2013		
Date and UTC	5.4.1	4.6.1	ZDA	

- b) Alternative signals may be used, if the signal required by the standard above is not available.

Data to be recorded	Standard	Signal Specification	Confirmed type of signal
Date and UTC	IEC 61162-1	GNS, GGA	
Ship's common time reference			
EPFS			

5.3 Ship's position (IEC 61996-1:2013, 4.6.2)

Standard: *Latitude and longitude, and the datum used, shall be derived from a designated EPFS or INS if available. The recording shall ensure that identity and status of the source can always be determined on playback. The ship's position shall be recorded, as available on the ship, up to a resolution of 0,000 1 min of arc.*

Data to be recorded	Relevant Standard		IEC 61162-1	Remarks (Confirmed type of signal)
	IMO Resolution MSC.333 (90):2012	IEC 61996-1:2013		
Ship's position	5.4.2	4.6.2	[GNS]/DTM/ GLL/[GGA]/ RMC/NSR	

5.4 Speed (IEC 61996-1:2013, 4.6.3)

a) Standard: *Speed through the water and speed over the ground (transverse and longitudinal), including an indication of which it is, derived from the ship's speed and distance measuring equipment, as required by SOLAS regulations shall be recorded, as available on the ship, up to a resolution of 0,1 knot.*

Data to be recorded	Relevant Standard		IEC 61162-1	Remarks (Confirmed type of signal)
	IMO Resolution MSC.333 (90):2012	IEC 61996-1:2013		
Speed	5.4.3	4.6.3	VBW/VLW/ VTG	

b) Alternative signals may be used, if the signal required by the standard above is not available.

Data to be recorded	Standard	Signal Specification	Confirmed type of signal
Speed	IEC 61162-1	VHW (to the water)	
Manufacturer's sentence		Proprietary sentence Signal voltage: __V	
Pulse signal		200 p/nm, 400 p/nm, etc.	

5.5 Heading (IEC 61996-1:2013, 4.6.4)

a) Standard: *As indicated by a designated ship's heading source. The ship's heading shall be recorded, as available on the ship, up to a resolution of 0,1°.*

Data to be recorded	Relevant Standard		IEC 61162-1	Remarks (Confirmed type of signal)
	IMO Resolution MSC.333 (90):2012	IEC 61996-1:2013		
Heading (true)	5.4.4	4.6.4	THS/HDT	

b) Alternative signals may be used, if the signal required by the standard above is not available.

Data to be recorded	Standard	Signal Specification	Confirmed type of signal
Manufacturer's sentence		Proprietary sentence Signal voltage: __V	
Synchro signal		360×, 180×, 90×, 36×, 1×, etc. Primary voltage: __V, __Hz	
Step signal		360×, 180×, 90×, 36×, 1× Voltage: 24 V, 35 V, 50 V, 70 V, etc.	

5.6 Bridge audio (IEC 61996-1:2013, 4.6.5)

Standard: *Microphones shall be positioned on the bridge covering all work stations as described in MSC/Circ.982 so that conversation is recorded. The recording shall be such that, on playback, a normal speaking voice shall provide adequate intelligibility while the ship is performing its normal operations. This performance shall be maintained at all work stations while there is a single audio alarm anywhere on the bridge or any noise, including noise from faulty equipment or mounting, or wind. This shall be achieved through the use of at least two channels of audio recording. Microphones positioned outside on bridge wings, shall be recorded on at least one additional separate channel.*

Data to be recorded	Relevant Standard		IEC 61162-1	Remarks (Confirmed type of signal)
	IMO Resolution MSC.333 (90):2012	IEC 61996-1:2013		
Bridge Audio (Audio signal)	5.5.5	4.6.5	None	

5.7 VHF communication audio (IEC 61996-1:2013, 4.6.6)

- a) Standard: *VHF communications relating to ship operations shall be recorded on an additional separate channel to those referred to in 5.6, independently of the bridge audio. The recording shall include both transmitted and received audio signals and shall be continuous from a directly connected fixed VHF set to be designated at installation.*
- b) Alternative signals may be used, if the signal required by the standard above is not available.

Data to be recorded	Relevant Standard		IEC 61162-1	Remarks (Confirmed type of signal)
	IMO Resolution MSC.333 (90):2012	IEC 61996-1:2013		
VHF communication (Audio signal)	5.4.6	4.6.6	None	
Sentence	None			
VHF output signal	IEC 61097-7	0,775 V RMS (600 ohm)		

5.8 Radar data-post-display selection (IEC 61996-1:2013, 4.6.7)

- a) Standard: *The electronic signals of the main displays of both ship's radar installations as required by SOLAS regulations. The recording method shall be such that, on playback, it is possible to present a faithful replica of the entire radar display that was on view at the time of recording, albeit within the limitations of any bandwidth compression techniques that are essential to the working of the VDR.*

Where the VDR and Radar are capable of being connected together through a LAN interface, this shall be done according to IEC 61162-450 and/or according to IEC 62388:2007, H.2 (IEC 61996-1:2013, 5.8.1.1.2).

Where the radar system installed uses multi-function displays, the screen image shall be captured from each display that is showing the radar required by SOLAS according to IEC 61996-1:2013, 5.8, using a LAN display output when provided as described above. The identity of the display from which the image was captured shall be recorded by the method described in IEC 61996-1:2013, Annex E.

Data to be recorded	Relevant Standard		IEC 61162-1	Remarks (Confirmed type of signal)
	IMO Resolution MSC.333 (90):2012	IEC 61996-1:2013		
Radar display image (image) recording interval: 1 time/15 s or less (referred to in IEC 61996-1:2013, 5.8.1.1.1 or 5.8.1.1.2)	5.5.7	4.6.7, 5.9	None	
Resolution of image (pixel)	640 × 350 to 1 280 × 1 024/1 600 × 1 200 1 900 × 1 280 and 1 920 × 1 200 are as options			IEC 61996-1:2013, 5.8.1.1.1
Refresh rate	60 Hz to 85 Hz/60 Hz			IEC 61996-1:2013, 5.8.1.1.1
Signals	R, G, B, V, H			IEC 61996-1:2013, 5.8.1.1.1
Level of signal	Below 1 V			IEC 61996-1:2013, 5.8.1.1.1
Protocol	TCP/IP — (IEC 62388) UDP — (IEC 61162-450)			IEC 61996-1:2013, 5.8.1.1.2
Formats	.bmp — (Microsoft GDI — Bitmap reference) .png — (ISO/IEC 159748) .jpg — (ISO/IEC 10918) .jp2 — (JPEG 2000 — ISO/IEC 15444 in lossless format)			IEC 61996-1:2013, 5.8.1.1.2

b) Where standalone radar is fitted, alternative signals may be used. Specifications of radar display are specified in VESA DMTS or in manufacturer’s standards. Therefore, there may be many specimens of radar displays that are briefly summarized in the table below.

Method of Scanning	Signal Type	Remarks
1 Non-interlaced ^a	R, G, B V/H each independent signal	
2 Non-interlaced ^a	R, G, B each independent signal V/H are composited on G	
3 Interlaced ^b	R, G, B V/H each independent signal	
4 Interlaced ^b	R, G, B each independent signal V/H are composited on G	
5 Others	Composite signal	@NTSC (scanning of Japan, USA TV) @PAL (scanning of European TV), etc.

^a Non-interlaced: This method is VESA DMTS method which is used for display of personnel computer. Scanning from the top of display to the bottom of display.

^b Interlaced: This method of scanning is normally used for TV. Even lines and odd lines scanning separately moved in turn from the top of display to the bottom of display.

5.9 ECDIS (IEC 61996-1:2013, 4.6.8)

- a) Standard: *Where a vessel is fitted with an ECDIS installation, the VDR shall record the electronic signals of the ECDIS display in use at the time as the primary means of navigation. The recording method shall be such that, on playback, it is possible to present a faithful replica of the entire ECDIS display that was on view at the time of recording, albeit within the limitations of any bandwidth compression techniques that are essential to the working of the VDR and in addition the source of the chart data and the version used.*

Where the VDR and ECDIS are capable of being connected together through a LAN interface this shall be done according to IEC 61162-450 and/or according to IEC 62388:2007, H.2 (IEC 61996-1:2013, 5.8.1.1.1).

Where the ECDIS system installed uses multi-function displays, the screen image shall be captured from each display that is showing the navigation ECDIS required by SOLAS according to IEC 61996-1:2013, 5.8 using a LAN display video output when provided as described above. The identity of the display from which the image was captured shall be recorded by the method described in IEC 61996-1:2013, Annex E. The information about charts used by ECDIS shall be recorded by VDR using the method described in IEC 61996-1:2013, Annex G where LAN interface is available.

Within each class with type "X-band", "S-band" and "ECDIS" (see [Annex E](#)) one image shall be stored at an interval not exceeding 15 s. The most recent image from each location shall be stored in turn (IEC 61196-1:2013, 5.1.1.4).

For post-display selection, the location names of the sources (e.g. ECDIS, radar and multifunction displays) shall be non-identical names.

Data to be recorded	Relevant Standard		IEC 61162-1	Remarks (Confirmed type of signal)
	IMO Resolution MSC.333 (90):2012	IEC 61996-1:2013		
ECDIS display image (image) and the source of the chart data and the version used recording interval: image: 1 time/15 s or less (referred to in IEC 61996-1:2013, 5.8.1.1.3) ECDIS display source: every 10 min	5.4.8	4.6.8, 5.10	None	
Protocol	TCP/IP — (IEC 62388) UDP — (IEC 61162-450)			
Formats	.bmp — (Microsoft GDI — Bitmap reference) .png — (ISO/IEC 159748) .jpg — (ISO/IEC 10918) .jp2 — (JPEG 2000 — ISO/IEC 15444 in lossless format)			

b) Where standalone ECDIS is fitted, alternative signals may be used.

Data to be recorded	Relevant Standard		IEC 61162-1	Remarks (Confirmed type of signal)
	IMO Resolu- tion MSC.333 (90):2012	IEC 61996-1:2013		
ECDIS display image (image) recording interval: 1 time/15 s or less (referred to in IEC 61996-1:2013, 5.8.1.1.1)	5.5.8	4.6.8	None	
Resolution of image (pixel)	Including but not limited to 640 × 350 to 1 280 × 1 024/1 600 × 1 200			
Refresh rate	60 Hz to 85 Hz/60 Hz			
Signals	R, G, B, V, H			
Level of signal	Below 1 V			

5.10 Depth (Echo sounder) (IEC 61996-1:2013, 4.6.9)

a) Standard: This shall include depth under keel, up to a resolution of 0,1 m as available on the ship. The depth scale currently being displayed and other status information shall be recorded where available.

Data to be recorded	Relevant Standard		IEC 61162-1	Remarks (Confirmed type of signal)
	IMO Resolu- tion MSC.333 (90):2012	IEC 61996-1:2013		
Depth	5.5.9	4.6.9	DPT	

b) Alternative signals may be used, if the signal required by the standard above is not available

Data to be recorded	Standard	Signal Specification	Confirmed type of signal
Manufacturer's sentence		Proprietary sentence Signal voltage: <u> </u> V	
Analogue signal		Voltage: ±10 V, etc. Current: 4 mA to 20 mA, etc.	

5.11 Main alarms on the bridge (IEC 61996-1:2013, 4.6.10)

a) Standard: *This shall include the status of all IMO mandatory alarms on the bridge as given in Resolution A.1021 (26) Table 10.1.1 (see Annex B) or as received from the Bridge Alert Management system, if installed, recorded as individually identified alarms.*

Data to be recorded	Relevant Standard		IEC 61162-1	Remarks (Confirmed type of signal)
	IMO Resolu- tion MSC.333 (90):2012	IEC 61996-1:2013		
Alarm, Date and Time	5.5.10	4.6.10	ALR/ALA/FIR/ WAT/ACM/ HBT/ALC/ALF	

b) Alternative signals may be used, if the signal required by the standard above is not available

Data to be recorded	Standard	Signal Specification	Confirmed type of signal
Manufacturer's sentence		Proprietary sentence Signal voltage: __V	
Contact signal		No voltage contact signal	
Voltage		AC/DC: __V (voltage of alarm signal, etc.)	

c) Due consideration shall be taken for the requirements of SOLAS, the appropriate classification society and any flag country requirements for alarms.

d) Table of alarm described in IEC 61996-1:2013, Table B.1 (ship-specific availability of bridge alarms to be confirmed).

5.12 Rudder order and response (IEC 61996-1:2013, 4.6.11)

5.12.1 Rudder order and response from HCS or TCS (if installed)

a) Standard: *Status and settings of heading or track controller, if fitted, shall also be recorded. Both rudder order and response angles shall be recorded up to a resolution of 1° as available and permitted on the ship* (IEC 61996-1:2013, 4.6.11).

Data to be recorded	Relevant Standard		IEC 61162-1	Remarks (Confirmed type of signal)
	IMO Resolution MSC.333 (90):2012	IEC 61996-1:2013		
Rudder order/response (Automatic)	5.5.11	4.6.11	HTC/HTD	

b) Alternative signals may be used, if the signal required by the standard above is not available

Data to be recorded	Standard	Signal Specification	Confirmed type of signal
Manufacturer's sentence		Proprietary sentence Signal voltage: __V	
Synchro signal		360×, 180×, 90×, 36×, 1× Primary voltage: __V, __Hz	
Step signal		360×, 180×, 90×, 36×, 1× Voltage: 35 V, 50 V, 70 V, etc.	
Analogue signal		Voltage: ±10 V, etc. Current: 4 mA to 20 mA, etc.	
Operation mode		Contact, etc.	

5.12.2 Rudder order and response from steering system

a) Standard: *Both rudder order and response angles shall be recorded up to a resolution of 1° as available and permitted on the ship* (IEC 61996-1:2013, 4.6.11).

Data to be recorded	Relevant Standard		IEC 61162-1	Remarks (Confirmed type of signal)
	IMO Resolution MSC.333 (90):2012	IEC 61996-1:2013		
Rudder order/response (Manual)	5.5.11	4.6.11	RSA/ROR	

b) Alternative signals may be used, if the signal required by the standard above is not available.

Data to be recorded	Standard	Signal Specification	Confirmed type of signal
Synchro signal		360×, 180×, 90×, 36×, 1× Primary voltage: __V, __Hz	
Step signal		360×, 180×, 90×, 36×, 1X Voltage 35 V, 50 V, 70 V, etc.	
Analogue signal		Voltage: ±10 V, etc. Current: 4 mA to 20 mA, etc.	
Operation Mode		Contact, etc.	

5.13 Engine and thruster order and response (IEC 61996-1:2013, 4.6.12)

Standard: *This shall include the positions of any engine telegraphs or direct engine/propeller controls, including shaft(s) rpm (or equivalent), and feedback indications on the bridge, if fitted, including ahead/astern indicators and indicate the control station in use. This shall also include status of bow and stern thrusters if fitted and indicate the control station in use. The rpm shall be recorded up to a resolution of 1 rpm and pitch shall be recorded up to a resolution of 1°.*

5.13.1 Engine order and response

a) Standard

Data to be recorded	Relevant Standard		IEC 61162-1	Remarks (Confirmed type of signal)
	IMO Resolu- tion MSC.333 (90):2012	IEC 61996-1:2013		
Main Engine order/response	5.5.12	4.6.12	ETL/PRC/TRC/ TRD/RPM/XDR/ ROR/RSA	

b) Alternative signals may be used, if the signal required by the standard above is not available

Data to be recorded	Standard	Signal Specification	Confirmed type of signal
Manufacturer's sentence		Proprietary sentence Signal voltage: __V	
Analogue signal		Voltage: ±10 V, etc. Current: 4 mA to 20 mA, etc.	
Contact signal		No voltage contact	

5.13.2 Thruster order and response

a) Standard

Data to be recorded	Relevant Standard		IEC 61162-1	Remarks (Confirmed type of signal)
	IMO Resolu- tion MSC.333 (90):2012	IEC 61996-1:2013		
Thruster order/response	5.5.12	4.6.12	ETL/PRC/TRC/ TRD/RPM/XDR/ ROR/RSA	

b) Alternative signals may be used, if the signal required by the standard above is not available.

Data to be recorded	Standard	Signal Specification	Confirmed type of signal
Manufacturer's sentence		Proprietary sentence Signal voltage: __V	
Analogue signal		Voltage: ±10 V, etc. Current: 4 mA to 20 mA, etc.	
Contact signal		No voltage contact	

5.14 Hull openings (doors) status (IEC 61996-1:2013, 4.6.13)

a) Standard: *This shall include all IMO mandatory status information required to be displayed on the bridge.*

Data to be recorded	Relevant Standard		IEC 61162-1	Remarks (Confirmed type of signal)
	IMO Resolution MSC.333 (90):2012	IEC 61996-1:2013		
Hull opening	5.5.13	4.6.13	DOR/GEN/XDR	

b) Alternative signals may be used, if the signal required by the standard above is not available.

Data to be recorded	Standard	Signal Specification	Confirmed type of signal
Manufacturer's sentence		Proprietary sentence Signal voltage: __V	
Contact signal		No voltage contact	

5.15 Watertight and fire door status (IEC 61996-1:2013, 4.6.14)

5.15.1 Watertight and fire door status

a) Standard: *This shall include all IMO mandatory status information required to be displayed on the bridge.*

Data to be recorded	Relevant Standard		IEC 61162-1	Remarks (Confirmed type of signal)
	IMO Resolution MSC.333 (90):2012	IEC 61996-1:2013		
Watertight and fire door status	5.5.14	4.6.14	DOR/GEN/XDR	

b) Alternative signals may be used, if the signal required by the standard above is not available.

Data to be recorded	Standard	Signal Specification	Confirmed type of signal
Door status	IEC 61162-1		
Manufacturer's sentence		Proprietary sentence Signal voltage: __V	
Contact signal		No voltage contact	

5.16 Accelerations and hull stresses (IEC 61996-1:2013, 4.6.15)

a) Standard: *Where a ship is fitted with IMO-mandated hull stress and response monitoring equipment, all the data items that have been pre-selected within that equipment and are available shall be recorded.*

Data to be recorded	Relevant Standard		IEC 61162-1	Remarks (Confirmed type of signal)
	IMO Resolution MSC.333 (90):2012	IEC 61996-1:2013		
Accelerations and hull stresses	5.5.15	4.6.15	HSS/XDR	

b) Alternative signals may be used, if the signal required by the standard above is not available.

Data to be recorded	Standard	Signal Specification	Confirmed type of signal
Accelerations and hull stresses	IEC 61162-1		
Manufacturer's sentence		Proprietary sentence Signal voltage: <u> </u> V	
Analogue signal		Voltage: ±10 V, etc. Current: 4 mA to 20 mA, etc.	

5.17 Wind speed and direction (IEC 61996-1:2013, 4.6.16)

a) Standard: *This shall be applicable where a ship is fitted with a suitable sensor, wind speed and direction shall be recorded, including its true or relative status. The wind speed shall have a resolution of 1 unit (knot, m/s, etc.) and the wind direction shall have resolution of 1°.*

Data to be recorded	Relevant Standard		IEC 61162-1	Remarks (Confirmed type of signal)
	IMO Resolution MSC.333 (90):2012	IEC 61996-1:2013		
Wind speed and direction	5.5.16	4.6.16	MWV/MWD	

b) Alternative signals may be used, if the signal required by the standard above is not available.

Data to be recorded	Standard	Signal Specification	Confirmed type of signal
Synchro signal		360°, 180°, 90°, 36°, 1° Primary voltage: <u> </u> V, <u> </u> Hz	
Analogue signal		Voltage: ±10 V, etc. Current: 4 mA to 20 mA, etc.	

5.18 AIS data (IEC 61996-1:2013, 4.6.17)

Standard: *All AIS data shall be recorded.*

Data to be recorded	Relevant Standard		IEC 61993-2:2012, B.2.13	Remarks (Confirmed type of signal)
	IMO Resolution MSC.333 (90):2012	IEC 61996-1:2013		
Other ship's data/ own ship data	5.5.17	4.6.17	VDM/VDO/ALR	

5.19 Rolling motion (IEC 61996-1:2013, 4.6.18)

Standard: *The VDR shall be connected to an electronic inclinometer if installed. The recording method shall be such that the rolling motion can be reconstructed during playback.*

5.20 Configuration (IEC 61996-1:2013, 4.6.19)

Standard: *In addition to the data items specified in IEC 61996-1:2013, 5.6.1 to 5.6.18, a data block defining the configuration of the VDR and the sensors to which it is connected shall be written into the final recording medium during commissioning of the VDR. The data block shall be maintained up to date with respect to the vessel installation. It shall include details on the manufacturer, type and version number of a sensor the identification and location of the sensor and the interpretation of the sensor data. This configuration data shall be permanently retained in the final recording media and protected from modification other than by a duly authorized person following any change to the configuration.*

The following system configuration information and data source identity shall be included in this data block (IEC 61996-1:2013, 4.4.2):

- a) *type approval authority and reference;*
- b) *IMO vessel identification number;*
- c) *software version(s) used and date and time of installation;*
- d) *automatic insertion of date and time of last configuration data amendment;*
- e) *microphone locations, recording channel allocation, and ID (two character identification for example M1, M2, etc.);*
- f) *VHF communications — location of connected VHF installation(s) and recording port allocation, and ID (two character identification, for example V1, V2, etc.);*
- g) *for each sensor — the manufacturer, type and version number of the sensor and the interpretation of the sensor data;*
- h) *screen display output(s) location and ID (two character identification, for example R1, R2, etc. for Radar, E1, E2 for ECDIS, D1, D2 for non-dedicated displays). For dedicated displays the function of the display, for example radar X-band, S-band, navigational ECDIS;*
- i) *date and time — from which source obtained;*
- j) *ship's position — from the INS if fitted and from which EPFS obtained and relative positions on the vessel according to the method defined for the IEC 61162 POS sentence;*
- k) *other data inputs, at the minimum for all data required by IEC 61996:2013, 4.6:*
 - 1) *identification of which equipment is supplying the data;*
 - 2) *identification of the sentence (IEC 61162) which is carrying the information (see [Annex A](#));*
 - 3) *if received as proprietary sentences according to IEC 61162 (for example containing converted analogue or discrete signals), information to include the location of the information within the sentence and the specification of the relations between sensor values (rpm, rudder angles, state of alert or indicator, etc.) and received values.*

5.21 Electronic logbook (IEC 61996-1:2013, 4.6.20)

Standard: *Where a ship is fitted with an electronic logbook in accordance with the standards of the organization, the information from this shall be recorded.*

6 Installation

6.1 Required VDR equipment

VDR consists of the *complete system, including any items required to interface with sources of input signals, their processing and encoding, final recording medium, playback equipment, the power supply and dedicate reserve power source*. Installation shall be in accordance with requirements of IMO Resolution MSC.333 (90) and IEC 61996-1. Interface between VDR and sensors must be confirmed according to each item of preceding [Clause 5](#).

In case of a combined EPIRB/VDR capsule (see [3.1.4](#)), this shall, in addition to the requirements of this International Standard, meet the requirements of IEC 61097-2 (IEC 61996-1:2013, 5.2.2.4).

The relevant components of VDR should be installed in locations that offer reasonable access for executing Operational Performance Test and Annual Performance Tests and verifying the results of these.

6.2 Power supply of the VDR and interfaces

6.2.1 Power supply from the ship's emergency source of electrical power

The VDR shall be capable of operating from the ship's main and emergency source of electrical power (IEC 61996-1:2013, 4.5.2). However, regarding the power supply to sensors to be interfaced to VDR, the requirement for power supply of each sensor shall be referred to respectively.

Interfaces which are part of the VDR installation shall also be powered under the control of the VDR, i.e. their activation/deactivation shall be controlled by the same control which is used for activating/deactivating the VDR.

Interfaces which are not part of the VDR installation then logically belong to the sensor which provides data to the VDR. The power supply for such interfaces shall be controlled by the same control which is used for activating/deactivating the sensor.

6.2.2 Power supply from the reserve power source

If the ship's source of electrical power supply to the VDR fails, the VDR shall as a minimum continue to record Bridge Audio (see [5.6](#)) from the dedicated reserve power source for a period of 2 h. At the end of this 2 h period all recording shall cease automatically. It shall be possible to recharge the dedicated reserve power source within a period of 10 h (IEC 61996-1:2013, 4.5.4).

Consequentially, it shall be verified during installation, that at least the main processor of the VDR, the final recording medium, the interface for receiving the audio signals from the microphones, and the microphones are supplied with power from the reserve power source if the ship's emergency source of electrical power supply fails.

6.3 Installation of the protective capsule and float free capsule (IEC 61996-1:2013, 5.1.1)

The protective capsule shall be sited in the vicinity of the bridge on the external deck area of the vessel so as to maximize the probability of its survival and recovery following an incident. The capsule shall be positioned clear of rigging and other potential obstructions and as near to the centreline of the ship as practically possible.

Criteria to be considered when assessing the optimum position shall include but not be limited to the following:

- a) *separation from fuel or other potential fire sources;*
- b) *separation from probable sources of mechanical damage;*
- c) *operational environment and accessibility for continued serviceability;*
- d) *accessibility for copying of recorded data and for routine maintenance;*
- e) *facilitation of underwater removal and retrieval by both divers and ROVs. There shall be a clear unobstructed space in the vicinity of the capsule to allow an ROV or diver to work;*
- f) *in the case of float-free configuration, minimization of the risk of obstruction after release.*

6.4 Positions of microphones (IEC 61996-1:2013, 4.6.5)

Microphones shall be positioned on the bridge covering all work stations as described in MSC/Circ.982 so that conversation is recorded. The recording shall be such that, on playback, a normal speaking voice shall provide adequate intelligibility while the ship is performing its normal operations. This performance shall be maintained at all work stations while there is a single audio alarm anywhere on the bridge or any noise, including noise from faulty equipment or mounting, or wind. This shall be achieved through the use of at least two channels of audio recording. Microphones positioned outside on bridge wings, shall be recorded on at least one additional separate channel.

For the installation, particular consideration to a noise-free environment around the microphones is required. Often the ship is in a different sound environment when underway compared to when in harbour. Therefore pay attention to avoid loose materials behind the microphone, things that can rattle nearby due to vibration, etc. Whenever practical, a test recording should be obtained from underway, during docking and when using thrusters. Microphones should not be co-located with fire and emergency alarm sirens, such that voice can still be heard in case of a sounding alarm.

6.5 Cable connections

Where critical connections to devices for manoeuvring of the ship cannot be avoided, these shall be as short as possible and the risk of short circuits or cable breaks shall be minimised by appropriate cable routing and safe distances of connections. It is highly recommended to provide proper isolation between the signal circuitry of the manoeuvring devices and VDR.

6.6 Ship specific documentation

6.6.1 Planning and approval documentation

For planning and coordinating of the VDR installation with the parties involved, i.e. owner, shipyard, flag state authority and classification society, the following documents shall be provided and updated during the states from planning to final commissioning.

6.6.1.1 List of interfaces, for each data item, including:

- a) data item according to IMO requirements, type of signal (e.g. voltage, current, normally open/closed contact, serial data string, IEC 61162 sentence(s), etc.;
- b) sensor providing the data including type, designation, manufacturer, location of installation;
- c) update rate of the information (normally 1 s or instantaneous upon the relevant change of status).

6.6.1.2 Plan of locations of bridge equipment

This is typically a general arrangement plan of the bridge and bridge wings covering all workstations and including markings of locations where microphones, connected radar(s), ECDIS(s), VHF radio(s), electronic inclinometer (in fitted), and VDR operation and alert unit are installed.

6.6.1.3 Plan of the fixed capsule location

This plan is typically a general arrangement plan of the deck area where the capsule is installed, including location of the capsule and all other ship structures and installed devices around and above the capsule.

The plan should also include an outline of a concentric circle of 3 m diameter around the capsule (as seen from the top) and a side view of the capsule installation and mounting parts.

The capsule is typically installed on wheel house top (magnetic compass deck).

6.6.1.4 Plan of the float free capsule location

This is typically a plan of the area where the float free capsule is installed, covering at least ± 1 m in height and ± 1 m in width around the capsule.

In addition to the marking of the location of the float free capsule, the plan should include all other ships structures and installed devices around and above the float free capsule.

The plan should include a side view of the capsule installation and mounting parts.

The float free capsule shall be installed at the suitable location to minimize the risk of obstruction after release.

7 Acceptance test (Commissioning)

A final acceptance test shall be provided after the completion of the VDR installation. The test shall include an operational performance test (IEC 61996-1:2013, 5.2) and be conducted following a prepared test protocol to be provided by the VDR supplier. The content of the test shall be principally the same as shown in [Annex E](#) for the annual performance test, but it shall also verify the correct connection and signal transfer of all interfaces within their full scope of functionality. Additionally it shall be verified that critical interface connections, such as to devices for steering and propulsion, do not produce limitations or malfunctions of the relevant equipment.

As IMO Resolution MSC.333 (90) does require playback equipment to be provided on-board the ship, the test shall verify that the playback equipment, using the configuration data, accurately replays all the information represented by the data and that the recorded data contains all the data items required to be recorded.

8 Performance Tests

8.1 General

When VDR is in operation, both Operational Performance Test and Annual Performance Test should be carried out when appropriate.

8.2 Operational Performance Test (IEC 61996-1:2013, 5.12)

The purpose of the Operational Performance Test is to verify that VDR is properly recording all the configured signals. This test may typically be carried out by ship's crew and may be executed for example to verify that signals are properly recorded to VDR from an equipment that has been newly serviced.

8.3 Annual Performance Test

Annual performance test ("Annual Re-certification") of each VDR is required in SOLAS V regulation 18, Clause 8 to verify the accuracy, duration and recoverability of the recorded data. In addition, the condition of all protective enclosures and devices is required to be confirmed through test and inspection. The test shall include an operational performance test (IEC 61996-1:2013, 5.12). Recommended items to be confirmed are shown in [Annex E](#). The annual testing of VDR/S-VDR required by SOLAS regulation V/20 should be carried out by the manufacturer or a person authorized by the manufacturer (IMO Circular MSC.1/Circ.1222).

9 Download and playback equipment for investigation authorities

9.1 General

The VDR should provide an interface for downloading the stored data and play back the information to an external computer. The interface should be compatible with an internationally recognized format, such as Ethernet, USB, FireWire, or equivalent. It should be possible to perform a download of the recorded data for a user-defined period of time [IMO Resolution MSC.333 (90):2012, 9.1].

9.2 Information for use by an investigation authority (IEC 61996-1)

The following information shall be available:

- a) *instruction to enable an investigation authority to manufacture any special tools or interface equipment required for retrieval of recorded data from the recorder;*
- b) *details of the necessary actions to be followed for data retrieval from an undamaged final recording medium;*
- c) *details of the necessary actions to be followed for data retrieval from a final recording medium that has been damaged in an incident;*
- d) *details of the necessary actions to be followed to determine, prior to an attempted replay, whether the storage medium has been subjected to an excessive level of heat, where the survival of the stored data may be uncertain;*
- e) *playback equipment required to enable the download and playback of recorded data.*

Annex A (informative)

Mandatory alarms (IEC 61996-1:2013, Annex B)

IMO Resolution MSC.333 (90):2012, 5.5.10 requires the recording of mandatory alarms on the bridge as given in Resolution A.1021 (26), Table 10.1.1. This table is reproduced for information as [Table A.1](#).

NOTE [Table A.1](#) includes only the priority of alert specified by "A" (alarm) in A.1021 (26) Table 10.1.1.

Table A.1 — Mandatory alarms on the bridge

IMO Instrument	Function
SOLAS II-1	
29.5.2	Steering gear power unit power failure
29.8.4	Steering control system power failure
29.12.2	Low steering gear hydraulic fluid level
30.3	Steering system electric phase failure/overload
31.2.7, 49.5	Propulsion machinery remote control failure
31.2.9, 49.7	Low propulsion starting air pressure
31.2.10	Imminent slowdown or shutdown of propulsion system
52	Automatic shutdown of propulsion machinery
51.1.3	Fault requiring action by or attention of the officer on watch (machinery alarm including automatic change-over alarm and alarm for all important pressures, temperatures, fluid levels and other essential parameters)
13.7.3.1	Watertight door low hydraulic fluid level
13.7.3.1 13.7.3.2	Watertight door low gas pressure Loss of stored energy
13.7.8	Watertight door electrical power loss
35-1.2.6.2	High water level alarm
17-1.1.2, 17-1.1.3	Opening indicator
25.4	Water level pre-alarm
25.4	Water level main-alarm
51.2.2	Alarm system normal power supply failure
SOLAS II-2	
4.5.10.1.3	Hydrocarbon gas detection in tanker cargo pump rooms
7.4.1, 7.4.2	Fire detection in periodically unattended, automated or remotely controlled machinery space
20.3.1.3	Loss of required ventilation
10.5.6.4	Fixed local application fire-extinguishing system activation
SOLAS XII	
12.2	Water level pre-alarm
12.2	Water level main-alarm
Resolution A.481(XII)	
Annex 2, paragraph 7.3	Personnel alarm

Table A.1 (continued)

IMO Instrument	Function
Resolution MSC.128(75)	
Annex 4.1.2.3, 5.2.3	BNWAS first stage audible alarm
Gas or chemical codes	
IBC 15.2.4 BCH 4.19.4	High and low temperature of cargo and high temperature of heat-exchanging medium
IBC 15.5.1.6 BCH 4.20.6	High temperature in tanks
IBC 15.5.1.7 BCH 4.20.7	Oxygen concentration in void spaces
IBC 15.8.23.1 BCH 4.7.15(a)	Malfunctioning of temperature controls of cooling systems
IGC 13.4.1 GC 13.4.1	High and low pressure in cargo tank
IGC 13.6.4, 17.9 GC 13.6.4, 17.11	Gas detection equipment
IGC 13.5.2 GC 13.5.2	Hull or insulation temperature
IGC 17.18.4.4 GC 17.12.2(d)(iv)	Cargo high pressure, or high temperature at discharge of compressors
IGC 17.14.4.3 GC 17.12.5(d)(iii)	Gas detecting system monitoring chlorine concentration
IGC 17.14.4.4 GC 17.12.5(d)(iv)	High pressure in chlorine cargo tank
IBC 15.5.2.5 BCH 4.20.19	High temperature in tanks
IBC 15.5.2.6 BCH 4.20.20	Oxygen concentration in void spaces
IBC 15.10.2 BCH 4.3.1(b)	Failure of mechanical ventilation of cargo tanks
IGC 5.2.1.7, GC 5.2.5(b)	Liquid cargo in the ventilation system
IGC 8.4.2.1, GC 8.4.2(a)	Vacuum protection of cargo tanks
IGC 9.5.2, GC 9.5.2	Inert gas pressure monitoring
IGC 13.6.11 GC 13.6.11	Gas detection equipment
IGC 17.14.1.4 GC 17.12.5(a)(iv)	Gas detection after bursting disk for chlorine
IGS	
3.14.11	Low water level alarm
2000 HSC Code	
7.7.1.2	Fixed fire detection and fire alarm systems' power loss or fault condition
7.7.1.4	Fire detection signal
7.7.1.6	Fire detection manually operated call point section unit indicator
7.7.2.1	Fire detection for periodically unattended machinery spaces
7.8.5.3	Loss of required ventilation

Table A.1 (continued)

IMO Instrument	Function
9.1.14	Liquid cooling system failure
9.2.1	Automatic fire detection system
9.2.1	Bilge alarm
9.2.1	Remote machinery alarm system
9.4.2	Fuel line failure
9.4.5	Lubricating oil pressure or level falling below a safe level
9.5.6	Lubricating fluid supply failure or lubrication fluid pressure loss
10.3.12	Unattended space bilge alarm
11.2.1	Failure of any remote or automatic control system
11.4.1	Malfunction or unsafe condition
11.4.1.1	Indication of conditions requiring immediate action
12.5.1	Steering system electric overload
12.5.2	Steering system electric phase failure
12.6.3	Electrical distribution system low insulation level
2009 MODU Code	
7.4.2.7, 8.5.7	Propulsion machinery remote control failure
7.4.2.9, 8.5.9	Low starting air pressure
7.4.2.10	Imminent slowdown or shutdown of the propulsion
7.6.3	Steering gear phase failure/overload alarm
8.7.1	Fault requiring attention
8.7.3	Alarm system normal supply failure
9.10.1	Fire detection system alarm
9.11.1, 9.12.1	Gas detection and alarm system
FSS Code	
8.2.5.2.1, 9.2.5.1.2, 9.2.5.1.3	Fire detection or automatic sprinkler operation
8.2.5.2.1, 9.2.5.1.5, 9.2.5.1.2	Fire detection system fault
10.2.4.1.4	Smoke detection system power loss
10.2.4.1.3, 10.2.2.3	Smoke detection

Annex B (informative)

LAN image protocol (IEC 61996-1:2013, Annex E)

B.1 Overview

There are two possible protocols used for sending an image over a LAN:

- TCP/IP based (IEC 62388:2007, Annex H);
- UDP based (IEC 61162-450).

In order to avoid important issues with timestamps for UDP, and to make it possible to record all radar displays and ECDIS display in turn possible, the following addition to the LAN protocols are necessary.

Implementing this should facilitate installation and integration between image transmitting equipment and the VDR. If equipment carriage requirements change or if it is wished to add more instruments to the recording, this protocol will also accommodate this.

Information on network design is given in [Annex C](#).

B.2 Image status and information text

B.2.1 General

In order to distinguish signals coming from multiple monitors, the image transmitter shall identify itself in the "Status and information text" field (included in the header of IEC 62388:2007, Table H.4) or the "Status and information text" field (included in the binary image descriptor format of IEC 61162-450:2011, Table 10).

The characters of the field shall be 7-bit ASCII text. Each line of the field shall be terminated by a <CR><LF>.

B.2.2 General identifier

The first line of the status and information text field should be as follows:

```
"VDRI" "/" 1-digit "." 1-digit
```

This indicates the version which shall be "VDRI/1.0" for the version described in this Annex. A receiver shall accept all "1.y" subversions, but issue an alert for "x.y", when $x > 1$.

If this line is not received, the receiver shall treat this as an unspecified image, and store it or discard it according to an installation-specific configuration.

B.2.3 Timestamp

Timestamp is required for IEC 61162-450 only. The timestamp or delay for a stream according to IEC 62388:2007, H.2 is indicated in the standard header structure with the Data items timeSec and TimeNsec or with the Data item difftime.

The second line indicates the time the image appeared for the user as follows:

"Time" ":" <time>

"Time-ms" ":" <integer of milliseconds>

The timestamp is always in UTC format but given without indicator. The millisecond gives the number of milliseconds in addition to the second to the best of the ability of the sender.

EXAMPLE

Time: Sun, 04 Nov 2012 08:49:37

Time-ms: 230

NOTE 1 This timestamp is made at source immediately at data recording, e.g. just before the screenshot. The milliseconds are needed due to required time resolution of 0,05 s for VDR.

It is only practicable to use this value if the synchronization between the VDR and the source device (e.g. radar) is sufficiently precise (in the range of milliseconds). The Delay data item may be used as an alternative method for synchronisation as follows:

"Delay" ":" <ms>

Delay gives the milliseconds, as an integer, from the screen capture to the first package sent accurate to the best of the ability of the sender.

If Delay is inserted, the timestamp value shall not be inserted.

NOTE 2 The destination device (e.g. VDR) uses this Delay value together with its system time to determine the timestamp for the transmitted data. Time tolerances between VDR and source device may be neglected, because the time reference of the VDR is always the system time of the VDR.

B.2.4 Class of image

The third line indicates the class of image as follows:

"Source" ":" <class>

where

<class> = <type> ["." <identifier>]

<type> = "Xband" | "Sband" | "ECDIS" | "Conning" | "Combined" | "Alarm" | "Machine" | "AIS" | "Other" ...

<identifier> = unsigned integer number

If a ship is fitted with two separate but otherwise identical systems, they shall be identified by <identifier>, for example:

- where a ship carries two X-band radar transceivers they may be designated as: "Source: Xband.1" and "Source: Xband.2".
- where a ship carries two ECDIS, the ECDIS master computer may be designated as "Source:ECDIS.1", while the ECDIS backup may be designated as "Source:ECDIS.2".

Where an INS is fitted the route monitoring tasks and functions display shall be <type> "ECDIS", and the collision avoidance tasks and functions display shall be <type> "Xband" or "Sband" depending upon the transceiver selected.

B.2.5 Display location

The fourth line is used as a reference to the full location information of the corresponding display in the configuration data as follows:

```
"Location" ":" <location >
```

<location> = <string>, the maximum string length is 32 characters

The string is free text, for example, "Display no 2 from port" or "A2". The location string shall be unique and remain constant for each physical display.

A VDR may choose to interpret "New" at the start of location string as a signal that the VDR configuration should be updated and issue an alert.

B.2.6 Active status

The fifth line is an optional message that may be used for ships with many workstations as follows:

```
["Active" ":" "yes" | "no" | "unknown" | "standby"]
```

"yes" — indicates the controls on this location recently have been used.

"no" — indicates the controls have not detected any use recently.

"unknown" — no control use indicator is available, which is the default if the sentence is omitted.

"standby" — this station does not show any active content (for instance, radar is in standby) or is off.

B.2.7 Examples of status and information text

For a typical bridge with two radars and two ECDISs:

X-band Radar:

DRI/1.0

Time: Thu, 16 Feb 2012 23:28:00

Time-ms: 230

Source: Xband

Location: No1

Active: yes

S-band Radar:

VDRI/1.0

Delay: 7103

Source: Sband

Location: No4

Active: standby

Master ECDIS:

VDRI/1.0

Time: Thu, 16 Feb 2012 23:28:08

Time-ms: 0

Source: ECDIS.1

Location: No2

Backup ECDIS:

VDRI/1.0

Delay: 2034

Source: ECDIS.2

Location: No3

Active: no

B.2.8 Transmitter configuration

A transmitter sending a display for VDR purposes according to IEC 61162-450 shall only use “RrUdP” (retransmittable).

It is recommended that the transmitter default from the manufacturer should be configured as in [Table B.1](#).

Table B.1 — Default values for transmitting equipment

Item	Configuration	Default
Transmission	Transmission to VDR	If it is a dedicated radar or ECDIS the transmission shall be on.
UDP transmission mode (for IEC 61162-450 only)	“RrUdP” (retransmittable) (“RaUdP” is not permitted for any mandatory data)	“RrUdP” (retransmittable)
IP destination for image	Any IP address and port	172.16.8.2, Port 7096 for transfer according to IEC 62388:2013, H.2 239.192.0.26, Port 60026 for transfer according to IEC 61162-450
Source	“Xband”, “Xband.1”, “Xband.2”, “S-band”, “ECDIS”, “ECDIS.1”, “ECDIS.2”, etc.	As appropriate
Location	Any string up to a maximum of 32 characters	“New” <brand> <model>, for example, “New InCom T-65”
Active		For dedicated displays: Omitted (“unknown”). For multi-function displays: As appropriate.

Table B.1 (continued)

Item	Configuration	Default
Number of transmissions per 15 s period	1 to 15	1
Synchronization of message start send (according to satellite time or internal clock)	00,0 s to 14,5 s (within the 15 s slot)	00 s for X-band, 04 s for S-band, 08 s for ECDIS, 12 s for ECDIS backup, odd numbers for minor stations (navigation planning, bridge wings), 02 s/06 s/10 s or 14 s for other displays
Speed	Auto-negotiate, 100 Mbit/s, ...	Auto-negotiate 10 Mbit/s shall not be accepted as a result of auto-negotiation.

B.2.9 Receiver configuration

It is recommended the VDR receiver default settings from the manufacturer should be configured as shown in [Table B.2](#).

Table B.2 — Default values for receiving equipment

Item	Configuration	Default
IP address	DHCP or 172.16.0.1–172.31.255.254	172.16.8.2 (port 7096 for receiving TCP/IP images)

Annex C (informative)

Network for image transmission (IEC 61996-1:2013, Annex F)

C.1 General


This Annex provides guidance on network design in relation to image transmission to the VDR.

C.2 Network choice

There are two standards for network image transmission, namely TCP/IP type described in IEC 62388 and the UDP type described in IEC 61162-450. The TCP/IP image transmission will retransmit packets on the protocol layer automatically that did not arrive error-free to the receiver. The UDP retransmission protocol will also secure a retransmission for packets with errors but on the application layer and controlled by application. The UDP non-retransmission protocol is not recommended as packet losses are likely.

C.3 Network topology examples

[Figure C.1](#) shows a network with a switch.

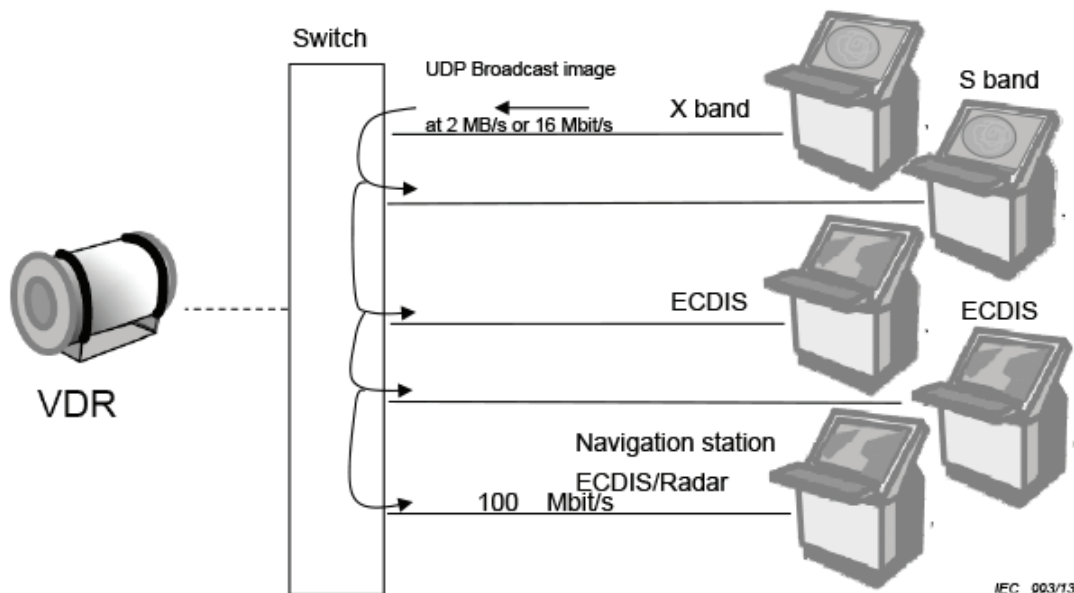

NOTE Total theoretical traffic maximum on each workstation line $4 \times 16 \text{ Mbit/s} = 64 \text{ Mbit/s}$. The average is 6 Mbit/s for 2 MB images transmitted once per 15 s.

Figure C.1 — Network with a switch

IEC 61162-450 dictates a maximum transmission rate of 2 MB/s per image transmitter. This has consequences for how quickly the network can become full. The simplest possible network with a switch would look like [Figure C.1](#).

Due to the multicasts, that each station will transmit, the network can quickly fill up, if all stations decide to transmit at the same time, especially for more than six stations at the speed 100 Mbit/s. This can have consequences for the navigational data in the same network, causing the bridge to function badly in times of peak traffic (such as chart updates).

Another simple way to connect the stations to the VDR is to use direct connections, removing the switch as a source of failure and eliminating the multicast extra traffic, as shown in [Figure C.2](#).

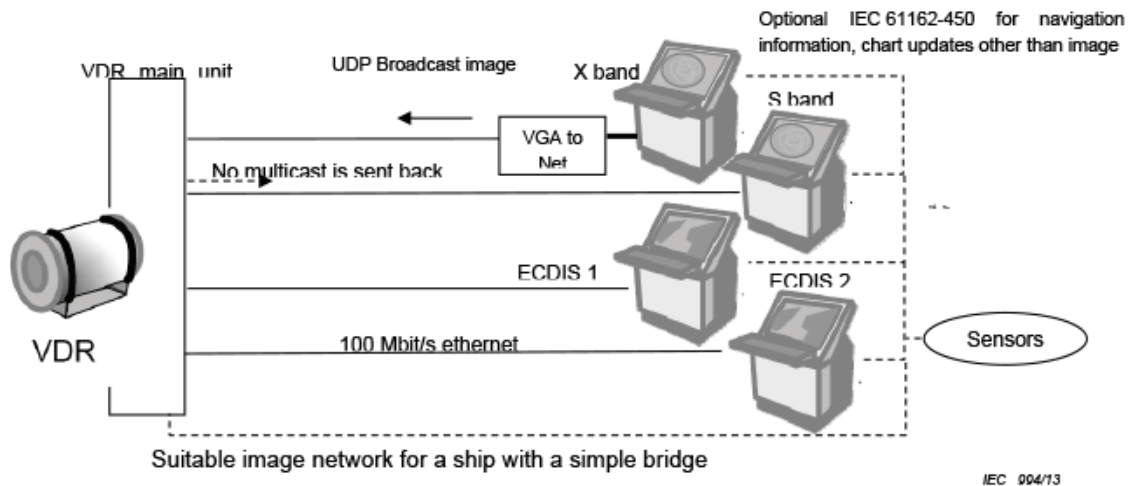


Figure C.2 — Network with direct connections

Ships with an extensive bridge (bridge wings, multiple stations, etc.) will have to use 1 000 Mbit/s Ethernet as shown in [Figure C.3](#).

C.4 Service and installation

Care should be taken to ensure that all locations/stations that should transmit a mandatory image do so (even if not mandatory at current setting). In order to avoid situations, where the network will be slow or overload only at sea, a test or stress function should be implemented on stations, from which traffic can vary significantly (such as high AIS traffic, chart updates/consolidation, radar information).

Ethernet 1 000 Mbit/s links connections should not be set to auto-negotiate, so that they do not auto-negotiate to 100 Mbit/s.

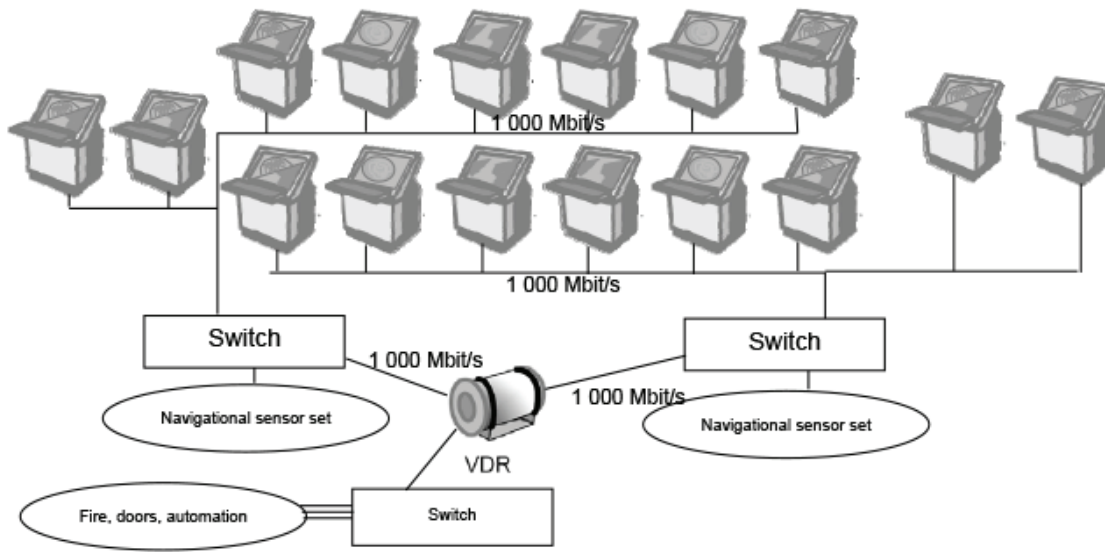


Figure C.3 — Network for a ship with an extensive bridge

Annex D (informative)

ECDIS display source information (IEC 61996-1:2013, Annex G)

D.1 Overview

For the ECDIS, the charts used (cell name, edition and update number) are required to be recorded (IEC 61996-1:2013, 4.6.8). In addition, settings not visible on the recorded image that affect what is shown on the ECDIS display may be recorded.

The ECDIS display source information message shall be sent a minimum of every 10 min. If a change is made to the relevant information, a message shall be sent up to at least a rate of one message per 2 s.

The message is sent as a data block ("binary image", retransmittable form) according to IEC 61162-450, where the datatype is set to "text/plain".

If IEC 62388:2007, H.2 protocol is used, this information is sent as an H.2 image, where the "datatype" is set to "ITEXT".

All relevant display source information data blocks shall be recorded.

A radar display may optionally send out a similar message.

D.2 Data block status and information text field

The status and information text field shall contain the same fields as for an ordinary image as defined in [Annex E](#), except the "active" field, which shall be omitted. The time indicator or delay time shall indicate the time, when the parameters were sampled.

D.3 Data text

The data shall be plain 7-bit ASCII characters following on from the fields defined in [Annex E](#) with lines separated by <CR><LF>. The text shall contain a sequence of data identifiers of the form:

```
<level data name> "=" <data value>
```

where

```
<level data name> = [<level> "." [<level> "." ] ...] <dataname>
```

If two level data names are identical, they shall be concatenated in order of appearance. The levels shall be used to show a collapsible view of information, when played back in the VDR.

A level or dataname shall not contain spaces, but can contain "_" underscore, which may be replaced by a space when presented. For identification, level data names are case insensitive. A level and dataname can be identical. A level or dataname can start with "-" (hyphen) to indicate a proprietary or non-standard dataname or level, in order to distinguish from future standard names.

D.4 Level data names

Possible units are "m", "ft", "fm", "nm", "mi", "kn", "km", "km/h", "mi/h", "s", "min", "h". A <no> indicates a sequence of levels (for example chart.chart1, chart.chart2, etc.). A flag shall be indicated by flag-set or flag-unset (for automated presentation). If a feature is not available for this equipment, the parameter

may be omitted. If other features such as alternative chart presentations, automatic cautionary warnings or vessel guidance exist, and those are not completely displayed including parameters, they shall also be added to this list.

D.5 Required information to be recorded

The chart information required to be recorded is given in [Table D.1](#).

Table D.1 — Required chart information

Configuration	Level data name	Example data value
Identifier (for verification of the file type only)	Identifier identifier.version	VDRI 1.0
Chart name	chart.chart<no.>	IT50074.000
Chart edition	chart.chart<no>.edition	1
Chart update number	chart.chart<no>.update	3

Example:

```
identifier=VDRI identifier.version=1.0 chart.chart1=IT50074.000 chart.chart1.edition=1
chart.chart1.update=4 chart.chart2=IT400119.000 chart.chart2.edition=1 chart.
chart2.update=3
```

D.6 Optional information to be recorded

Additional optional chart information which may be recorded is given in [Table D.2](#).

Table D.2 — Additional chart information

Configuration	Level data name	Example data value
Chart issuing HO	chart.chart<no>.issuer	Italian Hydrographic Office
Chart comment	chart.chart.comment	(if available)
Safety contour	ownship.safety_contour	10m
Safety depth	ownship.safety_depth	10m
Shallow contour	ownship.shallow_contour	2m
Deep contour	ownship.deep_contour	30m
Two shades (flag)	presentation.two_shades	flag-set
Safe contour only (flag)	presentation.safe_contour_only	flag-set
Isolated dangers in unsafe waters shown (flag)	presentation.isolated_danger_in_unsafe_waters_shown	flag-set
Shallow pattern (flag)	presentation.shallow_pattern	flag-unset
Safe depths shown (flag)	presentation.safe_depths_shown	flag-unset
Plain depth contour (flag)	presentation.plain_depth_contour	flag-unset
Quality symbol (flag)	presentation.quality_symbol	flag-unset
Low accuracy indicator (flag)	presentation.low_accuracy_indicator	flag-unset
NOAA aids shown (flag)	presentation.NOAA_aids_shown	flag-unset
ENC boundary (flag)	presentation.ENC_boundary	flag-unset
Chart boundary (flag)	presentation.chart_boundary	flag-unset
Use SCAMIN (flag)	presentation.use_SCAMIN	flag-set

Table D.2 (continued)

Configuration	Level data name	Example data value
INFORM symbol (flag)	presentation.INFORM_symbol	flag-unset
Picture symbol (flag)	presentation.picture_symbol	flag-unset
Text description symbol shown (flag)	presentation.text_description_symbol_shown	flag-unset
Overscale id (flag)	presentation.overscale_id	flag-set
Scale boundary shown (flag)	presentation.scale_boundary_shown	flag-set
Lat/Lon grid (flag)	presentation.lat/lon_grid	flag-unset
Mariners' objects are shown on this image (flag)	presentation.mariners_objects_are_shown	flag-unset
Text light info shown (flag)	presentation.text.light_info_shown	flag-unset
Text (important) (flag)	presentation.text.important	flag-set
Text (other) (flag)	presentation.text.other	flag-unset
National text shown (flag)	presentation.text.national	flag-unset
Periodic dates shown (flag)	presentation.text.periodic_dates	flag-unset
Text generic shown (flag)	presentation.text.generic	flag-set
Aids to navigation tooltips active (flag)	presentation.ui.aids_to_navigation_tooltips_active	flag-set
Light sectors (flag)	presentation.light.sectors	flag-unset
Light shown with real length (flag)	presentation.light.real_length	flag-unset
Highlight light sectors chosen (flag)	presentation.light.highlight_chosen_sectors	flag-unset
Highlight light sectors all (flag)	presentation.light.highlight_all_sectors	flag-unset
Highlight white sectors (flag)	presentation.light.highlight_white_sectors	flag-unset
Route shown on image (flag)	route.any	flag-unset
Route name shown	route.route<no>	Civitavecchia-Savona
Route checked (flag)	route.route<no>.checked	flag-set
Route charts used in check	route.route<no>.chart<no> and chart<no>associated sublevels	
Route name for voyage underway (if active)	route.underway	Civitavecchia-Savona
Waypoint shown (flag)	waypoint.waypoint<no>	name or ID
Waypoint position	waypoint.waypoint<no>.position	4220.02N, 01057.58E
Radar overlay shown (flag)	presentation.radar	flag-unset
Radar overlay source (if available)	Presentation.radar.source	Xband
Actual AIS data shown on image (flag)	presentation.ais.actual_AIS_data_shown	flag-unset
Actual ARPA data shown on image (flag)	presentation.arpa.actual_ARPA_data_shown	flag-unset
Tides shown (flag)	presentation.tides	flag-unset

Table D.2 (continued)

Configuration	Level data name	Example data value
Weather or other specific data layer shown (flag)	presentation.layer.layername<no> presentation.layer.layername<no>.issuer	pirate data Jeppesen
List of active alerts (alarms or caution), date set	alarm.alert<no> alarm.alert<no>.datetime	Position device not compliant 01 March 2012, 02:33:00
Anti-ground alarm time of prediction	alarm.antiground.time_of_prediction	5s
Dangers safety distance (grounding alarm)	alarm.dangers.safety_distance	200m
Guard zone sector	alarm.collision.guard_zone	90
Danger objects inside guard zone (flag)	alarm.collision.danger_objects_inside_zone	flag-unset
Depth alarm, more than, if active	alarm.depth.more_than	2m
Depth alarm, less than, if active	alarm.depth.less_than	11m
Target lost alarm active (flag)	alarm.arpa.target_lost	flag-unset
AIS target lost alarm active (flag)	alarm.ais.target_lost	flag-unset
AIS auto activation (flag)	alarm.ais.auto_activation	flag-set
AIS distance to dangerous	alarm.ais.distance_to_dangerous	0.5nm
AIS distance to activation	alarm.ais.distance_to_activation	0.5nm
AIS CPA/TCPA	alarm.ais.cpa alarm.ais.tcpa	0.5nm 15min
AIS visibility	alarm.ais.visibility	25nm
AIS past track time	presentation.ais.past_track	30s
ARPA past track if active in seconds	presentation.arpa.past_track	30s
ARPA distance to dangerous	alarm.arpa.distance_to_dangerous	0.5nm
ARPA Lost target alarm range	alarm.arpa.lost_target_alarm_range	0.5nm
ARPA CPA/TCPA	alarm.arpa.cpa alarm.arpa.tcpa	0.5nm 15min
Sonar past track if active in seconds	presentation.sonar.past_track	30s
Sonar distance to dangerous	presentation.sonar.distance_to_dangerous	0.5nm
Sonar Lost target alarm range	presentation.sonar.lost_target_alarm_range	0.5nm

Table D.2 (continued)

Configuration	Level data name	Example data value
Sonar CPA/TCPA	presentation.sonar.cpa	0.5nm
	presentation.sonar.tcpa	15min
Mode version	software.display_source_version	V1
Application name, version and version date release information	software.application <no >	ECDIS
	software.application <no> .version	1.2.234
	software.application <no> .date	1 March 2012
Brightness setting (xx/yy where yy is max)	presentation.brightness	5/100

EXAMPLE:

```
identifier=VDRI identifier.version=1.0 chart.chart1=IT50074.000 chart.chart1.  
edition=1 chart.chart1.update=4 chart.chart2=IT400119.000 chart.chart2.edition=1  
chart.chart2.update=3 chart.chart1.issuer=Italian Hydrographic Office chart.chart2.  
issuer=Italian Hydrographic Office ownship.safety_contour=10m ownship.safety_depth=10m  
ownship.shallow_contour=2m ownship.deep_contour=30m presentation.two_shades=flag-  
set ..... software.application1=ECDIS presentation application  
software.application1.version=1.123.1 software.application1.date=20 March 2011 software.  
application2=Collision application software.application2.version=1.123.1 software.  
application2.date=12 March 2011 software.application2=ENC import tool software.  
application2.version=1.124.1 software.application2.date=13 March 2011
```

Annex E (informative)

Manufacturer's documentation (IEC 61996-1:2013, 5.5)

E.1 Installation guidelines (IEC 61996-1:2013, 5.5.1)

The following installation guidelines shall be included.

- a) Siting of the fixed recording medium and float-free recording medium.

The protective capsule shall be sited in the vicinity of the bridge on the external deck area of the vessel so as to maximize the probability of its survival and recovery following an incident. The capsule shall be positioned clear of rigging and other potential obstructions and as near to the centreline of the ship as practically possible.

Criteria to be considered when assessing the optimum position shall include but not be limited to the following:

- 1) separation from fuel or other potential fire sources;
 - 2) separation from probable sources of mechanical damage;
 - 3) operational environment for continued serviceability;
 - 4) accessibility for routine maintenance;
 - 5) facilitation of underwater removal and retrieval by both divers and ROVs. There should be a clear unobstructed space in the vicinity of the capsule to allow an ROV or diver to work;
 - 6) in the case of float-free recording medium, minimization of the risk of obstruction after release.
- b) Siting of microphones to achieve the requirements of IEC 61996-1:2013, 4.6.5.
- c) Siting of the data interface (IEC 61996-1:2013, 4.3.5.2).
- d) Siting of the playback equipment (IEC 61996-1:2013, Annex C).
- e) Siting of all other components of the VDR system.
- f) Entering and updating the configuration data of IEC 61996-1:2013, 4.4.2.
- g) The requirement for interface units to comply with IEC 61996-1:2013, 4.3.5.
- h) The requirement to record ship specific interface information to be recorded and the record to be left on-board.

E.2 Operation and maintenance manual (IEC 61996-1:2013, 5.5.2)

[IMO Resolution MSC.333 (90):2012, Clause 7] *Information describing the location of the long-term recording medium interface (see 4.4.5.2) and instructions describing the means of interfacing with it as referred to in [Annex C](#) shall be provided in at least the English language. The equipment documentation shall include guidance for the placement of the information and instructions at a prominent position as close to the long-term recording medium interface as practicable.*

The manual shall include the following:

- a) instructions on normal operation of the VDR;
- b) instructions on how to copy data from the equipment (see [Annex C](#));
- c) instructions on the action to be taken following the activation of any VDR alert;
- d) instructions for downloading and verification of the data from each part of the final recording medium;
- e) instructions for verification of each recorded sensor data through playback;
- f) instructions on maintenance tasks required to ensure the serviceability and continued seaworthiness of the VDR including analysis to identify those sensors or transducers where the serviceability or accuracy could be degraded and remain undetected;
- g) instructions to update the records of ship specific-interface information as necessary.

E.3 Information for use by an investigation authority (IEC 61996-1:2013, 5.5.3)

The following information shall be available:

- a) instructions to enable an investigation authority to manufacture any special tools or interface equipment required for retrieval of recorded data from the recorder;
- b) details of the necessary actions to be followed for data retrieval from an undamaged final recording medium;
- c) details of the necessary actions to be followed for data retrieval from a final recording medium that has been damaged in an incident;
- d) details of the necessary actions to be followed to determine, prior to an attempted replay, whether the storage medium has been subjected to an excessive level of heat, where the survival of the stored data may be in doubt;
- e) playback equipment required to enable the download and playback of recorded data (see IEC 61996-1:2013, Annex C).

Annex F (informative)

Performance test report (IMO Circular MSC.1/Circ.1222 Appendix)

Voyage Data Recorder Performance Test Report

Modified for IMO Resolution MSC.333 (90)

NOTE Insert **Yes**, for success; **No**, for failure; or **N/A**, for non-fitted interfaces in these boxes, as appropriate.

Ship's details	<input type="checkbox"/> Yes	<input type="checkbox"/> No	<input type="checkbox"/> N/A
Ship's name			
Flag			
IMO number			
Date keel laid			
Gross tonnage			

Voyage data recorder details

Manufacturer	
Model	
System serial number	
Software version number	
Date fitted	

Inspection details

Name person conducting testing	
Company	
Inspection date	
Inspection location	

1. Pre-existing alarms

Confirm that no alarms were present at start of procedure	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
---	--------------------------	--------------------------	--------------------------

2. Power supply alarm check

Remove source of external power. Confirm that alert is activated.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Record time (hh.mm)			

3. Reserve power source check

Allow VDR to continue running for 1 hour 55 minutes from "2" above

Confirm that equipment is still operating at this time, with no additional alerts.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Record time (hh.mm)			

4. Reserve power source shutdown check

2 hours 05 minutes from "2" above confirm that the VDR has automatically stopped recording.

Record time (hh.mm)

--	--	--

5. Battery expiry dates

Battery	Expiry date (where applicable)
Acoustic beacon	
EPIRB battery	
Reserve power source	

6 Acoustic beacon and EPIRB test

Using manufacturer's test equipment confirm that acoustic beacon is functional or by the substitution of a certified fully operational unit.

Following the instructions by manufacturer's conduct a self-test of the EPIRB.

7. Overall condition of equipment

Inspect equipment and record condition, tick if satisfactory:

Sub unit	Notes on condition
Protective capsule	
Float free capsule	
External cables	
Main unit	

8. Interfaces: Operation and recording

Date and time	Preferably external to ship (e.g. GPS)				
Ship's position	Electronic Positioning System				
Speed (through water or over ground)	Ship's designated speed and distance measuring equipment				
Heading	Ship's compass				
Bridge audio	2 or more bridge and 1 or more wing microphones				
Communications Audio	VHF				
Radar data-post display selection	Master and No.2 Radar				
ECDIS	Primary ECDIS				
Water depth	Echo sounder				
Main alarms	All mandatory alarms on bridge				
Rudder order and response	Steering gear and autopilot				
Engine order and response	Telegraphs, controls and thrusters				
Hull opening status	All mandatory status information displayed on bridge				
Watertight and fire door status	All mandatory status information displayed on bridge				
Acceleration and hull stresses	Hull stress and response monitoring equipment, where fitted				
Wind speed and direction	Anemometer, where fitted				
AIS	AIS				
Rolling motion	Electronic inclinometer, where fitted				
Configuration data	Information of VDR and sensors				
Electric logbook	Electronic logbook, where fitted				

9. Change and repair of sensors

Check maintenance records of VDR		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Confirm any defects properly rectified		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Person authorized by Manufacturer	Ship's representative			
Date	Date			

If the manufacturer does not complete a review and issue a completed test report within 45 days, this test report should go forward for certification.

10. Manufacturer's analysis

NOTE This confirms the endorsement by the manufacturer of the tests and that the master record/database has been checked.

Manufacturer's analysis of 48-hour log is attached and in accordance with IEC 61996-1:2013, 4.6 [IMO Resolution MSC.333 (90):2012, 5.5]. Confirmation that all data is available throughout the 12-hour recording.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Data and time of above log.	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

11. Playback equipment

Inspect equipment and record condition, tick if satisfactory:

Data medium	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Playback software	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Operational instructions	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Special parts required if needed	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Connection and playback achieved on a commercial-off-the-shelf laptop computer laptop	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Confirmation of replay of data as information useful to investigating authorities (raw data is not information)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Conversion of data into open industry formats (IEC 61996-1:2013, Annex C)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

12. Documentation

Inspect documentation and record presence and suitability, tick if satisfactory:

Siting of the fixed recording medium and float-free recording medium	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Siting of microphones	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Siting of the data interface	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Siting of the playback equipment	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Siting of all other components of the VDR system	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Operation and maintenance manual	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Information for the use by an investigation authority	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

13. Observations and additional manufacturer’s requirements

NOTE This specifically provides for the logging of significant events that may have occurred on board since the previous test, including the refitting of equipment or major unit change to existing equipment. Any or all of which may have an impact on the availability or quality of the VDR input signal.

This performance test was conducted in accordance with SOLAS regulation V/18.8 and forms part of the procedure for the issue of the Annual Performance Test Certificate. The results, information and any comments should be relayed to the manufacturer in accordance with the instructions contained within the Operation Manual. Subject to satisfactory results, an Annual Performance Test Certificate will then be issued.

In accordance with the principles of harmonization of Certificates, the Certificate, when issued, will remain valid until the next annual re-validation of that Certificate, subject to the equipment being maintained in appropriate operational condition.

Bibliography

- [1] IEC 60068-2-27:1987, *Environmental testing — Part 2: Tests — Test Ea and guidance shock*
- [2] IEC 60268-5: *Sound system equipment — Part 5: Loudspeakers*
- [3] IEC 61097-2:2008, *Global marine distress and safety system (GMDSS) — Part 2: COSPAS-SARSAT EPIRB — Satellite emergency position-indicating radio beacon operating on 406 MHz — Operational and performance requirements, methods of testing and required test results*
- [4] IEC 61924-2, *Maritime navigation and radiocommunication equipment and systems — Integrated navigation systems (INS) — Part 2: Modular structure for INS — Operational and performance requirements, methods of testing and required test results*
- [5] IEC 62065, *Maritime navigation and radiocommunication equipment and systems — Track control systems — Operational and performance requirements, methods of testing and required test results*
- [6] IEC 62288, *Maritime navigation and radiocommunication equipment and systems — Presentation of navigation-related information on shipborne navigational displays — General requirements, methods of testing and required test results*
- [7] ISO/IEC 8859-1, *Information technology — 8-bit single-byte coded graphic character sets — Part 1: Latin alphabet No. 1*
- [8] ISO/IEC 8859-1, *Information technology — 8-bit single-byte coded graphic character sets — Part 1: Latin alphabet No. 1*
- [9] ISO/IEC 10918 (all parts), *Information technology — Digital compression and coding of continuous-tone still images: JPEG File Interchange Format (JFIF)*
- [10] ISO/IEC 15444 (all parts), *Information technology — JPEG 2000 image coding system*
- [11] ISO/IEC 15948, *Information technology — Computer graphics and image processing — Portable Network Graphics (PNG): Functional specification*
- [12] ISO 8728, *Ships and marine technology — Marine gyro-compasses*
- [13] ISO 11674, *Ships and marine technology — Heading control systems*
- [14] ISO 16328, *Ships and marine technology — Gyro-compasses for high-speed craft*
- [15] ISO 16329, *Ships and marine technology — Heading control systems for high-speed craft*
- [16] ISO 22090-1, *Ships and marine technology — Transmitting heading devices (THDs) — Part 1: Gyro-compasses*
- [17] ISO 22090-2, *Ships and marine technology — Transmitting heading devices (THDs) — Part 2: Geomagnetic principles*
- [18] ISO 22090-3, *Ships and marine technology — Transmitting heading devices (THDs) — Part 3: GNSS principles*
- [19] IMO. 1974, *International Convention for the Safety of Life at Sea (SOLAS), as amended*
- [20] IMO Circular MSC/Circ.982, *Guidelines on ergonomic criteria for bridge equipment and layout*
- [21] IMO Circular MSC.1/Circ.1222:2006, *Guidelines on annual testing of Voyage Data Recorders (VDR) and Simplified Voyage Data Recorders (S-VDR)*
- [22] IMO Circular MSC.1/ Circ.1389:2010, *Guidance on procedures for updating shipborne navigation and communication equipment*

- [23] IMO Resolution MSC.74 (69):1998, *Annex 2 — Recommendations on performance standards for track control systems*
- [24] IMO Resolution MSC.74 (69):1998, *Annex 4 — revision of A.224 — Performance standards for echo sounding equipment*
- [25] IMO Resolution A.424 (XI):1979, *Performance standards for gyrocompasses*
- [26] IMO Resolution MSC.64 (67):1996, *Annex 3 — Performance standards for heading control systems*
- [27] IMO Resolution MSC.232 (82):2006, *Revised performance standards for electronic chart display and information systems (ECDIS)*
- [28] IMO Resolution MSC.252 (83):2007, *Performance standards for integrated navigation systems (INS)*
- [29] IMO Resolution MSC.302 (87):2010, *Performance standards for bridge alert management (BAM)*
- [30] IMO Resolution A.526 (13):1983, *Performance standards for rate-of-turn indicators*
- [31] IMO Resolution A.600 (15):1987, *IMO ship identification number scheme*
- [32] IMO Resolution A.612 (15):1987, *Performance standards for float-free VHF emergency position-indicating radio beacons*
- [33] IMO Resolution A.754 (18):1993, *Recommendation on fire resistance tests for “A”, “B” and “F” class divisions*
- [34] IMO Resolution A.803 (19):1995, *Performance standards for shipborne VHF radio installations capable of voice communication and digital selective calling*
- [35] IMO Resolution A.805 (19):1995, *Performance standards for float-free VHF emergency position-indicating radio beacons*
- [36] IMO Resolution A.813 (19):1995, *General requirements for electromagnetic compatibility (EMC) for all electrical and electronic ship’s equipment*
- [37] IMO Resolution A.819 (19):1995, *Performance standards for shipborne global positioning system (GPS) receiver equipment*
- [38] IMO Resolution A.822 (19):1995, *Performance standards for automatic steering aids (automatic pilots) for high-speed craft*
- [39] IMO Resolution A.823 (19):1995, *Performance standards for automatic radar plotting aids (ARPA)*
- [40] IMO Resolution A.824 (19):1995, *Performance standards for devices to indicate speed and distance*
- [41] IMO Resolution A.953 (23):2003, *World-wide radionavigation system*
- [42] IMO MSC/Circ.1024:2002, *Guidelines on voyage data recorder (VDR) ownership and recovery*
- [43] European Broadcasting Union, *Technical specification Tech 3858, BWF — A format for audio files in broadcasting, Appendix A, RIFF WAVE (.WAV) file format*
- [44] IEEE 802.3u:1995, *Standard for Information Technology — Telecommunication and information exchange between systems — Local and metropolitan area networks — Specific requirements — Part 3*
- [45] Microsoft Developer Network (MSDN) Library — *Microsoft GDI — Bitmap Reference — BMP*
- [46] USB Implementers Forum Inc. — *Universal Serial Bus Revision 2.0 Specification*
- [47] VESA:2007, *Video electronics standards association — VESA and industry standards and guidelines for computer display monitor timing (DMT), Version 1.0, Revision 0.11*

British Standards Institution (BSI)

BSI is the national body responsible for preparing British Standards and other standards-related publications, information and services.

BSI is incorporated by Royal Charter. British Standards and other standardization products are published by BSI Standards Limited.

About us

We bring together business, industry, government, consumers, innovators and others to shape their combined experience and expertise into standards-based solutions.

The knowledge embodied in our standards has been carefully assembled in a dependable format and refined through our open consultation process. Organizations of all sizes and across all sectors choose standards to help them achieve their goals.

Information on standards

We can provide you with the knowledge that your organization needs to succeed. Find out more about British Standards by visiting our website at bsigroup.com/standards or contacting our Customer Services team or Knowledge Centre.

Buying standards

You can buy and download PDF versions of BSI publications, including British and adopted European and international standards, through our website at bsigroup.com/shop, where hard copies can also be purchased.

If you need international and foreign standards from other Standards Development Organizations, hard copies can be ordered from our Customer Services team.

Copyright in BSI publications

All the content in BSI publications, including British Standards, is the property of and copyrighted by BSI or some person or entity that owns copyright in the information used (such as the international standardization bodies) and has formally licensed such information to BSI for commercial publication and use.

Save for the provisions below, you may not transfer, share or disseminate any portion of the standard to any other person. You may not adapt, distribute, commercially exploit, or publicly display the standard or any portion thereof in any manner whatsoever without BSI's prior written consent.

Storing and using standards

Standards purchased in soft copy format:

- A British Standard purchased in soft copy format is licensed to a sole named user for personal or internal company use only.
- The standard may be stored on more than 1 device provided that it is accessible by the sole named user only and that only 1 copy is accessed at any one time.
- A single paper copy may be printed for personal or internal company use only.
- Standards purchased in hard copy format:
- A British Standard purchased in hard copy format is for personal or internal company use only.
- It may not be further reproduced – in any format – to create an additional copy. This includes scanning of the document.

If you need more than 1 copy of the document, or if you wish to share the document on an internal network, you can save money by choosing a subscription product (see 'Subscriptions').

Reproducing extracts

For permission to reproduce content from BSI publications contact the BSI Copyright & Licensing team.

Subscriptions

Our range of subscription services are designed to make using standards easier for you. For further information on our subscription products go to bsigroup.com/subscriptions.

With **British Standards Online (BSOL)** you'll have instant access to over 55,000 British and adopted European and international standards from your desktop. It's available 24/7 and is refreshed daily so you'll always be up to date.

You can keep in touch with standards developments and receive substantial discounts on the purchase price of standards, both in single copy and subscription format, by becoming a **BSI Subscribing Member**.

PLUS is an updating service exclusive to BSI Subscribing Members. You will automatically receive the latest hard copy of your standards when they're revised or replaced.

To find out more about becoming a BSI Subscribing Member and the benefits of membership, please visit bsigroup.com/shop.

With a **Multi-User Network Licence (MUNL)** you are able to host standards publications on your intranet. Licences can cover as few or as many users as you wish. With updates supplied as soon as they're available, you can be sure your documentation is current. For further information, email subscriptions@bsigroup.com.

Revisions

Our British Standards and other publications are updated by amendment or revision.

We continually improve the quality of our products and services to benefit your business. If you find an inaccuracy or ambiguity within a British Standard or other BSI publication please inform the Knowledge Centre.

Useful Contacts

Customer Services

Tel: +44 345 086 9001

Email (orders): orders@bsigroup.com

Email (enquiries): cservices@bsigroup.com

Subscriptions

Tel: +44 345 086 9001

Email: subscriptions@bsigroup.com

Knowledge Centre

Tel: +44 20 8996 7004

Email: knowledgecentre@bsigroup.com

Copyright & Licensing

Tel: +44 20 8996 7070

Email: copyright@bsigroup.com

BSI Group Headquarters

389 Chiswick High Road London W4 4AL UK