

Acoustics — Recommended practice for the design of low-noise workplaces containing machinery —

Part 2: Noise control measures

The European Standard EN ISO 11690-2:1996 has the status of a British Standard

ICS 13.140; 17.140.20

National foreword

This British Standard is the English language version of EN ISO 11690-2:1996. It is identical with ISO 11690-2:1996.

The UK participation in its preparation was entrusted by Technical Committee EH/1, Acoustics, to Subcommittee EH/1/4, Machinery noise, which has the responsibility to:

- aid enquirers to understand the text;
- present to the responsible international/European committee any enquiries on the interpretation, or proposals for change, and keep the UK interests informed;
- monitor related international and European developments and promulgate them in the UK.

A list of organizations represented on this subcommittee can be obtained on request to its secretary.

Cross-references

Attention is drawn to the fact that Annex ZA lists normative references to international publications with their corresponding European publications. The British Standards which implement these international or European publications may be found in the BSI Standards Catalogue under the section entitled "International Standards Correspondence Index", or using the "Find" facility of the BSI Standards Electronic Catalogue.

A British Standard does not purport to include all the necessary provisions of a contract. Users of British Standards are responsible for their correct application.

Compliance with a British Standard does not of itself confer immunity from legal obligations.

Summary of pages

This document comprises a front cover, an inside front cover, pages i and ii, the EN ISO title, page 2, the ISO title page, pages ii to iv, pages 1 to 20, an inside back cover and a back cover.

This standard has been updated (see copyright date) and may have had amendments incorporated. This will be indicated in the amendment table on the inside front cover.

Amendments issued since publication

Amd. No.	Date	Comments

This British Standard, having been prepared under the direction of the Health and Environment Sector Board, was published under the authority of the Standards Board and comes into effect on 15 May 1997

© BSI 09-1999

ISBN 0 580 27285 0

Contents

	Page
National foreword	Inside front cover
Foreword	2
Foreword	iii
Text of ISO 11690-2	1

ICS 13.140

Descriptors: See ISO document

English version

Acoustics — Recommended practice for the design
of low-noise workplaces containing machinery —
Part 2: Noise control measures

(ISO 11690-2:1996)

Acoustique — Pratique recommandée pour la
conception de lieux de travail à bruit réduit
contenant des machines — Partie 2: Moyens de
réduction du bruit
(ISO 11690-2:1996)

Akustik — Richtlinien für die Gestaltung
lärmarmer maschinenbestückter
Arbeitsstätten — Teil 2:
Lärminderungsmaßnahmen
(ISO 11690-2:1996)

This European Standard was approved by CEN on 1996-10-16. CEN members are bound to comply with the CEN/CENELEC Internal Regulations which stipulate the conditions for giving this European Standard the status of a national standard without any alteration.

Up-to-date lists and bibliographical references concerning such national standards may be obtained on application to the Central Secretariat or to any CEN member.

The European Standards exist in three official versions (English, French, German). A version in any other language made by translation under the responsibility of a CEN member into its own language and notified to the Central Secretariat has the same status as the official versions.

CEN members are the national standards bodies of Austria, Belgium, Denmark, Finland, France, Germany, Greece, Iceland, Ireland, Italy, Luxembourg, Netherlands, Norway, Portugal, Spain, Sweden, Switzerland and United Kingdom.

CEN

European Committee for Standardization
Comité Européen de Normalisation
Europäisches Komitee für Normung

Central Secretariat: rue de Stassart 36, B-1050 Brussels

Foreword

The text of the International Standard ISO 11690-2:1996 has been prepared by Technical Committee ISO/TC 43 “Acoustics” in collaboration with Technical Committee CEN/TC 211 “Acoustics”, the secretariat of which is held by DS.

This European Standard shall be given the status of a national standard, either by publication of an identical text or by endorsement, at the latest by month of May 1997, and conflicting national standards shall be withdrawn at the latest by month of May 1997.

According to the CEN/CENELEC Internal Regulations, the national standards organizations of the following countries are bound to implement this European Standard: Austria, Belgium, Denmark, Finland, France, Germany, Greece, Iceland, Ireland, Italy, Luxembourg, Netherlands, Norway, Portugal, Spain, Sweden, Switzerland and the United Kingdom.

Endorsement notice

The text of the International Standard ISO 11690-2:1996 was approved by CEN as a European Standard without any modification.

INTERNATIONAL
STANDARD

ISO
11690-2

First edition
1996-11-01

**Acoustics — Recommended practice for
the design of low-noise workplaces
containing machinery —**

**Part 2:
Noise control measures**

*Acoustique — Pratique recommandée pour la conception de lieux de travail
à bruit réduit contenant des machines —*

Partie 2: Moyens de réduction du bruit



Reference number
ISO 11690-2:1996(E)

Contents

	Page
Foreword	iii
Introduction	1
1 Scope	1
2 Normative reference	1
3 Definitions	1
4 Technical aspects of noise control	1
5 Noise control at source	2
6 Noise control on the transmission path	7
7 Noise control at the work station	8
8 Verification methods	8
9 New technologies	10
Annex A (informative) Modification or replacement of machine components	11
Annex B (informative) Arrangement of sound sources	11
Annex C (informative) Enclosures	12
Annex D (informative) Silencers	14
Annex E (informative) Noise barriers and screens in rooms	14
Annex F (informative) Acoustical treatment of surfaces	14
Annex G (informative) Structure-borne sound insulation	15
Annex H (informative) Airborne sound insulation of partitions	16
Annex I (informative) Noise control at the work station	16
Annex J (informative) Example of a new technology	17
Annex K (informative) Bibliography	18
Annex ZA (normative) Normative references to international publications with their relevant European publications	Inside back cover
Figure 1 — Basic aspects of noise control	2
Figure 2 — Steps for the implementation of noise control measures	3
Figure 3 — Generation process of mechanical noise	3
Figure 4 — Example of sound pressure level during hammering	5
Figure 5 — Example of sound pressure level when grinding during the cleaning of a cast iron electromotor housing	6
Figure 6 — Example of sound pressure level when hammering	6
Figure 7 — Example of sound pressure level when grinding a steel plate	7
Figure 8 — Typical spatial sound distribution curve for a room with diffuse field conditions, without and with several surface treatments	9
Figure 9 — Typical spatial sound distribution curve for a fitted room without diffuse field conditions, with and without sound-absorbing ceiling	10
Figure C.1 — Typical noise reduction achieved for different machine and enclosure configurations	13
Figure J.1 — Cancellation mechanism	17
Figure J.2 — Limit of application	17
Table 1 — Examples of alternative processes with lower noise	5
Table 2 — Typical values for the average sound absorption coefficient (α) and sound propagation descriptors DL_f and DL_2 in the middle region	8
Table F.1 — Mean sound absorption coefficient (α) in the frequency range 500 Hz to 2 000 Hz for nearly cubic rooms without sound-absorbing treatment	15

Descriptors: Acoustics, machinery, noise (sound), engine noise, noise reduction, workplaces, design, implementation.

Foreword

ISO (the International Organization for Standardization) is a worldwide federation of national standards bodies (ISO member bodies). The work of preparing International Standards is normally carried out through ISO technical committees. Each member body interested in a subject for which a technical committee has been established has the right to be represented on that committee. International organizations, governmental and non-governmental, in liaison with ISO, also take part in the work. ISO collaborates closely with the International Electrotechnical Commission (IEC) on all matters of electrotechnical standardization.

Draft International Standards adopted by the technical committees are circulated to the member bodies for voting. Publication as an International Standard requires approval by at least 75 % of the member bodies casting a vote.

International Standard ISO 11690-2 was prepared by Technical Committee ISO/TC 43, *Acoustics*, Subcommittee SC 1, *Noise*.

ISO 11690 consists of the following parts, under the general title *Acoustics — Recommended practice for the design of low-noise workplaces containing machinery*:

- *Part 1: Noise control strategies;*
- *Part 2: Noise control measures;*
- *Part 3: Sound propagation and noise prediction in workrooms.*

Part 1 is the central document in the series. Parts 2 and 3 give additional technical and explanatory information. It is therefore recommended to start with part 1.

Annex A to Annex K of this part of ISO 11690 are for information only.

Introduction

Most of the existing International Standards prepared in ISO/TC 43/SC 1 specify methods for measurement and/or evaluation of noise. The final objective of ISO 11690, however, is noise reduction.

A number of noise control measures are offered. However, in order to be effective, the most appropriate noise control measure(s) should be chosen for a given situation.

It is important when non-acoustic engineers are involved in noise control practice for these engineers to have a basic knowledge of noise emission and propagation characteristics and to understand the basic principles of noise control.

To assist in the development of noise control in the workplace, it is essential that the information contained in these recommended practices is disseminated through International Standards.

In order to reduce noise as a hazard in the workplace, individual countries have produced national legislation. Generally, such national legislation requires noise control measures to be carried out in order to achieve the lowest reasonable levels of noise emission, noise immission and noise exposure, taking into account:

- known available measures;
- the state of the art regarding technical progress;
- the treatment of noise at source;
- appropriate planning, procurement and installation of machines and equipment.

This part of ISO 11690, together with the two other parts in the series, outlines procedures to be considered when dealing with noise control at workplaces, within workrooms and in the open. These recommended practices give in relatively simple terms the basic information necessary for all parties involved in noise control in workplaces and in the design of low-noise workplaces to promote the understanding of the desired noise control requirements.

The purpose of the ISO 11690 series is to bridge the gap between existing literature on noise control and the practical implementation of noise control measures. In principle, the series applies to all workplaces and its main function is:

- to provide simple, brief information on some aspects of noise control in workplaces;
- to act as a guide to help in the understanding of requirements in standards, directives, text books, manuals, reports and other specialized technical documents;
- to provide assistance in decision making when assessing the various measures available.

The ISO 11690 series should be useful to persons such as plant personnel, health and safety officers, engineers, managers, staff in planning and purchasing departments, architects and suppliers of plants, machines and equipment. However, the above-mentioned parties should keep in mind that adherence to the recommendations of the ISO 11690 series is not all that is necessary to create a safe workplace.

The effects of noise on health, well-being and human activity are many. By giving guidelines for noise control strategies and measures, the ISO 11690 series aims at a reduction of the impact of noise on human beings at workplaces. Assessment of the impact of noise on human beings is dealt with in other documents.

1 Scope

This part of ISO 11690 deals with the technical aspects of noise control in workplaces. The various technical measures are stated, the related acoustical quantities described, the magnitude of noise reduction discussed and the verification methods outlined.

This part of ISO 11690 deals only with audible sound.

NOTE 1 Annex K lists relevant International Standards and other literature on noise control measures.

2 Normative reference

The following standard contains provisions which, through reference in this text, constitute provisions of this part of ISO 11690. At the time of publication, the edition indicated was valid. All standards are subject to revision, and parties to agreements based on this part of ISO 11690 are encouraged to investigate the possibility of applying the most recent editions of the standards indicated below. Members of IEC and ISO maintain registers of currently valid International Standards.


ISO 11690-1:1996, *Acoustics — Recommended practice for the design of low-noise workplaces containing machinery — Part 1: Noise control strategies*.

3 Definitions

For the purposes of this part of ISO 11690, the definitions given in ISO 11690-1 apply.

4 Technical aspects of noise control

Noise reduction measures can be applied at source (emission), between the source and the receiver (transmission path), and at the work station (receiver). (See Figure 1.)

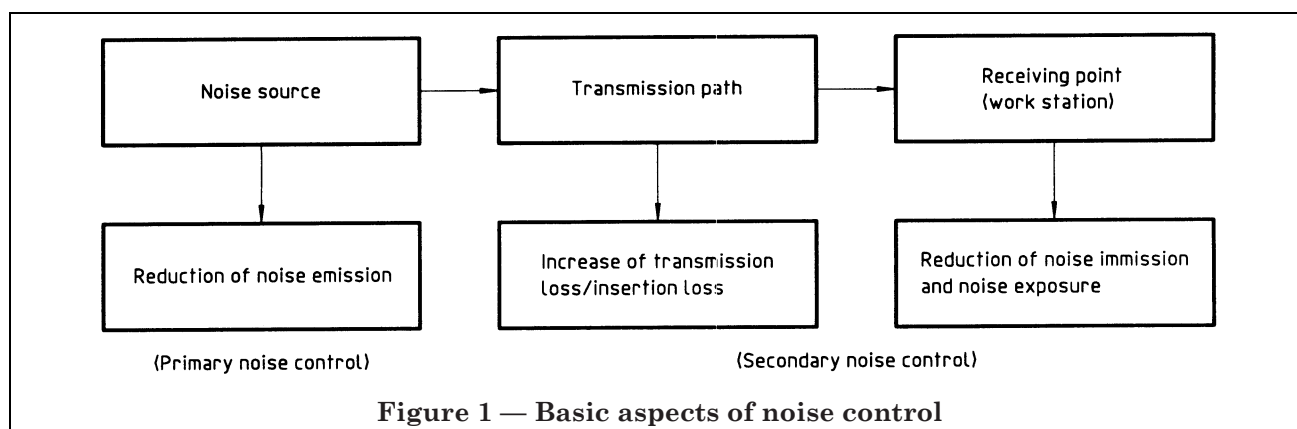

When dealing with the noise emission of a machine, an installation or a production process, etc., all possible noise reduction measures should be considered (see clause 5 and ISO 11690-1). To determine whether noise emission is as low as reasonably practicable, it is necessary to consider noise emission quantities; these are given in the noise emission declaration (see ISO 11690-1:1996, clause 8) or determined by measurements (carried out in compliance with the relevant standard).

An assessment of noise control devices such as enclosures, partial enclosures, barriers and screens, silencers, etc. can be carried out by using, for example, the insertion loss data (see 6.2).

The acoustic quality of workrooms and buildings is assessed with reference to the sound insulation regarding airborne and structure-borne sound (see 6.4), and that of workrooms with reference to sound propagation parameters (see 6.3).

The overall effectiveness of noise control measures is determined from the noise immission values at the work stations.

Generally, people located at a work station or in the vicinity of a machine are affected by the direct noise emitted by the machine. Therefore, to reduce noise in the workplace, the most effective solution is to reduce noise at source (primary measures).

Additional measures on the transmission paths (secondary measures) may be impractical because they hinder the work task and the production process. When assessing the state of noise reduction technology, low noise emission of sound sources is therefore given high priority with regard to occupational safety.

The basic aspects of noise control (see also ISO 11690-1) are illustrated in Figure 1. These are reviewed in clauses 5 to 7.

In order to minimize noise at the workplace, all noise control measures should be considered *a priori* (see Figure 2).

Noise control is most effective if it is carried out when planning, modifying, changing existing machinery or equipment, or when acquiring new machinery or equipment in plants, workrooms and buildings. From the outset, all parties involved (see ISO 11690-1:1996, clause 6) and, in particular, the noise experts, should take part in the process. Noise control measures are most effective if they are integrated at the design stage of machines, production processes, workrooms and tasks (see ISO 11690-1:1996, clause 7). Machine operation, material transport, safety technology, ergonomics and environmental protection should also be considered at that stage.


5 Noise control at source

5.1 General

The measures described in this clause deal with the reduction of noise generated by working processes and machines. They should be implemented at the design stage because retrospective measures can affect operational requirements and are generally more expensive. However, they are also recommended for existing noise sources, when practicable.

Noise control at source in workplaces deals in particular with the noise reduction of existing machines, the development and selection of low-noise working processes and production technologies, the replacement of machine parts and the assessment of the results obtained.

The effectiveness of noise control at source is based on measurements and is assessed by comparison with the noise emission data, for example, provided by the supplier/manufacturer (see ISO 11690-1:1996, clause 8).

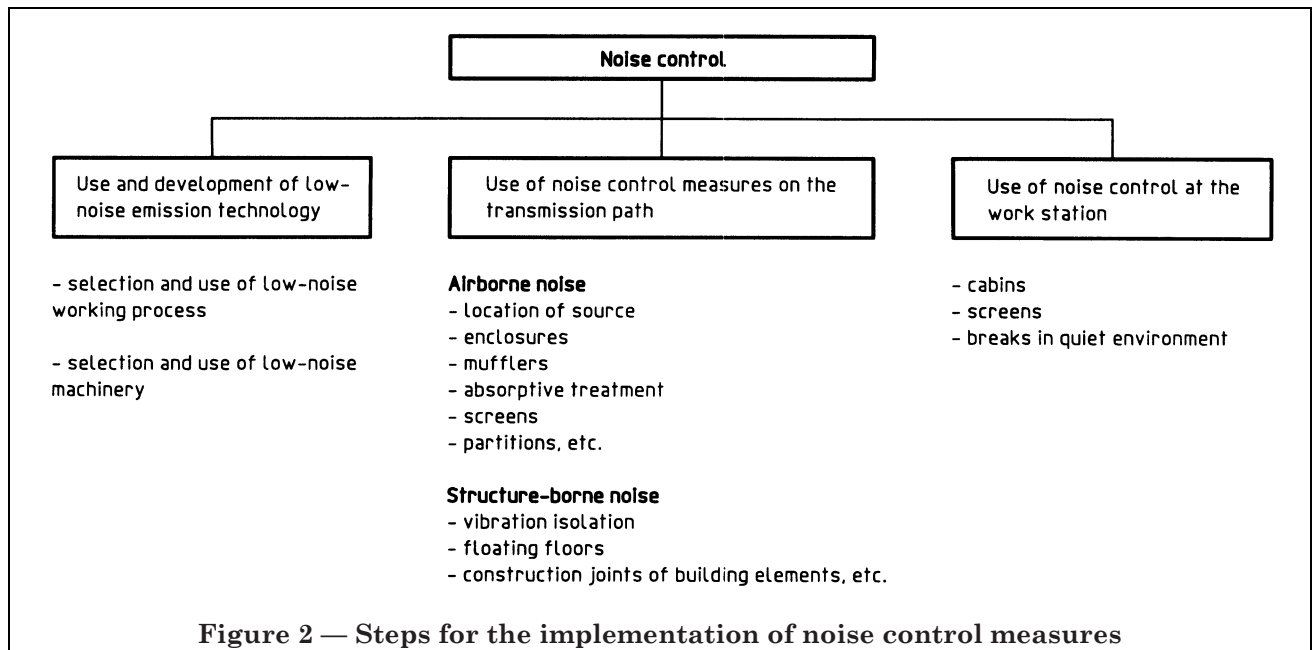


5.2 Noise control at source by design

When machine noise (or noise from technical production equipment) is considered, two types of noise generation should be distinguished: fluid dynamic noise generation (gas and/or liquid) and mechanical generation.

Fluid dynamic noise arises from temporary fluctuations in pressure and velocity of fluids. Examples are combustion processes, fans, blow-out openings and hydraulic systems.

Mechanically generated noise is caused by vibrations of machine components that are excited by dynamic forces which are generated, for example, by impacts or out-of-balance masses. The vibrations are transmitted to noise-radiating surfaces, such as machine casing, workpieces, etc. Examples are tooth-wheel gears, electric motors, hammers, shakers and mechanical presses (see Figure 3).

In order to control noise at source, the noise-generation mechanism should be taken into account.

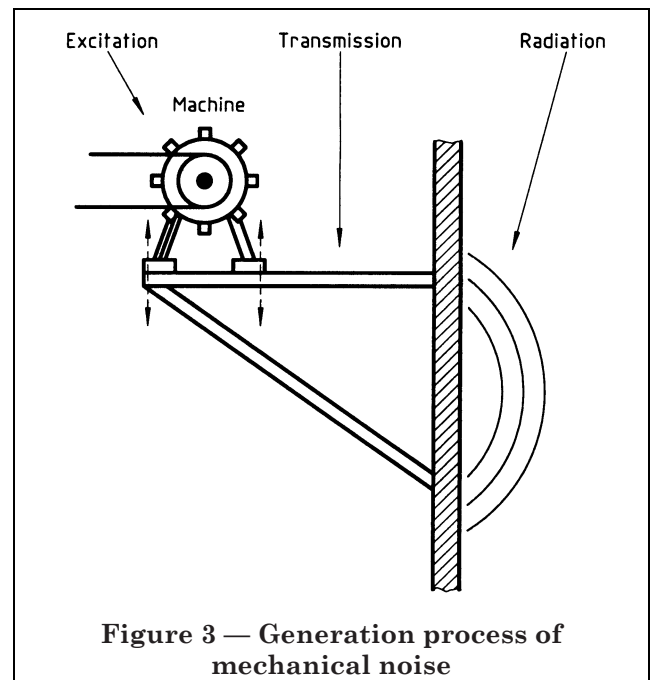

Examples of reduction of fluid dynamic noise are the following:

- reduction of periodical pressure fluctuations at the excitation source;
- reduction of flow velocities;
- avoidance of sudden changes in pressure;
- effective design of through-flow components.

Examples of reduction of mechanically generated noise are the following:

- a) reduction of exciting dynamic forces (e.g. by means of elastic layers to extend the impulse duration of impacts);
- b) reduction of the vibrational velocity of the machine structure at the excitation point for a given dynamic force [e.g. by means of stiffeners or additional masses (inertia blocks)];
- c) reduction of the vibration (structure-borne sound) transmission from the excitation point to the sound-radiating surfaces [e.g. by using elastic elements and materials with high internal damping (cast iron)];
- d) reduction of the sound radiated by a vibrating structure, for example by use of
 - thin walls with ribs instead of thick stiff walls,
 - damping layers on thin metal sheets,
 - perforated metal sheets (provided noise insulation is not required);
- e) sound-insulating wrappings or thick-walled structures (thin damped metal sheets near the radiating surface).

Further information on noise reduction at source can be found in ISO/TR 11688-1 and ISO/TR 11688-2.

5.3 Information on noise emission

In addition to the information on noise emission given by suppliers/manufacturers in technical documentation (see ISO 11690-1:1996, clause 8), there may be measures specific to industrial sectors. Information on such measures can be found in databases, professional magazines, trade association journals, etc.

For some machine families, there are lists of noise emission data obtained under specified operating conditions. These lists can help purchasers select low-noise machines/equipment (see ISO 11690-1:1996, Annex A).

5.4 Use of low-noise machines

In some circumstances, rather than implementing costly retrospective noise control measures, it is feasible to replace a noisy unit in a plant with a low-noise one (see Table 1).

There are also noisy operations which are not connected with fixed machines, for example from the use of hand-held tools. These can often be the dominating noise sources in a workroom. If care is taken in selecting the tools or the working arrangement (e.g. sound-deadened hammers, cushioned work tables, low-noise grinding discs, magnetic damping mats, etc.), considerable noise reductions can be achieved as shown in Figure 4 to Figure 7.

5.5 Modification or replacement of machine components

It is possible, by replacing or modifying machine components, to reduce noise transmission inside the machine and noise radiation by the machine surface, without affecting performance. Annex A gives examples of such noise reduction measures.

5.6 Low-noise working and production technologies

It is always beneficial, if feasible, to replace a particularly noisy machine or unit in a plant with a quieter one, for example by using a machine that works to a different principle (e.g. replacing an impact screwdriver by a continuous direct-driven screwdriver).

With regard to existing processes, particular attention should be paid to the possibility of substituting the process with an equally effective but quieter method.

When substituting a production process, low-noise alternatives should be systematically searched for. The successive replacement of machines, plant items and processes by less noisy ones will in the long term lead to quieter working environments even though low-noise machines have to be positioned alongside existing noisy ones.

5.7 Maintenance of machines and noise control devices

Noise emission levels from machines or processes can be unnecessarily high due to lack of maintenance, poor lubrication, misalignment, unbalanced and loose parts, etc. Optimum operating conditions should be maintained at all times. Any maintenance defect normally increases the noise levels.

Maintenance of noise control devices is also of prime importance. Therefore the function of enclosures, screens and silencers should be carefully monitored.

Table 1 — Examples of alternative processes with lower noise

High-noise processes	Low-noise processes
Percussion riveting	Compression and roll riveting
Drive by compressed air or internal combustion engine	Electrical drive
Cutting or making holes in, for example, stone or concrete by the use of pneumatic or internal combustion percussive machines	Use of machines that can be fitted with drills or circular saw blades equipped with diamond teeth
Heading in the die	Tapering/full-forward extrusion
Push cutting	Pull cutting
Flow drying	Radiation drying
Plasma oxygen cutting	Plasma cutting under water
Cutting shock, punching	Laser-beam cutting
Conventional TIG/TAG welding	TIG/TAG shielded arc welding
Flame-hardening	Laser-beam hardening
Fastening with rivets	Pressure fixing
Stroke forming	Hydraulic pressing
Spot welding	Seam welding

NOTE 1 A change of the material and/or form of the component under manufacture may allow the use of low-noise production processes.
 NOTE 2 This list is by no means exhaustive.

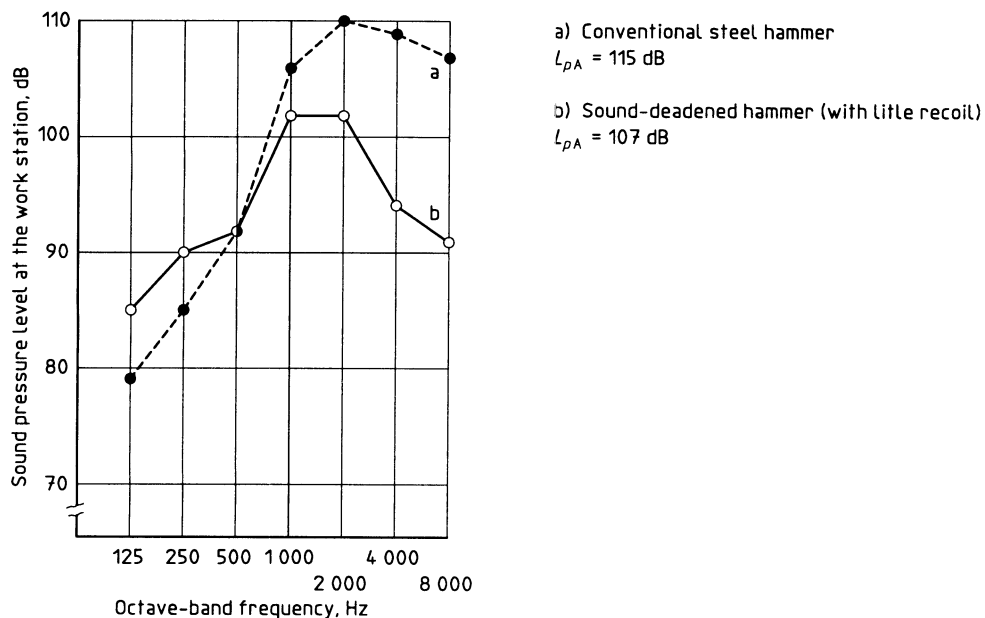


Figure 4 — Example of sound pressure level during hammering

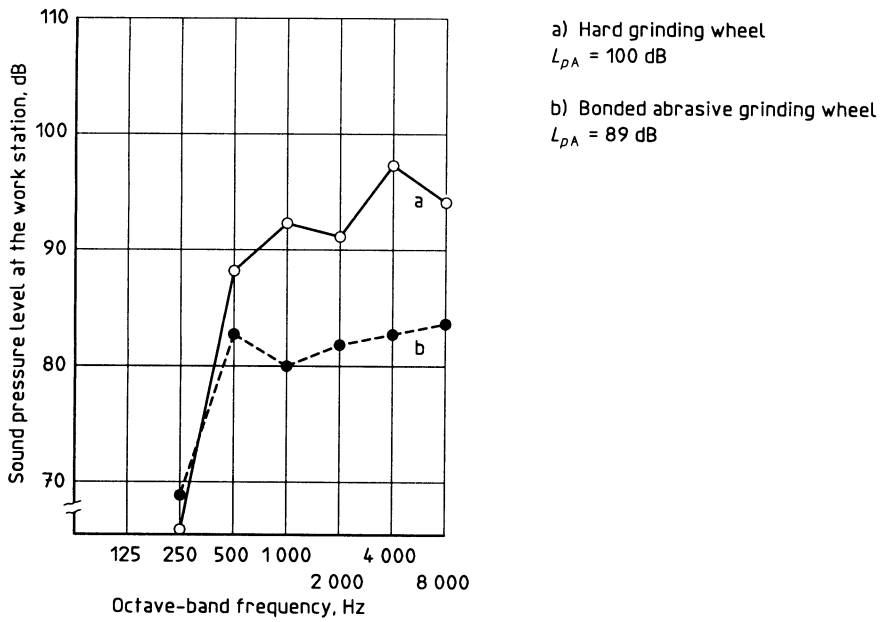


Figure 5 — Example of sound pressure level when grinding during the cleaning of a cast iron electromotor housing

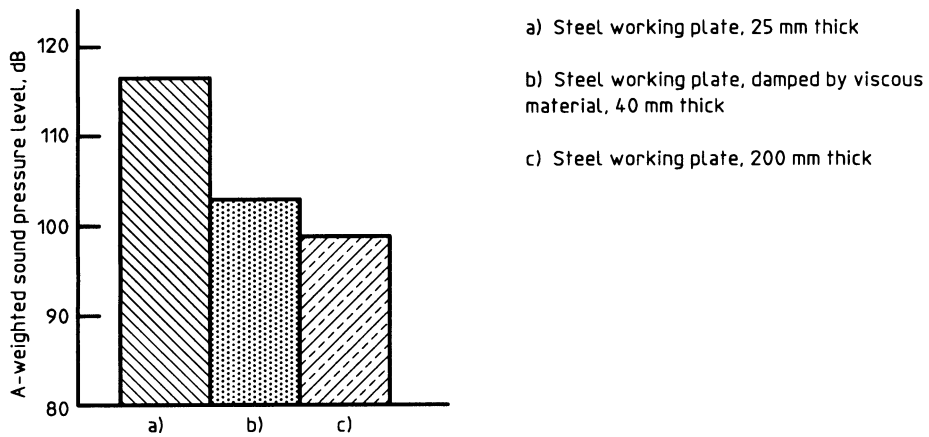


Figure 6 — Example of sound pressure level when hammering

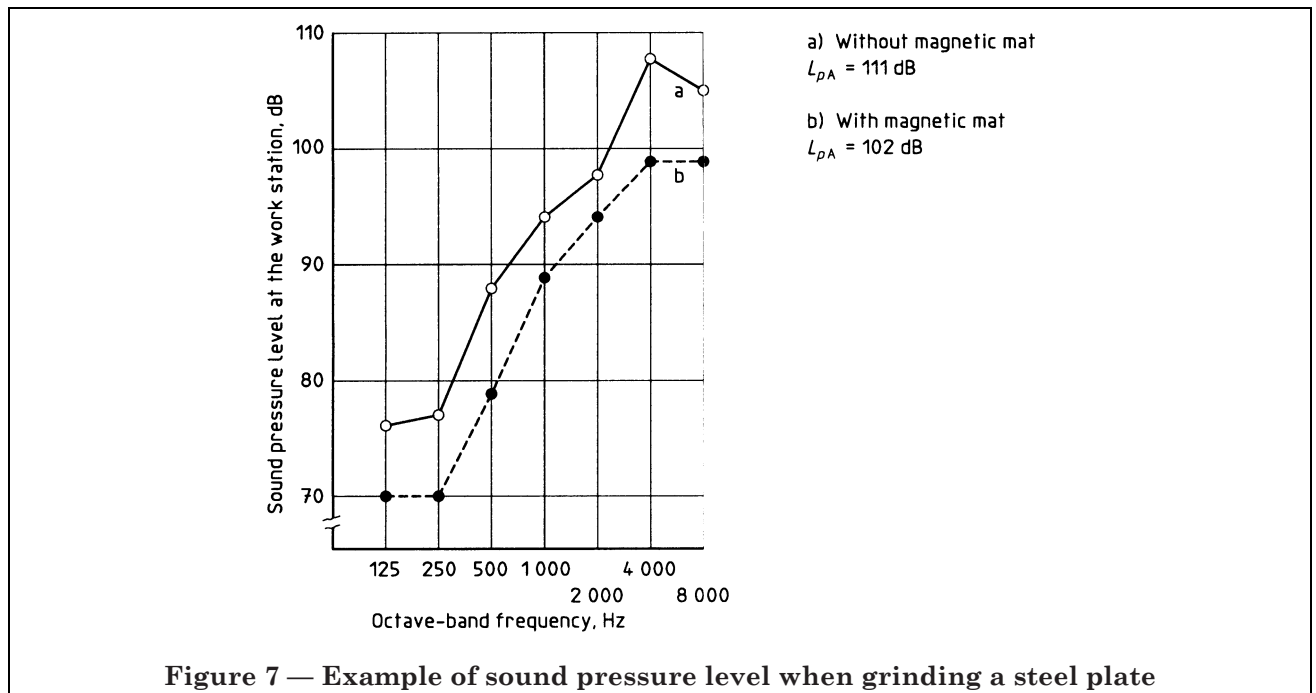


Figure 7 — Example of sound pressure level when grinding a steel plate

6 Noise control on the transmission path

6.1 Noise control by means of a proper spatial arrangement of the noise sources

An optimized spatial arrangement of machines can provide a substantial noise level reduction at work stations. This is mainly applicable when planning new plants and installations but should also be considered for existing plants.

Noise reduction can be obtained by increasing the distance between the noise sources and the work stations (see Annex B).

6.2 Use of noise control devices

Enclosures (see Annex C), silencers (see Annex D) and screens (see Annex E) can be effective measures for the reduction of the noise emitted from machines, installations, piping systems and openings.

An enclosure is a structure completely surrounding the machine or installation. It consists mainly of a sound-insulating shell (metal, wood, concrete, etc.) with an internal sound-absorbing lining. The achievable noise reduction depends on the insulation of airborne sound provided by the shell and on the degree of absorption by the internal surface of the enclosure. In practice, it is limited by openings, ineffective seals and by transmission of structure-borne sound. This limitation can be minimized by using measures such as silenced openings.

The effectiveness of noise control by using enclosures, silencers or screens can be measured and assessed by the insertion loss, the transmission loss and the reduction of sound level (see ISO 11690-1:1996, clause 3, for definitions).

6.3 Noise control by use of sound-absorbing materials

The relationship between noise emission and noise immission is determined by sound propagation (see ISO 11690-3). Sound propagation and therefore the acoustical quality of a room are influenced by the treatment of surfaces (ceiling and walls) by using sound-absorbing materials, which should be selected in relation to the frequency spectrum of the noise. For attenuation of noise at low frequencies, the use of absorptive materials is less effective.

Noise in rooms consists of direct noise from sources and reflected noise from room boundaries (floors, walls, ceilings, other equipment, fittings, etc.). Absorptive surface treatment reduces exclusively the reflected noise.

It is possible to assess the acoustical quality of a room and therefore the effectiveness of a surface treatment by using the sound propagation quantities, e.g. the rate of spatial decay (DL_2) and the excess (DL_f) of sound pressure levels. These quantities are derived from the spatial sound distribution curves (see ISO 11690-1 for definitions and also ISO/TR 11690-3). Recommended values of DL_2 are given in ISO 11690-1:1996, Table 3 (see also Table 2 of this part of ISO 11690). The assessment can be made from quantities measured (see clause 8) or calculated using noise-prediction methods (see ISO 11690-3).

The acoustical quality of a room is high if DL_f is low and DL_2 is high. Typical values for average sound absorption coefficient and for sound propagation parameters DL_2 and DL_f are given in Table 2 for different types of rooms and surface treatments.

Generally, industrial noise lies in the frequency range 500 Hz to 2 000 Hz. In such situations, the following reductions in sound pressure level relative to rooms with hard walls and ceiling may be achieved.

- In the near region, the reduction of the A-weighted sound pressure level is in the range 1 dB to 3 dB because surface treatment has very little effect (see ISO 11690-1 for definitions).
- In the middle region, this reduction is usually between 3 dB and 8 dB.
- In the far region, it usually lies between 5 dB and 12 dB, depending on the room dimensions and the extent of wall treatment and fittings.

In order to assess the effectiveness of a surface treatment outside the direct field, distinction should be made between rooms with and without diffuse field conditions (see ISO 11690-1 for definitions and also Annex F and ISO 11690-3).

Typical spatial sound distribution curves in rooms of different shapes and sizes before and after installation of a variety of surface treatments are given in Figure 8 and Figure 9.

The combination of surface treatment and noise barriers is normally quite effective and leads to a noise level reduction which is substantially higher than that obtained with only one of these measures (see Annex E and Annex F). In addition to the noise reduction which can be measured objectively, there will be an important subjective improvement.

More information on surface treatment is given in Annex F.

6.4 Sound propagation in structures and noise control measures

Transmission of airborne noise into adjacent rooms or into the open is reduced by increasing the sound insulation of walls, ceilings, windows and doors (see Annex H).

Propagation of structure-borne sound should be prevented initially as it is very difficult to eliminate once in the structure. Measures to reduce the transmission of airborne and structure-borne sound (see Annex G and Annex H) should be considered at the planning stage, otherwise their implementation may not be feasible.

7 Noise control at the work station

Noise control measures at the source and on the transmission paths can be supplemented by further measures taken at the work station, for example with screens and cabins (see Annex E and Annex I).


8 Verification methods

8.1 General

Sound sources, noise control devices, sound propagation, noise levels in workplaces and sound insulation of buildings are described by acoustical quantities. These acoustical quantities and sound level reductions by means of specific measures are frequently determined or agreed upon in plans, programmes and contracts. The value of these acoustical quantities and the success of noise control measures should be verifiable *in situ*. When comparing these values with the verified ones, the uncertainty should be taken into account.

Table 2 — Typical values for the average sound absorption coefficient (α) and sound propagation descriptors DL_f and DL_2 in the middle region

Description of rooms	α	DL_f dB	DL_2 dB
With small/intermediate volume ($V < 10\,000\text{ m}^3$ and $h < 5\text{ m}$) without absorbing ceiling, empty	$< 0,2$	8 to 13	1 to 3
With large volume ($V \geq 10\,000\text{ m}^3$ and $h \geq 5\text{ m}$) without absorbing ceiling, with fittings	$< 0,2$	6 to 9	2,5 to 4
All rooms with absorbing ceiling, with fittings	$> 0,3$	5 to 8	3,5 to 5
NOTE DL_f is the excess of sound pressure level. DL_2 is the rate of spatial decay of sound pressure levels per distance doubling. See 11690-1 for definitions.			

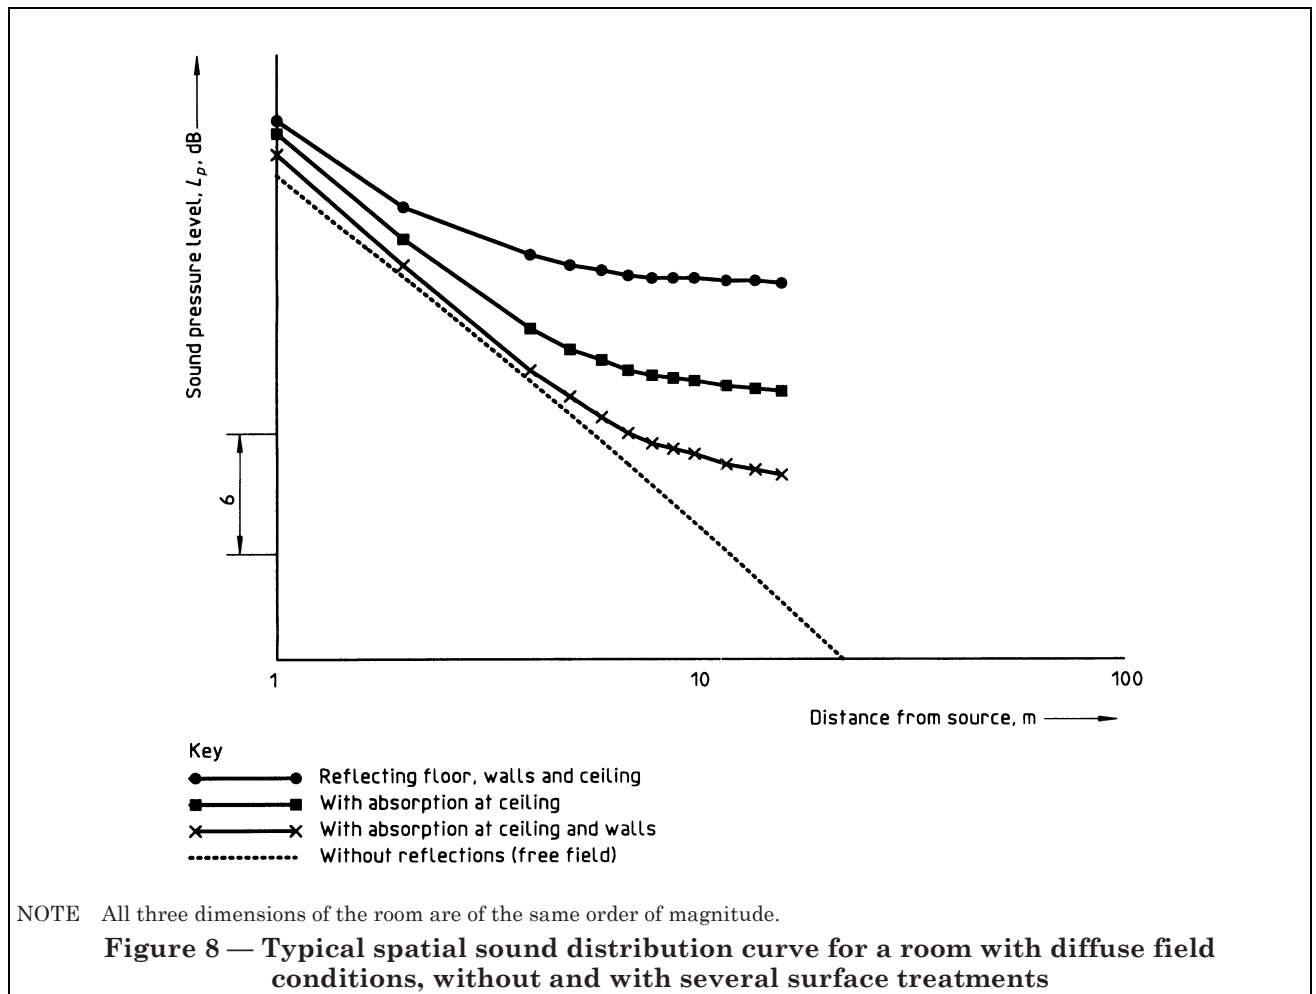

8.2 Sound sources

The declaration of noise emission can be verified by using the methods given in ISO 4871. Noise emission data should be verified by using the machine-specific noise test code and the basic standards for noise emission measurement (the ISO 3740 series, the ISO 9614 series and the ISO 11200 series). When verifying the declared values, it is essential that the operating and mounting conditions are the same as those specified in the noise emission declaration or machine documents. The noise control measures are assessed by determining the difference in noise emission.


8.3 Noise control devices

The effectiveness of noise control devices can be measured and verified by using the insertion loss, transmission loss or the reduction of sound pressure levels (see Annex C, Annex D, Annex E and Annex I). The buyer and seller should agree on which descriptor to use.

8.4 Workroom

The acoustic quality of workrooms and offices can be assessed by using the following sound propagation parameters: spatial decay (DL_{s2}), excess (DL_f) of sound pressure level and reverberation time. These three quantities can be measured or calculated (see ISO/TR 11690-3). Values agreed upon between the parties at the planning stage are usually calculated. Verified values are measured.

Verification method: an omnidirectional sound source of known sound power should be used. The source should be located near the floor with the measurement points all set at the same height. The influence of a directional characteristic of the source can be avoided if the source is rotating and the sound pressure level is integrated at each measurement point.

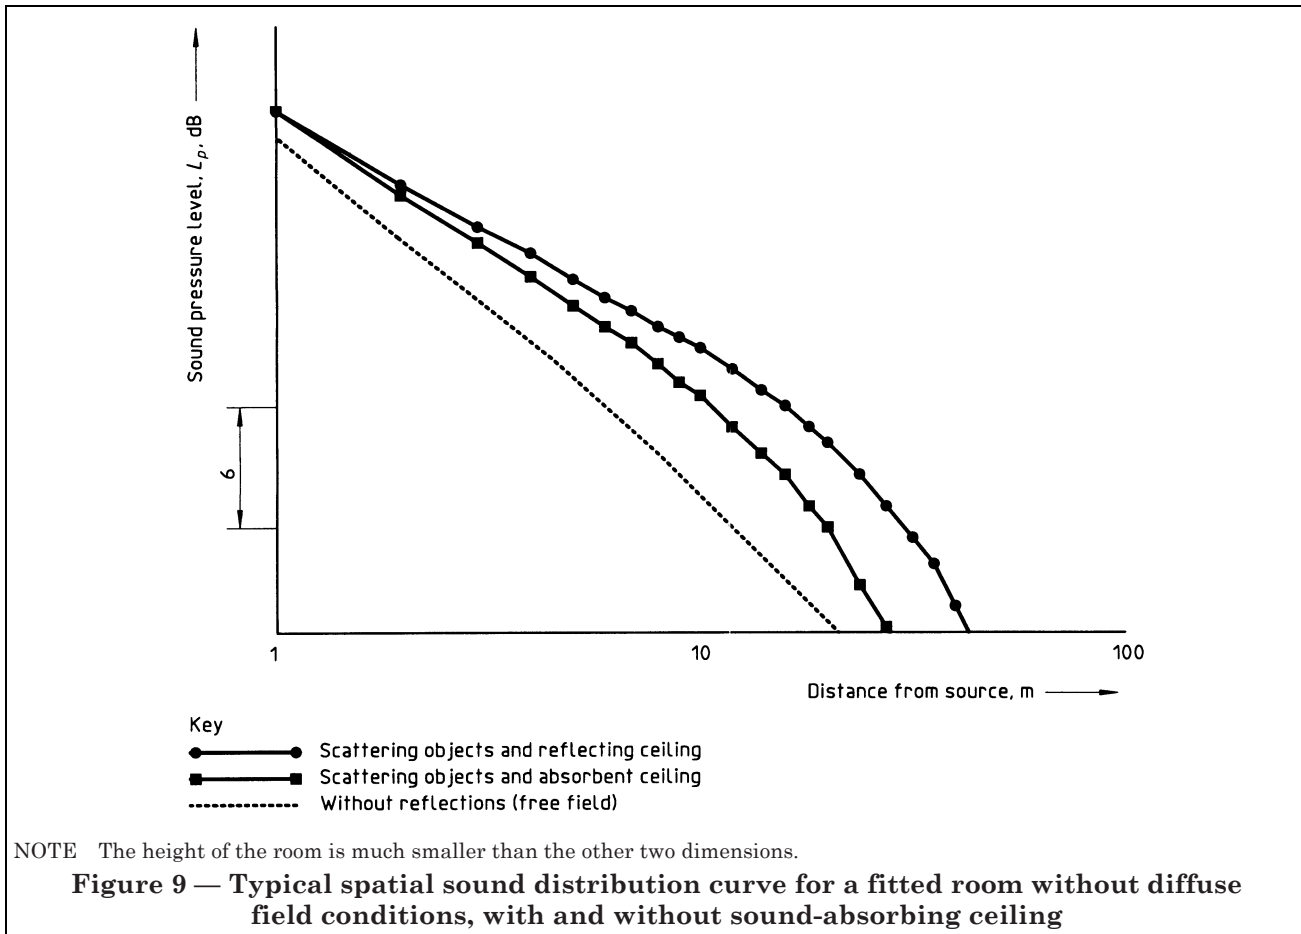

Sound propagation should be determined for the overall sound pressure level with a given frequency distribution or in octave bands. Normally, it is measured on a path that ensure free sight between the source and measurement point. When comparing the given and the verified values, it is essential that the path and the range of distances be the same.

When measuring the spatial sound distribution curve, the sound pressure level behind obstacles such as machines (e.g. at work stations) can be up to 10 dB lower (on average 3 dB to 4 dB) than the sound pressure level measured on a path with free sight. These differences must be taken into account when the spatial sound distribution curve in rooms and the sound pressure level at the work station are to be determined.

8.5 Specified positions, work stations

The effectiveness of noise control and the noise immission can be determined and verified by taking into account the sound pressure level at specific positions, normally the work stations. Situations before and after noise control measures can be compared only if the operating conditions and the measurement method used are identical.

9 New technologies

In some cases, it may be necessary to consider noise control strategies offered by the application of new technologies.

Annex J gives some information on one of these technologies: anti-noise active/adaptive techniques where the undesired mechanical and/or acoustical waves interfere destructively with artificially generated ones in the opposite phase. No such systems are commercially available for workplaces as yet.

Annex A (informative)

Modification or replacement of machine components

A.1 Restriction of noise generation and transmission

The following procedures are recommended.

- a) Avoid impacts or rapid movements by uniform motion (slow progressive motion) and restrict impact noise by reducing impact velocities (e.g. reduce drop height, use smaller masses) and use damping materials on impact surfaces (e.g. sandwich or elastic materials).
- b) Avoid using piping arrangements with flow-restricting designs; select larger radii bends, or design the system with continuous cross-sections rather than discontinuous ones.
- c) Use multitube nozzles instead of a single large one in discharge openings.
- d) Avoid using speeds close to the speed of sound and prevent cavitation by using multiple pressure-relief valves.
- e) Install inner gear system pumps instead of axial piston pumps.
- f) Use plastic gear wheels if mechanical loading requirements allow this.
- g) Install helical gearing instead of spur-toothed gears.
- h) Ensure tolerances are adhered to when using parts where surface quality is essential for machine parts with friction rolling contact.
- i) Ensure all rotating masses are balanced.
- j) Select low-noise bearings (friction bearings are generally quieter than rolling bearings).
- k) Ensure that the installation provides optimum performance.
- l) Select materials giving the best combinations (e.g. plastic/steel) and surface lubrication of elements with friction contact.
- m) Design the system so that the most acoustically favourable force-transmission method is used (e.g. elastic couplings or hydraulic gears, toothed, V or flat belts, friction wheel drives instead of gearwheel drives, helical-tooth and/or ground gears); select gearwheel pairs where one gear-wheel is of a material with high internal damping; use direct drive by multipole or speed-regulated motors.

A.2 Reduction of noise radiation

The following procedures are recommended.

- a) Use perforated plates with an open area of about 30 % (if no insulation of airborne sound is necessary).
- b) Use materials with high internal damping (e.g. grey cast iron, sandwich plates, plastics).
- c) Limit the transmission of structure-borne sound to radiating surfaces.
- d) Restrict airborne sound by the use of panels with high mass, or use a double wall and fill the cavity with absorbent material.
- e) Line the inner surfaces of casings with absorbent material; this is especially effective if little structure-borne sound is transferred to the casting surfaces.
- f) Seal all openings which are not required and grout all joints.
- g) Provide noise absorbers in areas where openings are required or design acoustic openings.

NOTE 2 More design rules can be found in ISO/TR 11688-1.

Annex B (informative)

Arrangement of sound sources

The following procedures are recommended.

B.1 Location of high-noise sources together in order to minimize their effect on remote work stations

Placing two equally loud noise sources together increases the total noise level by 3 dB. However, if two noise sources are placed some distance apart, the surrounding area of each of them is affected.

B.2 Location of the noisiest sources

Where the production process allows, high-noise machines should be separated from quieter ones. This can be done by locating high-noise sources in separate rooms, or by the retrospective installation of partitions with effectively sealed doors. When a number of high-noise machines are concentrated in a single room, the A-weighted noise level generally rises by only a few decibels. This increase can be compensated for by an appropriate treatment of the room surfaces.

B.3 Arrangement of ancillary tasks

Low-noise tasks should be separated from noisy ones. Ancillary tasks which are not directly connected to noise sources, for example, cleaning, maintenance and repair work on individual parts, production task preparation, further processing of production (packaging, etc.), should be carried out in separate low-noise areas.

B.4 Use of remote control

Where practicable, remote-control systems should be used. These enable the operator to be moved to a greater distance from the noise source.

Annex C (informative) Enclosures

Various designs of enclosures will provide varying noise reductions, measured for example as insertion loss, depending on the noise spectrum of the source. The noise reduction achieved is lower if the noise source emits predominantly low-frequency sound.

Typical reductions of A-weighted sound pressure levels are:

- approximately 5 dB to 10 dB for sound-insulating wrapping;
- approximately 10 dB to 25 dB for single-shell enclosures with sound-absorbing lining;
- more than 25 dB for double-shell enclosures with sound-absorbing lining.


Figure C.1 gives typical values of the noise reduction, as a function of frequency, for different enclosure and machine configurations.

Openings drastically reduce the effectiveness of enclosures, especially at high frequencies. Therefore, the open areas should be kept to a minimum. For example, for enclosures with leak ratios of 10 %, 1 % or 0,1 %, the reduction of A-weighted emission sound pressure levels is limited to 10 dB, 20 dB or 30 dB.



Very high values of noise reduction are only obtained with well-designed complete enclosures with solid-borne sound-insulating mounting and without openings or with openings fitted with silencers or lined ducts or properly sealed doors.

The effectiveness of an enclosure decreases with time unless very careful maintenance is performed.



ISO 11546-1 and ISO 11546-2 give methods for the measurement of the effectiveness of enclosures.

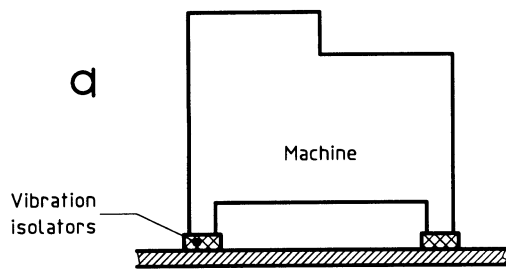



a)

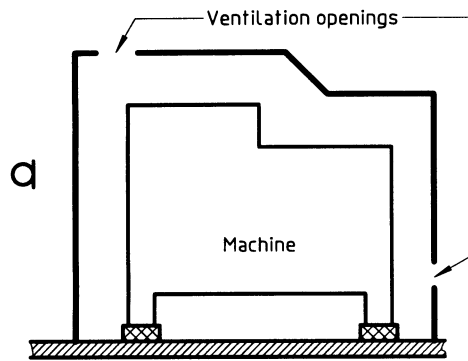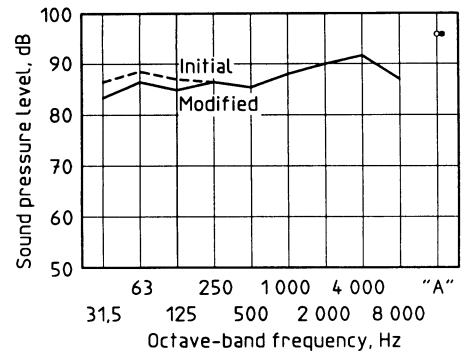

b)

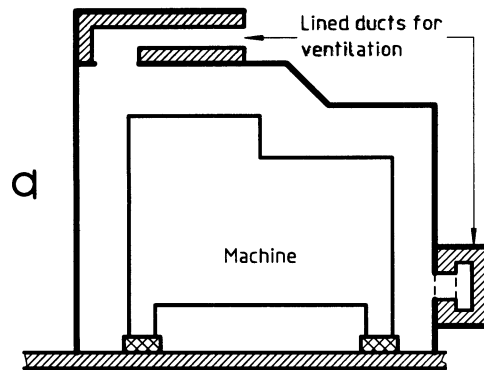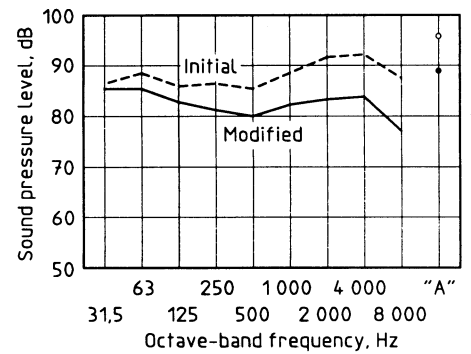

c)

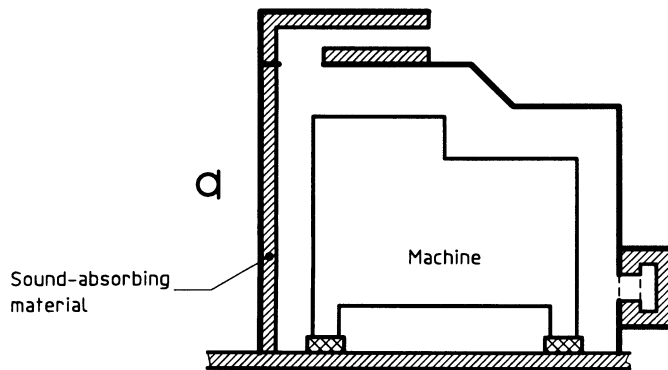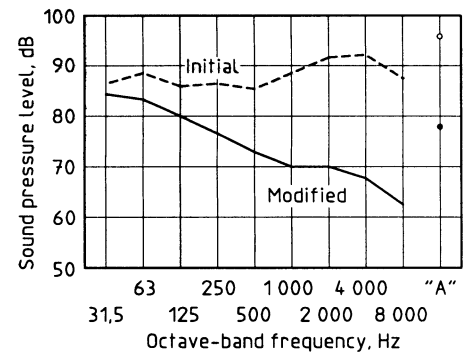

d)

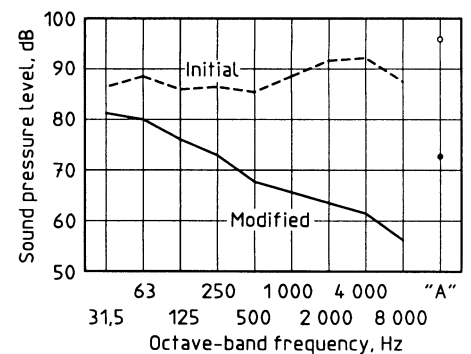


Figure C.1 — Typical noise reduction achieved for different machine and enclosure configurations

Annex D (informative) Silencers

Silencers can be categorized as follows, according to the physical action brought into play:

- a) **reactive-type silencers** (reflection-type and resonator-type), used for instance in internal combustion engines and effective in specific frequency ranges;
- b) **throttle silencers**, used mainly in blow-out operations (high pressure loss);
- c) **dissipative silencers**, based on absorbing linings, used mainly for fans, blowers, compressors and air-conditioning systems.

Frequently, a combination of the above is used. All types of silencers have frequency-dependent absorption. It is essential that the choice of a silencer is based on the preliminary knowledge of the frequency content of the noise to be attenuated and on the practical conditions of use, such as

- presence of particles, moisture and corrosive constituents in the fluid,
- mass flow,
- pressure,
- temperature,
- allowable pressure loss,
- installation situation.

In practice, noise level reduction ranges approximately from 10 dB to 20 dB. Larger values are sometimes achieved.

The following International Standards give methods for the measurement of the effectiveness of some types of silencers: ISO 7235, ISO 11691 and ISO 11820.

Annex E (informative) Noise barriers and screens in rooms

Noise barriers and screens generally consist of sheets of steel, wood, glass or plastic. They should be covered by sound-absorbing linings on the side facing the source.

Noise barriers and screens can be used in workplaces where the aim is to prevent direct noise radiation from reaching a point of immission. Furthermore, they can be used to separate noisy areas in a room from the rest of the room, especially in the form of partial-height partitions or lateral enclosures. Separation improves as the remaining connecting surface of the room cross-section decreases and as the absorption on the part of the wall and ceiling surfaces adjacent to the connecting surface increases. Typically, reductions of A-weighted sound pressure levels of up to 10 dB can be achieved.

In workrooms without surface treatment, a noise reduction (measured as insertion loss in the 1 kHz octave band) of more than 5 dB can only be achieved by barriers and screens of more than half the room height and for distances between the source and the receiver of less than three times the room height.

Noise barriers and screens are most effective when they are combined with wall and ceiling treatments, and the combination should be used when all other measures are not practicable.

ISO 11821 gives a method for the measurement of the *in situ* effectiveness of removable screens. ISO 10053 gives a method for the measurement of the effectiveness of office screens.

Annex F (informative) Acoustical treatment of surfaces

F.1 Rooms with a diffuse field

In such rooms, and at a certain distance from the source, the sound pressure level is constant (see Figure 8). It is only in this ideal case that the reverberation time, T , can be used to determine the noise level reduction in the diffuse sound field when a certain absorption is added.

The noise level reduction yielded by surface treatment can be easily calculated from the total absorption areas (A_1 , A_2) or the reverberation times (T_1 , T_2), where indices 1 and 2 indicate the values before and after treatment, respectively:

$$10 \lg (A_2/A_1) \text{ or } 10 \lg (T_1/T_2)$$

The reverberation time (in seconds) in a room under diffuse-field conditions is given by

$$T = 0,163 V/A$$

where

V is the volume of the room, in cubic metres;

A is the equivalent absorption area of the room (in square metres) given by the partial surfaces, S_i , of the room and the respective absorption coefficients, α_i (see ISO 11690-1):

$$A = \sum S_i \alpha_i$$

Examples of the absorption coefficient are given in Table 2 and Table F.1.

Table F.1 — Mean sound absorption coefficient (α) in the frequency range 500 Hz to 2 000 Hz for nearly cubic rooms without sound-absorbing treatment

Room utilization	α
Rooms with equipment such as compressors, fans, etc.	0,05 to 0,1
Metal-processing halls, machine rooms	0,1 to 0,2
Wood-processing halls	0,1 to 0,25
Textile industry (e.g. weaving and spinning mills)	0,2 to 0,25
Office rooms	0,15 to 0,2

F.2 Rooms with a non-diffuse field

In such rooms, parameters describing spatial sound propagation are used to assess the effectiveness of a surface treatment.

F.3 Practical hints on surface treatment

Some features of surface treatment are as follows.

- If the density of noise sources in a room is very high, work stations are necessarily close to noise sources but surface treatment can, nevertheless, be beneficial if the sound field in the vicinity of a source is dominated by the sound coming from other sources and reflected by room boundaries.
- Surface treatments are particularly effective in rooms with acoustically hard boundaries.
- Surface treatment should always be considered as a possible measure at the design stage of a workroom. At this stage, one has the opportunity to select wall and ceiling structures with sound-absorbing properties and, where relevant, in combination with heat insulation.
- The sound-absorption coefficient of materials used for wall treatment is frequency dependent (commonly used materials are most effective in the medium- and high-frequency ranges). When choosing a surface treatment, it is therefore necessary to consider the frequency spectrum of the noise (octave-band levels usually).
- Surface treatment is most effective when located close to the noise sources.
- Frequently, the subjective effectiveness of a surface treatment is greater than the objective one. One of the reasons is that the frequency spectrum has been shifted towards lower and hence less-annoying frequencies.
- If, in an existing room, additional absorbing materials are used to cover the ceiling or walls, the absorption coefficient of the treated surface should be higher than 0,6 in the relevant frequency range.

When using noise barriers and screens, the noise level reduction is very poor unless these are combined with a surface treatment.

Annex G (informative) Structure-borne sound insulation

Machines transmit vibrations to the structures to which they are connected (floor, walls, mounting elements, piping systems). Part of the energy is then radiated as sound.

Structure-borne sound insulation is therefore necessary if, for example, low noise levels are required in adjacent rooms.

Methods applicable for reducing airborne sound induced by structure-borne sound are the following.

- a) Vibration isolation (mounting of the machine on appropriate vibration isolators). The mounting of the machine on a heavy, resonance-free foundation mass may be necessary.
- b) Damping of the radiating structures (dissipation of structure-borne sound as heat).
- c) In piping systems, flexible joints should be used or (if they are not practicable for operational reasons) claddings should be applied (damped metal sheets).

The use of appropriate fastening devices (damped springs, visco-elastic fasteners) prevents the transmission of structure-borne sound to the structures supporting the pipe.

In conveying systems, similar fasteners should be used, if necessary combined with additional lumps of mass, for example at crane rail supports.

Annex H (informative)

Airborne sound insulation of partitions

The airborne sound insulation of single-shell partitions depends largely on the mass per unit area. In general, an increase in airborne sound insulation of about 5 dB is obtained when the mass per unit area is doubled.

For the same mass per unit area of a partition and an appropriate acoustical design, double walls may have an airborne sound insulation which is about 10 dB higher than that of single-shell walls. The sound insulation is greatly influenced by mass and flexibility, cavity damping by sound-absorbing materials, the distance between shells and the avoidance of rigid connections between the shells. In the case of solid walls, improvements as high as 5 dB to 10 dB can be achieved by providing an appropriate extra sound-insulating front panel.

When estimating the noise insulation of walls and ceilings, it must be taken into account that, due to flanking transmission, the actual performance is some-what less than the intrinsic performance of the panels used.

One should note that windows and doors often provide less noise insulation than the walls themselves. The resulting reduction of insulation depends on the ratio of the area of the windows and doors to the total area of the partition.

The degree of noise insulation required, as a function of the intended activity or use, should be established at the planning stage of a building. Strong noise sources should not be placed in rooms next to, for instance, a laboratory or a recreation room.

The ISO 140 series gives methods for the measurement of sound insulation of building elements. The ISO 717 series gives methods for the rating of sound insulation of building elements.

Annex I (informative)

Noise control at the work station

Persons exposed to high noise levels can be protected by sound-insulating cabins. Typical reductions of A-weighted sound pressure levels are between 15 dB and 30 dB. However, the cabin should be adequately ventilated. In many cases (e.g. where there is high heat exposure), it may be necessary to install an air-conditioning unit.

Sound-insulating cabins have the advantage of being easy to assemble or dismantle, and in many cases they are an effective noise control measure.

ISO 11957 gives a method for the measurement of the effectiveness of sound-insulating cabins.

Sometimes, barriers or partial enclosures can also be used at the work station or at communication locations (e.g. telephone points), their effectiveness being a reduction of A-weighted sound pressure levels of less than 10 dB, in general.

If the noise immission at the work station is too high after appropriate noise control measures have been implemented (see clauses 4 to 7), personnel should wear hearing protection. When selecting the most appropriate hearing protectors in a specific case, comfort, hygiene and safety have to be considered together with the sound attenuation provided. Effective attenuations on site are lower than those found in catalogues of hearing protectors, because of improper use or because they are not used at all.

Annex J (informative) Example of a new technology

J.1 Technique

Active noise and vibration control techniques are based on the creation of a destructive interference between acoustical or mechanical waves (see Figure J.1).

Active control techniques are effective mainly in the medium-to-low frequency range (see Figure J.2), that is in the range where the classical noise reduction measures lose their effectiveness.

Noise reductions in this frequency range can reach 20 dB for stationary phenomena and 10 dB for time-dependent ones.

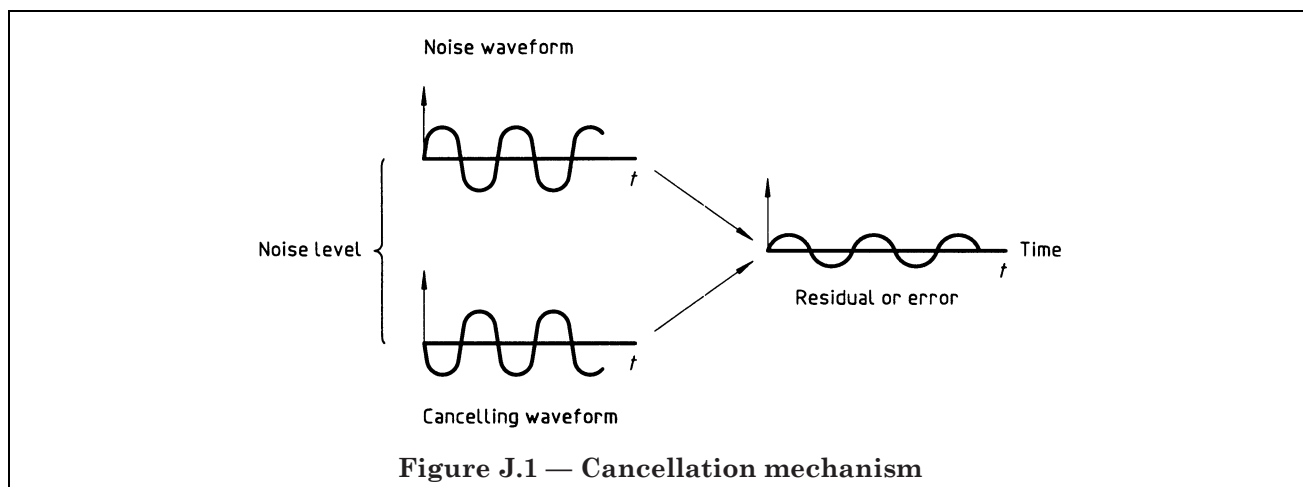


Figure J.1 — Cancellation mechanism

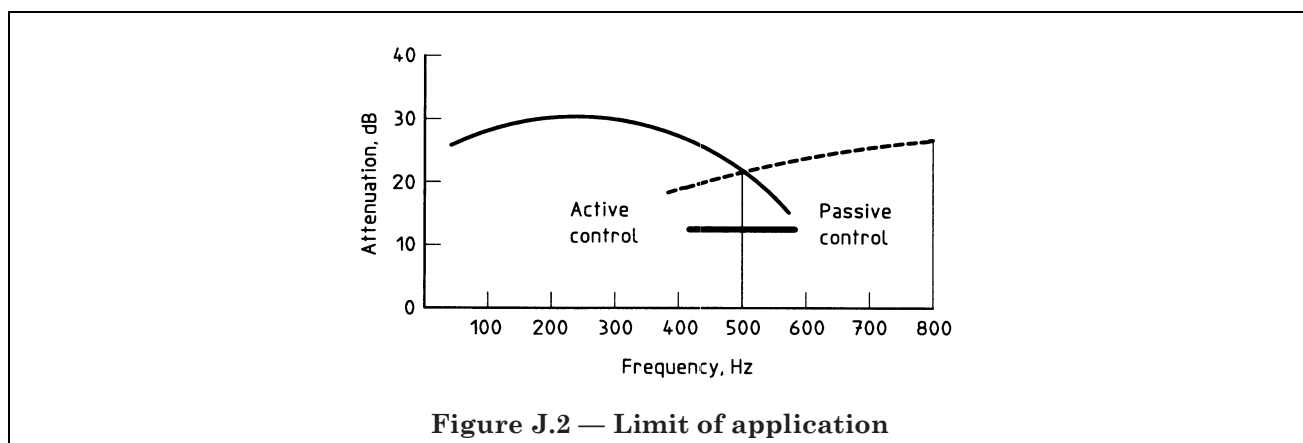


Figure J.2 — Limit of application

J.2 Applications

Possible industrial applications of active control concern the following.

a) Noise

Significant noise reduction can be obtained in closed or restricted spaces (zonal silencing), mainly in connection with repetitive phenomena.

The noise emitted at outlets from exhausts and ducts, for example in ventilation systems, can also be successfully reduced.

b) Vibrations

Two different approaches are possible:

- vibration cancellation,
- vibration isolation.

The first approach is usually applied to large and heavy structures, while the second one can be used on small light systems.

Annex K (informative)

Bibliography

[1] ISO 140-1:1990, *Acoustics — Measurement of sound insulation in buildings and of building elements — Part 1: Requirements for laboratories.*

[2] ISO 140-2:1991, *Acoustics — Measurement of sound insulation in buildings and of building elements — Part 2: Determination, verification and application of precision data.*

[3] ISO 140-3:1995, *Acoustics — Measurement of sound insulation in buildings and of building elements — Part 3: Laboratory measurements of airborne sound insulation of building elements.*

[4] ISO 140-4:—, *Acoustics — Measurement of sound insulation in buildings and of building elements — Part 4: Field measurements of airborne sound insulation between rooms¹⁾.*

[5] ISO 140-5:—, *Acoustics — Measurement of sound insulation in buildings and of building elements — Part 5: Field measurements of airborne sound insulation of façade elements and façades²⁾.*

[6] ISO 140-6:—, *Acoustics — Measurement of sound insulation in buildings and of building elements — Part 6: Laboratory measurements of impact sound insulation of floors³⁾.*

[7] ISO 140-7:—, *Acoustics — Measurement of sound insulation in buildings and of building elements — Part 7: Field measurements of impact sound insulation of floors⁴⁾.*

[8] ISO 140-8:—, *Acoustics — Measurement of sound insulation in buildings and of building elements — Part 8: Laboratory measurements of the reduction of transmitted impact noise by floor coverings on a solid standard floor⁵⁾.*

[9] ISO 140-9:1985, *Acoustics — Measurement of sound insulation in buildings and of building elements — Part 9: Laboratory measurement of room-to-room airborne sound insulation of a suspended ceiling with a plenum above it.*

[10] ISO 140-10:1991, *Acoustics — Measurement of sound insulation in buildings and of building elements — Part 10: Laboratory measurement of airborne sound insulation of small building elements.*

[11] ISO 717-1:—, *Acoustics — Rating of sound insulation in buildings and of building elements — Part 1: Airborne sound insulation⁶⁾.*

[12] ISO 717-2:—, *Acoustics — Rating of sound insulation in buildings and of building elements — Part 2: Impact sound insulation⁷⁾.*

[13] ISO 3740:1980, *Acoustics — Determination of sound power levels of noise sources — Guidelines for the use of basic standards and for the preparation of noise test codes.*

[14] ISO 3741:1988, *Acoustics — Determination of sound power levels of noise sources — Precision methods for broad-band sources in reverberation rooms.*

[15] ISO 3742:1988, *Acoustics — Determination of sound power levels of noise sources — Precision methods for discrete-frequency and narrow-band sources in reverberation rooms.*

¹⁾ To be published. (Revision of ISO 140-4:1978)

²⁾ To be published. (Revision of ISO 140-5:1978)

³⁾ To be published. (Revision of ISO 140-6:1978)

⁴⁾ To be published. (Revision of ISO 140-7:1978)

⁵⁾ To be published. (Revision of ISO 140-8:1978)

⁶⁾ To be published. (Revision of ISO 717-1:1982 and ISO 717-3:1982)

⁷⁾ To be published. (Revision of ISO 717-2:1982)

- [16] ISO 3743-1:1994, *Acoustics — Determination of sound power levels of noise sources — Engineering methods for small, movable sources in reverberant fields — Part 1: Comparison method for hard-walled test rooms.*
- [17] ISO 3743-2:1994, *Acoustics — Determination of sound power levels of noise sources using sound pressure — Engineering methods for small, movable sources in reverberant fields — Part 2: Methods for special reverberation test rooms.*
- [18] ISO 3744:1994, *Acoustics — Determination of sound power levels of noise sources using sound pressure — Engineering method in an essentially free field over a reflecting plane.*
- [19] ISO 3745:1977, *Acoustics — Determination of sound power levels of noise sources — Precision methods for anechoic and semi-anechoic rooms.*
- [20] ISO 3746:1995, *Acoustics — Determination of sound power levels of noise sources using sound pressure — Survey method using an enveloping measurement surface over a reflecting plane.*
- [21] ISO 3747:1987, *Acoustics — Determination of sound power levels of noise sources — Survey method using a reference sound source.*
- [22] ISO 4871:1996, *Acoustics — Declaration and verification of noise emission values of machinery and equipment.*
- [23] ISO 7235:1991, *Acoustics — Measurement procedures for ducted silencers — Insertion loss, flow noise and total pressure loss.*
- [24] ISO 9614-1:1993, *Acoustics — Determination of sound power levels of noise sources using sound intensity — Measurement at discrete points.*
- [25] ISO 9614-2:1996, *Acoustics — Determination of sound power levels of noise sources using sound intensity — Measurement by scanning.*
- [26] ISO 10053:1991, *Acoustics — Measurement of office screen sound attenuation under specific laboratory conditions.*
- [27] ISO 11200:1995, *Acoustics — Noise emitted by machinery and equipment — Guidelines for the use of basic standards for the determination of emission sound pressure levels at a work station and at other specified positions.*
- [28] ISO 11201:1995, *Acoustics — Noise emitted by machinery and equipment — Measurement of emission sound pressure levels at a work station and at other specified positions — Engineering method in an essentially free field over a reflecting plane.*
- [29] ISO 11202:1995, *Acoustics — Noise emitted by machinery and equipment — Measurement of emission sound pressure levels at a work station and at other specified positions — Survey method in situ.*
- [30] ISO 11203:1995, *Acoustics — Noise emitted by machinery and equipment — Determination of emission sound pressure levels at a work station and at other specified positions from the sound power level.*
- [31] ISO 11204:1995, *Acoustics — Noise emitted by machinery and equipment — Measurement of emission sound pressure levels at a work station and at other specified positions — Method requiring environmental corrections.*
- [32] ISO 11546-1:1995, *Acoustics — Determination of sound insulation performances of enclosures — Part 1: Measurements under laboratory conditions (for declaration purposes).*
- [33] ISO 11546-2:1995, *Acoustics — Determination of sound insulation performance of enclosures — Part 2: Measurements in situ (for acceptance and verification purposes).*
- [34] ISO 11654:—, *Acoustics — Sound absorbers for use in buildings — Rating of sound absorption⁸⁾.*
- [35] ISO/TR 11688-1:1995, *Acoustics — Recommended practice for the design of low-noise machinery and equipment — Part 1: Planning.*
- [36] ISO/TR 11688-2:, *Acoustics — Recommended practice for the design of low-noise machinery and equipment — Part 2: Introduction into physics of low-noise design⁸⁾.*
- [37] ISO 11689:, *Acoustics — Procedure for the comparison of noise-emission data for machinery and equipment⁸⁾.*
- [38] ISO/TR 11690-3:, *Acoustics — Recommended practice for the design of low-noise workplaces containing machinery — Part 3: Sound propagation and noise prediction in work-rooms⁸⁾.*

⁸⁾ To be published.

- [39] ISO 11691:1995, *Acoustics — Measurement of insertion loss of ducted silencers without flow — Laboratory survey method.*
- [40] ISO 11820:1996, *Acoustics — Measurements on silencers in situ.*
- [41] ISO 11821:—, *Acoustics — Determination of the in situ sound attenuation of a removable screen*⁹⁾.
- [42] ISO 11957:1996, *Acoustics — Determination of sound insulation performance of cabins — Laboratory and in situ measurements.*
- [43] *Acoustique prévisionnelle intérieure: Étude de cas.* INRS, NST 53, Vandœuvre-les-Nancy, France, 1984.
- [44] BERANEK L.L. and VER I.L. (eds). *Noise and Vibration Control.* Institute of Noise Control Engineering, Washington, 1988.
- [45] BERANEK L.L. and VER I.L. (eds). *Noise and Vibration Control Engineering: Principles and Applications.* John Wiley, New York, 1992.
- [46] BIES D.A. and HANSEN C.H. *Engineering Noise Control.* Unwin Hyman, London, 1988.
- [47] CHEREMISINOFF P.N. and CHEREMISINOFF P.P. *Industrial Noise Control Handbook.* Ann Arbor Science, Michigan, 1977.
- [48] CORD H., GATLEY W.S. and EVENSON H.A. *Noise Control for Engineers.* McGraw-Hill, New York, 1980.
- [49] ELVHAMMAR H. and LANDSTRÖM L. *Fight the Noise.* The Swedish Work Environment Fund, Stockholm, 1990.
- [50] ELVHAMMAR H. *Handbok för ljudprojektering av industrilokaler (Acoustical Planning of Industry Premises — Handbook).* The Swedish Work Environment Fund, Stockholm, 1994. (In Swedish)
- [51] FAHY F. *Sound and Structural Vibration: Radiation, Transmission and Response.* Academic Press, London, 1985.
- [52] GAMBA R. and ABISOU G. (eds). *La protection des travailleurs contre le bruit — Les points clés. Collection Outils et Méthodes,* ANACT, Paris, 1992.
- [53] HARRIS C.M. (ed.). *Handbook of Noise Control.* McGraw Hill, New York, 1979.
- [54] HARRIS D.A. (ed.). *Noise Control Manual.* van Nostrand Reinhold, New York, 1992.
- [55] HECKL M. and MÜLLER H.A. *Taschenbuch der Technischen Akustik.* Springer Verlag, Berlin, 1975.
- [56] HORNS H. and WETTSCHUREK R. *Katalog lärmindernder Massnahmen in der Fertigung — Metallverarbeitung.* BAU-Bericht, Fa 17, Wirtschaftsverlag NW, Bremerhaven, 1989.
- [57] *Sound solutions: Techniques to reduce noise at work.* HSE books, Sudbury, UK, 1995.
- [58] KURZE U.J., HORNS H. et al. *Lärminderung am Arbeitsplatz III — Beispielsammlung.* BAU-Bericht, Fa 14, Wirtschaftsverlag NW, Bremerhaven, 1987.
- [59] MAY D.N. *Handbook of Noise Assessment.* van Nostrand Reinhold, New York, 1978.
- [60] NELSON P.A. and ELLIOT S.J. *Active Control of Sound.* Academic Press, London, 1992.
- [61] *Noise Control Principles and Practice.* Danish Working Environmental Fund, 1980.
- [62] PETRUSEWICZ S.A. and LONGMORE D.K. *Noise and Vibration Control for Industrialists.* Elek Science, London, 1974.
- [63] SCHIRMER W. *Lärmbekämpfung.* Verlag Tribüne, Berlin, 1989.
- [64] SCHMIDT H. *Schalltechnisches Taschenbuch.* VDI Verlag, Düsseldorf, 1989.
- [65] SCHMIDT K.P. and HARRIS H. *Lärminderung am Arbeitsplatz II — Beispielsammlung.* BAU-Bericht, Fa 13, Wirtschaftsverlag NW, Bremerhaven, 1987.
- [66] WINKLER A., DIETMANN I. and MIDDELDORF R. *Technische Massnahmen zur Lärminderung in der Dünnblechverarbeitung.* BAU-Bericht, Fa 3, Wirtschaftsverlag NW, Bremerhaven, 1985.

⁹⁾ To be published.

Annex ZA (normative)**Normative references to international publications with their relevant European publications**

This European Standard incorporates by dated or undated reference, provisions from other publications. These normative references are cited at the appropriate places in the text and the publications are listed hereafter. For dated references, subsequent amendments to or revisions of any of these publications apply to this European Standard only when incorporated in it by amendment or revision. For undated references the latest edition of the publication referred to applies.

<u>Publication</u>	<u>Year</u>	<u>Title</u>	<u>EN</u>	<u>Year</u>
ISO 11690-1	1996	<i>Acoustics — Recommended practice for the design of low-noise workplaces containing machinery — Part 1: Noise control strategies</i>	EN ISO 11690-1	1996

BSI — British Standards Institution

BSI is the independent national body responsible for preparing British Standards. It presents the UK view on standards in Europe and at the international level. It is incorporated by Royal Charter.

Revisions

British Standards are updated by amendment or revision. Users of British Standards should make sure that they possess the latest amendments or editions.

It is the constant aim of BSI to improve the quality of our products and services. We would be grateful if anyone finding an inaccuracy or ambiguity while using this British Standard would inform the Secretary of the technical committee responsible, the identity of which can be found on the inside front cover. Tel: 020 8996 9000. Fax: 020 8996 7400.

BSI offers members an individual updating service called PLUS which ensures that subscribers automatically receive the latest editions of standards.

Buying standards

Orders for all BSI, international and foreign standards publications should be addressed to Customer Services. Tel: 020 8996 9001. Fax: 020 8996 7001.

In response to orders for international standards, it is BSI policy to supply the BSI implementation of those that have been published as British Standards, unless otherwise requested.

Information on standards

BSI provides a wide range of information on national, European and international standards through its Library and its Technical Help to Exporters Service. Various BSI electronic information services are also available which give details on all its products and services. Contact the Information Centre. Tel: 020 8996 7111. Fax: 020 8996 7048.

Subscribing members of BSI are kept up to date with standards developments and receive substantial discounts on the purchase price of standards. For details of these and other benefits contact Membership Administration. Tel: 020 8996 7002. Fax: 020 8996 7001.

Copyright

Copyright subsists in all BSI publications. BSI also holds the copyright, in the UK, of the publications of the international standardization bodies. Except as permitted under the Copyright, Designs and Patents Act 1988 no extract may be reproduced, stored in a retrieval system or transmitted in any form or by any means – electronic, photocopying, recording or otherwise – without prior written permission from BSI.

This does not preclude the free use, in the course of implementing the standard, of necessary details such as symbols, and size, type or grade designations. If these details are to be used for any other purpose than implementation then the prior written permission of BSI must be obtained.

If permission is granted, the terms may include royalty payments or a licensing agreement. Details and advice can be obtained from the Copyright Manager. Tel: 020 8996 7070.