BS ISO 19399:2016



# **BSI Standards Publication**

Paints and varnishes — Wedgecut method for determination of film thickness (scribe and drill method)



BS ISO 19399:2016 BRITISH STANDARD

#### National foreword

This British Standard is the UK implementation of ISO 19399:2016.

The UK participation in its preparation was entrusted to Technical Committee STI/10, Test methods for paints.

A list of organizations represented on this committee can be obtained on request to its secretary.

This publication does not purport to include all the necessary provisions of a contract. Users are responsible for its correct application.

© The British Standards Institution 2016. Published by BSI Standards Limited 2016

ISBN 978 0 580 89571 5

ICS 87.040

Compliance with a British Standard cannot confer immunity from legal obligations.

This British Standard was published under the authority of the Standards Policy and Strategy Committee on 31 May 2016.

Amendments/corrigenda issued since publication

Date Text affected

# INTERNATIONAL STANDARD

ISO 19399:2016 ISO 19399

First edition 2016-05-01

# Paints and varnishes — Wedge-cut method for determination of film thickness (scribe and drill method)

Peintures et vernis — Détermination de l'épaisseur par la méthode d'entaille en coin (Méthode de rayer et de forage)



BS ISO 19399:2016 **ISO 19399:2016(E)** 



# **COPYRIGHT PROTECTED DOCUMENT**

# © ISO 2016, Published in Switzerland

All rights reserved. Unless otherwise specified, no part of this publication may be reproduced or utilized otherwise in any form or by any means, electronic or mechanical, including photocopying, or posting on the internet or an intranet, without prior written permission. Permission can be requested from either ISO at the address below or ISO's member body in the country of the requester.

ISO copyright office Ch. de Blandonnet 8 • CP 401 CH-1214 Vernier, Geneva, Switzerland Tel. +41 22 749 01 11 Fax +41 22 749 09 47 copyright@iso.org www.iso.org

Co	ontents	Page					
Fore	reword	iv					
1	Scope	1					
2	Normative references	1					
3	Terms and definitions	1					
4	Principle	2					
5	Wedge-cut principle						
6	Apparatus 6.1 Method A 6.2 Method B 6.3 Measuring microscope	5 					
7	Test specimens	8					
8	Procedure  8.1 Sample preparation  8.2 Number of determinations  8.3 Method A (wedge-cut scribe)  8.4 Method B (wedge-cut bore)						
9	Precision	9					
10	Test report	9					
Ann	Annex A (informative) Error sources and measuring problems						
Ann	nex B (informative) Evaluation with tilted specimen	16					
Ann	nex C (informative) Evaluation with curved specimen	21					
	liography	2.7					

# **Foreword**

ISO (the International Organization for Standardization) is a worldwide federation of national standards bodies (ISO member bodies). The work of preparing International Standards is normally carried out through ISO technical committees. Each member body interested in a subject for which a technical committee has been established has the right to be represented on that committee. International organizations, governmental and non-governmental, in liaison with ISO, also take part in the work. ISO collaborates closely with the International Electrotechnical Commission (IEC) on all matters of electrotechnical standardization.

The procedures used to develop this document and those intended for its further maintenance are described in the ISO/IEC Directives, Part 1. In particular the different approval criteria needed for the different types of ISO documents should be noted. This document was drafted in accordance with the editorial rules of the ISO/IEC Directives, Part 2 (see <a href="www.iso.org/directives">www.iso.org/directives</a>).

Attention is drawn to the possibility that some of the elements of this document may be the subject of patent rights. ISO shall not be held responsible for identifying any or all such patent rights. Details of any patent rights identified during the development of the document will be in the Introduction and/or on the ISO list of patent declarations received (see <a href="https://www.iso.org/patents">www.iso.org/patents</a>).

Any trade name used in this document is information given for the convenience of users and does not constitute an endorsement.

For an explanation on the meaning of ISO specific terms and expressions related to conformity assessment, as well as information about ISO's adherence to the WTO principles in the Technical Barriers to Trade (TBT) see the following URL: Foreword - Supplementary information

The committee responsible for this document is ISO/TC 35, *Paints and varnishes*, Subcommittee SC 9, *General test methods for paints and varnishes*.

# Paints and varnishes — Wedge-cut method for determination of film thickness (scribe and drill method)

# 1 Scope

This International Standard specifies a destructive method for determination of the dry film thickness, in which damage to the coat caused in a definite manner is evaluated microscopically. The method is suitable for almost all coat-substrate combinations and also allows determination of the single film thicknesses of coating systems.

The method cannot be applied or can only be applied with restrictions in case of

- too soft and/or elastic coatings (no recognizable scribe or drill hole can be observed),
- hard (cannot be scribed/drilled) or too soft and/or elastic substrates,
- too low visual contrast between the coating and substrate, and
- film thicknesses that are larger than the depth of field of the measuring microscope.

# 2 Normative references

The following documents, in whole or in part, are normatively referenced in this document and are indispensable for its application. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments) applies.

ISO 4618, Paints and varnishes — Terms and definitions

# 3 Terms and definitions

For the purposes of this document, the terms and definitions given in ISO 4618 and the following apply.

#### 3.1

#### substrate

surface to which a coating material is applied or is to be applied

[SOURCE: ISO 4618:2014, 2.244]

# 3.2

# coating

layer formed from a single or multiple application of a coating material to a substrate

[SOURCE: ISO 4618:2014, 2.50.1]

# 3.3

# coating system

combination of all coats of coating materials which are to be applied or which have been applied to a substrate

Note 1 to entry: The actual coating system can be characterized by the number of coats involved.

Note 2 to entry: See also *coating* (3.2).

[SOURCE: ISO 4618:2014, 2.54]

# BS ISO 19399:2016 **ISO 19399:2016(E)**

# 3.4

# single coat

part of a coating system

#### 3.5

# total film thickness

distance between the surface of the coating and surface of the substrate

#### 3.6

# single film thickness

distance between the surface of a single coat and the surface of the coat (substrate) underneath

#### 3.7

## dry-film thickness

thickness of a coating remaining on the surface when the coating has hardened

[SOURCE: ISO 2808:2007, 3.5]

#### 3.8

## wedge cut

damage to the coating system caused mechanically under the specified angle to the surface and extending into the substrate

Note 1 to entry: The wedge cut can be implemented as a linear scribe or as a conical bore hole.

#### 3.9

## wedge-cut image

microscopic image of a wedge cut

#### 3.10

# adhesive failure

detachment of a coating from the substrate caused by external forces

Note 1 to entry: The substrate can be another coating beneath or the basic material.

#### 3.11

#### cohesion failure

loss of cohesion within a coating caused by external forces


# 4 Principle

A wedge cut with a known flank angle is made in the coating using a scribing or drilling tool. The film thickness is calculated from the width of the flank projection of the wedge cut obtained with the measuring microscope.

# 5 Wedge-cut principle

The wedge cut for determination of the film thickness according to this International Standard can be made using a scribing tool (method A) or a drilling tool (method B).

<u>Figure 1</u> shows a wedge cut according to method A in the cross section. The basis length, *l*, is the projection of the wedge-cut flank within the coating and is measured with a microscope between the upper and lower contrast mark in micrometres.

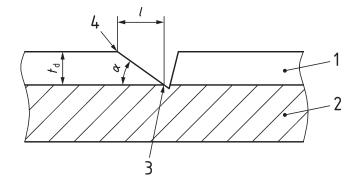

# Key

- 1 coating
- 2 substrate
- 3 lower contrast mark (intersection from the substrate to the coating)
- 4 upper contrast mark
- l wedge-cut basis
- *t*<sub>d</sub> dry-film thickness
- $\alpha$  wedge-cut angle

Figure 1 — Wedge cut according to method A (single coat/cross section)

The film thickness is determined according to Formula (1):

$$t_{\rm d} = l \cdot \tan \alpha \tag{1}$$

where

- $t_{\rm d}$  is the dry-film thickness, in micrometres;
- *l* is the wedge-cut base (microscope reading), in micrometres;

 $\tan \alpha$  is the wedge-cut factor of the wedge-cut tool used.

NOTE 1 Instruments are available where the microscope reading is indicated in "number of scale divisions" and the wedge-cut factor in "micrometres per scale division".

The film thickness measuring range is as follows:

- determined by the wedge-cut angle, the dimensions of the wedge-cut tool and the scale measuring range of the microscope;
- limited by the depth of field of the measuring microscope (see A.9).

The resolution of the dry-film thickness measurement is determined by the wedge-cut angle and the scale division of the measuring microscope.

EXAMPLE For the usual wedge-cut angles  $\alpha = 5.7^{\circ}$  and  $\alpha = 14.0^{\circ}$ , the following is indicated in <u>Table 1</u>:

- the wedge-cut factor  $\tan \alpha$ ;
- the dry-film thickness measuring range (= scale measuring range  $\times \tan \alpha$ );
- the absolute dry-film thickness resolution  $\Delta_a$  (= scale division × tan  $\alpha$ );


— the relative dry-film thickness resolution  $\Delta_r$  (=  $(\Delta_a/t_d) \times 100$ ;  $t_d$  = dry-film thickness).

In the above, it is assumed that the measuring microscope has a scale measuring range of 2 mm, as well as a scale division of 0,02 mm and that the wedge-cut tool is sufficiently dimensioned.

Table 1 — Numerical data on the wedge-cut method

Wedge-cut angle $\alpha$	0	5,7	14,0
Wedge-cut factor $ an lpha$		0,10	0,25
Film thickness measuring range	μm	up to 200	up to 500
Absolute film thickness resolution $\Delta_a$	μm	2	5
Relative film thickness resolution $\Delta_r$	%	200/t <sub>d</sub>	500/t <sub>d</sub>

Figure 2 shows a wedge cut according to method B in the cross section (I) and the associated wedge-cut image (II) visible through the microscope. Here, the section *l* to be measured with the microscope is the distance between the concentric circles.

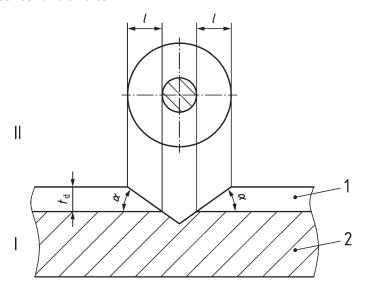


# Key

- 1 cross section
- 2 wedge-cut image
- I coating
- II substrate
- l wedge-cut basis
- *t*<sub>d</sub> dry-film thickness
- $\alpha$  wedge-cut angle

Figure 2 — Wedge cut according to method B (single coat)

In the case of coating systems, the single film thicknesses can be determined in a similar manner.

Figure 3 shows the wedge-cut scribe (method A) for a 2-coat system. The single dry-film thicknesses  $t_{\rm d1}$  and  $t_{\rm d2}$  are then calculated from the microscope readings  $l_1$  and  $l_2$  with Formula (1) for  $t_{\rm d1}$  =  $l_1$  · tan  $\alpha$  and  $t_{\rm d2}$  =  $l_2$  · tan  $\alpha$ .

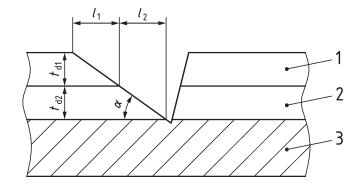

# Key

- 1 single coat 1
- 2 single coat 2
- 3 substrate
- $l_i$  wedge-cut basis associated with  $t_{di}$  (i = 1, 2)
- $t_{di}$  dry-film thickness of the single coat i (i = 1, 2)
- $\alpha$  wedge-cut angle

Figure 3 — Wedge cut according to method A (2-coat system/cross section)


# 6 Apparatus

# 6.1 Method A

- **6.1.1 Wedge-cut scribing device**, as shown schematically in Figure 4, with the following features.
- **6.1.1.1** The stylus 6 is fastened interchangeably in the metal block 7 and protrudes as far out as the support bolts 3.

NOTE There are wedge-cut scribing devices that are equipped with support wheels instead of the support bolts.

6.1.1.2 The device shall be adjusted so that, when placed on an even surface, the stylus axis 8 is oriented vertically to this surface.

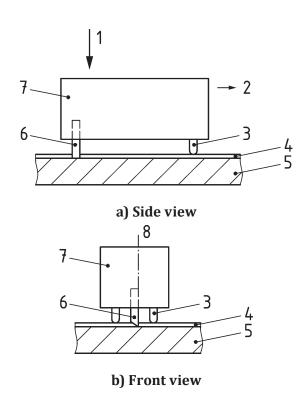


# Key

- 1 direction of load
- 2 direction of scribing
- 3 support bolts
- 4 coating

- 5 substrate
- 6 wedge-cut stylus
- 7 metal block
- 8 stylus axis

Figure 4 — Wedge-cut scribing device

**6.1.2 Wedge-cut stylus**, made from hard metal with a form according to Figure 5, with indication of the wedge-cut factor and/or the wedge-cut angle.

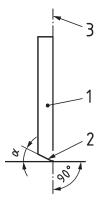

# Key


- 1 shaft
- 2 cutting edge

- 3 stylus axis
- $\alpha$  wedge-cut angle

Figure 5 — Wedge-cut stylus

# 6.2 Method B


- **6.2.1 Wedge-cut drilling device**, as shown schematically in <u>Figure 6</u>, with the following features.
- **6.2.1.1** The rotational movement of the drill bit 9 fastened interchangeably in the drilling spindle 4 (see Figure 6) may be generated manually or by an electromotive drive.
- **6.2.1.2** The device shall be adjusted so that, when placed on an even surface, the drill axis 2 is oriented vertically to this surface.

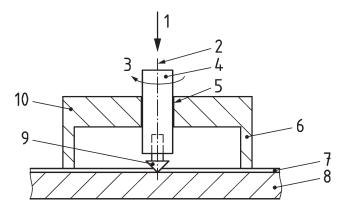

# Key

- 1 direction of load 6 support 7 2 drill axis coating 3 rotational movement 8 substrate 4 drilling spindle with chuck wedge-cut drill bit 5 drilling spindle guide 10 housing
  - Figure 6 Wedge-cut drilling device

**6.2.2 Wedge-cut drill bit**, made from hard metal with a form according to Figure 7, with indication of the wedge-cut factor and/or the wedge-cut angle.

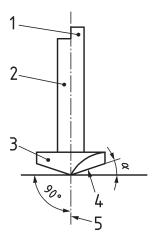

## Key

Figure 7 — Wedge-cut drill

# 6.3 Measuring microscope

Measuring microscope, with illumination device and with

- a minimum of 40x magnification,
- a measuring range of minimum 2 mm, and
- a scale division of maximum 0.02 mm.

NOTE 1 Standard wedge-cut devices are equipped with an integral measuring microscope and an integral illumination device.

NOTE 2 Instead of a conventional measuring microscope, a video microscope can be used and the wedge-cut image evaluated digitally.

# 7 Test specimens

The specimens shall exhibit a planar area, which is at least twice as big as the base plane of the wedge-cut device.

NOTE 1 Clamping devices are available for wedge-cut drilling devices (method B), which also enable measurements on specimens with a very small planar area (typical dimensions:  $15 \text{ mm} \times 15 \text{ mm}$ ). Specimens with complex geometry (e.g. profiles) can also be fastened with these devices for measuring the dry-film thickness of such specimens.

NOTE 2 Under certain boundary conditions, film thickness determinations on curved specimens are also possible (see  $\frac{\text{Annex C}}{\text{C}}$ ).

# 8 Procedure

# 8.1 Sample preparation

A laminar contrast marking should preferably be applied to the coating in the area in which the wedge-cut is to be made, so as to make the microscopic measurement easier.

A black permanent felt-tip pen is normally used for bright coatings. A white or silver-coloured paint felt-tip pen may be used for dark specimens. In this case, the marking coat shall be applied thinly and shall be fully hardened before making the wedge cut. It shall be ensured that the solvent in the felt-tip pen does not attack the coating.

# 8.2 Number of determinations

For each determination of the dry-film thickness, three wedge-cut scribes or wedge-cut drills, respectively, shall be applied on the test panel. The wedge-cut basis, *l*, shall be measured for each cut or each drill at two different test points.

# 8.3 Method A (wedge-cut scribe)

- **8.3.1** Insert the wedge-cut stylus (6.1.2) for the intended measuring range according to 6.1.1.1 into the wedge-cut scribing device (6.1.1) and fix.
- **8.3.2** Place the scribing device on the coating and pull with a speed of about 10 mm/s over a section of minimum 10 mm (see Key 2 in Figure 4). When doing so, press down the scribing device so that a scribe is made down into the substrate.

- **8.3.3** Place the measuring microscope (6.3) on the coating and measure the width of the projection of the wedge-cut flank from the surface (marking) to the substrate (see <u>Figure 1</u>) transverse to the wedge-cut scribe at two points of the scribe.
- **8.3.4** Use the measured values and the wedge-cut factor of the stylus to calculate the dry-film thicknesses, in micrometres, according to Formula (1).
- **8.3.5** Repeat implementation steps 8.3.2 to 8.3.4 at two further points on the specimen.
- **8.3.6** As a result, indicate the mean value, in micrometres, from the six determinations.
- 8.3.7 To determine the single-dry-film thicknesses of a coating systems, proceed analogously and according to <u>Clause 5</u>.

# 8.4 Method B (wedge-cut bore)

- **8.4.1** Insert the wedge-cut drill bit  $(\underline{6.2.2})$  for the intended measuring range into the wedge-cut drilling device  $(\underline{6.2.1})$  and fix.
- **8.4.2** Place the drilling device on the coating and lower the rotating drill bit onto the coating. When doing so, load the drilling spindle axially (see Key 1 in Figure 6) so that the coating is drilled conically down into the substrate.
- **8.4.3** Place the measuring microscope (6.3) on the coating and measure the width of the projection of the wedge-cut flank from the surface (marking) to the substrate (see <u>Figure 2</u>) in a radial direction at two points of the drill bore cone.
- **8.4.4** Use the measured values and the wedge-cut factor of the drill bit to calculate the dry-film thicknesses, in micrometres, according to Formula (1).
- **8.4.5** Repeat implementation steps 8.3.2 to 8.3.4 at two further points on the specimen.
- **8.4.6** As a result, indicate the mean value, in micrometres, from the six determinations.
- **8.4.7** To determine the single-dry-film thicknesses of a coating system, proceed analogously and according to <u>Clause 5</u>.

# 9 Precision

Precision data are currently not available.

# 10 Test report

The test report shall contain at least the following data:

- a) all individual details required for identification and characterization of the specimen, i.e. data
  - 1) concerning the coating (manufacturer, product identification, batch number, application method, drying/hardening conditions, aging/conditioning conditions, etc.), and
  - 2) concerning the substrate (material, thickness, form, dimensions, curvature, etc.);
- b) a reference to this International Standard, i.e. ISO 19399;

# BS ISO 19399:2016 **ISO 19399:2016(E)**

- c) the method used (A or B);
- d) the wedge-cut tool used (wedge-cut factor/wedge-cut angle);
- e) the test results according to <u>8.3.6</u>, <u>8.3.7</u>, <u>8.4.6</u>, or <u>8.4.7</u>: the dry-film thickness and, if applicable, the single-dry-film thicknesses, in micrometres;
- f) any deviation from the specified test method;
- g) any unusual features (anomalies) observed during the test;
- h) the name of the inspector and test laboratory;
- i) the date of the test.

# Annex A

(informative)

# **Error sources and measuring problems**

# A.1 Soft and/or elastic coating

#### A.1.1 Phenomenon

Three negative effects can occur in the case of coatings that are too soft and/or too elastic.

- Non-separated cuttings adhering to the wedge cut comprising coating material impair the wedgecut image (at least one of the contrast marks not clearly distinct).
- The effective wedge-cut angle is greater than the specified nominal wedge-cut angle due to spring back of the elastic coating after the scribing/drilling.
- A bulge can be caused at the upper edge of the wedge cut due to plastic deformation of the soft coating.

#### A.1.2 Effect

A correct evaluation is not possible in the case of unclearly distinct contrast marks and upon bulge formation. The dry-film thickness can only be estimated roughly at best.

In the case of an elastic spring back of the coating, too small dry-film thickness values are determined systematically.

# A.1.3 Remedy

In some cases, the mechanical properties of the coating can be optimized by cooling (freezer or cold spray). The coating surface shall be protected against solvent attack with an aluminium foil when using cold spray.

In order to avoid the formation of no separated cuttings from coating material, drilling should always be conducted intermittently, i.e. not in one go, in the case of method B. Blow off the drill cuttings between the drilling strokes.

# A.2 Soft and/or elastic substrate

# A.2.1 Phenomenon

Four negative effects can occur in the case of substrates that are too soft and/or too elastic.

- The lower contrast mark is unclearly distinct due to non-separated substrate cuttings adhering to the wedge cut.
- Long substrate cuttings can cause a coat disbonding in case of tough substrate material (see A.4).
- Spring back of the elastic substrate after scribing/drilling impairs the distinctness of the lower contrast mark.
- A bulge can be caused at the upper edge of the substrate cone due to plastic deformation of the soft substrate.

#### A.2.2 Effect

A correct evaluation is not possible in the case of unclearly distinct contrast marks and upon bulge formation. The dry-film thickness can only be estimated roughly at best.

# A.2.3 Remedy

In the case of plastic substrates, the mechanical properties can be optimized by cooling (freezer or cold spray) in some cases. The coating surface shall be protected against solvent attack with an aluminium foil if using cold spray.

In order to avoid the formation of non-separated substrate cuttings, drilling should always be conducted intermittently, i.e. not in one go and as deep into the substrate as possible in the case of method B. Blow off the drill cuttings between the drilling strokes.

# A.3 Hard substrate (that cannot be scribed/drilled)

#### A.3.1 Phenomenon

In the case of very hard substrate materials (e.g. concrete), the wedge cut cannot be made fully (i.e. not into the substrate), with the result that the lower contrast mark is absent or only recognizable indistinctly in the wedge-cut image.

#### A.3.2 Effect

The wedge cut cannot be evaluated correctly. Only a lower limit can be indicated for the dry-film thickness at best.

# A.3.3 Remedy

Method A: There is no technical solution for the measuring problem.

Method B: The wedge-cut basis, *l*, can be determined by measuring the entire drill bore cone diameter and dividing this by two. If the scale measuring range of the microscope is not adequate for this, a drill bit with a larger wedge-cut angle (but also with lower dry-film thickness resolution) shall be used.

# A.4 Wedge-cut with adhesive failure

# A.4.1 Phenomenon

The lower part of the wedge-cut flank has broken off due to disbonding. The disbonding is frequently caused by the formation of long substrate cuttings in the case of substrate materials that are too tough.

# A.4.2 Effect

The ascertained dry-film thickness values are systematically too small. Only a lower limit can be indicated for the dry-film thickness.

# A.4.3 Remedy

The disbonding effect is particularly drastic if the wedge-cut tool penetrates the limit between the coating and substrate. Scribing/drilling should therefore be performed as deeply as possible into the substrate.

The measures described in <u>A.2</u> can be helpful if the plastic substrate is tough: Cooling the specimen, as well as intermittent drilling and blowing the cuttings away, if method B is used.

In the case of method B, the edge of the drill bore cone can still be visible in the substrate, although the coating is absent there. This shall then be used as the lower contrast mark during microscopic measuring.

# A.5 Wedge-cut with cohesive failure

# A.5.1 Phenomenon

Parts of the coating have broken off in the upper area of the wedge-cut flank.

#### A.5.2 Effect

The ascertained film thickness values are systematically too small. Only a lower limit can be indicated for the dry-film thickness.

# A.5.3 Remedy

The breaking off of the coating can only be prevented by careful scribing/drilling.

# A.6 Insufficient visual contrast

#### A.6.1 Phenomenon

The colour/brightness difference between the coating and the substrate or between the single coats of a coating system is so low that no contrast marks or only unclear contrast marks are recognizable in the wedge-cut image.

#### A.6.2 Effect

The wedge cut cannot be evaluated correctly. The dry-film thickness can only be estimated roughly at best.

# A.6.3 Remedy

The problem can be solved in some cases by

- using a high-quality stereo measuring microscope,
- optimizing the illumination equipment (light intensity, lighting geometry, etc.),
- utilizing a metamerism effect (adapted illuminant, monochromatic LED light, etc.),
- using a fluorescence microscope, and
- use of a contrast medium (see also the note in 8.1).

# A.7 Surface curvature

# A.7.1 Phenomenon

The curvature of the specimen surface causes a distortion of the wedge-cut geometry (see Figure C.1). In addition, it is not always ensured that the axis of the wedge-cut tool is oriented vertically to the coating surface (see  $\underline{A.8}$ ).

# A.7.2 Effect

If no further complication (e.g. specimen tilting, see <u>A.8</u>) is superimposed with the influence of the curvature, the film thickness values calculated with Formula (1) are systematically too small (too large) in the case of convex (concave) curvature (see <u>Annex C</u>).

# A.7.3 Remedy

The problem can only be solved if using method B: If it is ensured (e.g. by a special device) that the drill axis is oriented vertically to the specimen surface in the area of the wedge cut and the curvature radius is known, the effect of the curvature can be corrected (see Annex C).

On the other hand, the results of <u>Annex C</u> also provide the option of estimating the minimum permissible curvature radius for a specified maximum error, for which the standard evaluation with Formula (1) is still adequate. This applies for both methods (A and B).

# A.8 Specimen tilting

# A.8.1 Phenomenon

In the case of measurements on non-planar specimens, the specimen normal (see <u>Figure B.2</u>) can be tilted against the axis of the wedge-cut tool.

#### A.8.2 Effect

Method A: The tilt effect cannot be seen from the wedge-cut image. The evaluation reveals, depending on the direction of the tilt, dry-film thickness values that are systematically too small or too large.

Method B: The tilt effect is clearly discernible in the wedge-cut image, as ellipses inside one another are visible instead of concentric circles (see <u>Figure B.1</u>).

# A.8.3 Remedy

Method A: The systematic error caused by the tilt cannot be corrected, as it is not recognized.

Method B: Two measuring values can be read off from the ellipsis constellation (see <u>Figure B.1</u>), which enable calculation of the film thickness (see <u>Annex B</u>).

NOTE The dry-film thickness can only be determined if the tilt angle is less than the wedge-cut angle.

# A.9 Film thickness greater than the depth of field of the measuring microscope

## A.9.1 Phenomenon

If the dry-film thickness is greater than the depth of field of the measuring microscope, both contrast marks cannot be brought into focus simultaneously during the microscopic measurement.

NOTE 1 The depth of field of the 50x magnification microscope usually supplied with the wedge-cut device is about  $500 \mu m$ .

NOTE 2 If the scale reading is performed with focused contrast marks in succession, it cannot be ruled out that the optical axis of the microscope moves relative to the specimen and hence, the wedge-cut image relative to the scale.

# A.9.2 Effect

The dry-film thickness can only be determined with a large error or not at all.

# A.9.3 Remedy

To measure the wedge cut, clamp the specimen firmly and

- $-- use a high-quality laboratory \, microscope \, with \, sufficient \, depth \, of \, field \, and/or \, precise \, vertical \, drive, \, or \, depth \, or \,$
- use a video microscope.


# Annex B

(informative)

# **Evaluation with tilted specimen**

# **B.1** Basic principles


In the case of a tilted specimen, the specimen normal is tilted by a tilt angle,  $\delta$ , against the axis of the wedge-cut tool and a wedge-cut image according to <u>Figure B.1</u> is obtained when using drilling method B. The geometrical details are shown in <u>Figure B.2</u>.

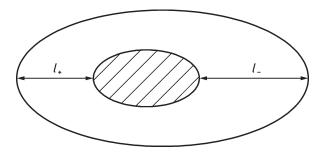

# Key

 $l_{\pm}$  measuring section

Figure B.1 — Wedge-cut image with tilted specimen (method B)

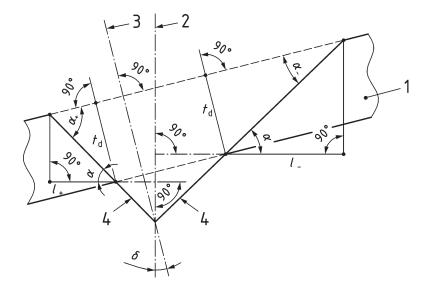

# Key

- 1 coating
- 2 drill axis
- 3 normal of the specimen
- 4 wedge-cut flank (bore cone)
- $l_{\pm}$  measuring section (see Figure B.1)
- *t*<sub>d</sub> dry-film thickness
- $\alpha$  wedge-cut angle
- $\alpha_{\pm}$  derived angle:  $\alpha_{\pm} = \alpha \pm \delta$
- $\delta$  tilt angle

Figure B.2 — Geometrical details of a wedge cut with tilted specimen (method B)

The wedge-cut image  $\underline{B.1}$  allows the measuring variables, l- and l+, to be read off, in micrometres and for the film thickness  $t_d$ , in micrometres, the following applies according to  $\underline{Figure\ B.2}$ :

$$t_{\rm d} = l_{\pm} \frac{\sin\left(\alpha + \delta\right)}{\cos\alpha} \tag{B.1}$$

NOTE For the derivation of Formula (B.1), the sections  $l_{\pm}$  are firstly projected onto the wedge-cut flank 4 [multiplication by  $(1/\cos\alpha)$ ] and then onto a normal of the specimen parallel to 3 [multiplication by  $\cos(90^{\circ} - \alpha_{\pm}) = \sin\alpha_{\pm}$ ] (see Figure B.2).

As the tilt angle  $\delta$  is unknown, the film thickness cannot be calculated directly.

# **B.2** Calculation of the tilt angle

Based on Formula (B.1) the following is obtained

$$\frac{l_{-}}{l_{+}} = \frac{\sin(\alpha + \delta)}{\sin(\alpha - \delta)} = \frac{\sin\alpha \cdot \cos\delta + \sin\delta \cdot \cos\alpha}{\sin\alpha \cdot \cos\delta - \sin\delta \cdot \cos\alpha} = \frac{1 + \tan\delta / \tan\alpha}{1 - \tan\delta / \tan\alpha}$$
(B.2)

and after algebraic transformation

$$\tan \delta = \frac{l_{-}/l_{+} - 1}{l_{-}/l_{+} + 1} \cdot \tan \alpha \tag{B.3}$$

This yields

$$\delta = \tan^{-1} \left( \frac{l_- - l_+}{l_- + l_+} \cdot \tan \alpha \right) \tag{B.4}$$

The film thickness can be calculated with this using Formulae (B.1) with  $l_{-}$  or  $l_{+}$ .

# **B.3** Approximation for small tilt angle

The approach to calculate the film thickness approximately from the determined measuring values according to

$$\frac{-}{t_{\rm d}} = \frac{l_- + l_+}{2} \cdot \tan \alpha \tag{B.5}$$

can only be applied in the case of very small tilt angles (see <u>Table B.1</u>). A generally valid approximation shall therefore be derived imperatively on the basis of Formula (B.1):

The factor  $\sin{(\alpha \pm \delta)}/\cos{\alpha}$  contained in Formula (B.1) can be transformed for small tilt angles (i.e.  $\cos{\delta} \approx 1$  and  $\sin{\delta} \approx \tan{\delta}$ ) into

$$\frac{\sin(\alpha \pm \delta)}{\cos \alpha} = \frac{\sin \alpha \cdot \cos \delta \pm \sin \delta \cdot \cos \alpha}{\cos \alpha} = \tan \alpha \cdot \cos \delta \pm \sin \delta \approx \tan \alpha \pm \tan \delta$$
 (B.6)

giving us by using tan  $\delta$  according to Formula (B.3):

$$\frac{\sin(\alpha \pm \delta)}{\cos \alpha} \approx \left(1 \pm \frac{l_{-} - l_{+}}{l_{-} + l_{+}}\right) \cdot \tan \alpha = \frac{2 \cdot l_{\mp}}{l_{-} + l_{+}} \cdot \tan \alpha = \frac{2}{l_{\pm}} \cdot \frac{l_{-} \cdot l_{+}}{l_{-} + l_{+}} \cdot \tan \alpha \tag{B.7}$$

Using Formulae (B.1) and (B.7), the approximate value  $t_{\rm d, apr}$  for the film thickness is

$$t_{\rm d, apr} = 2 \cdot \frac{l_{-} \cdot l_{+}}{l_{-} + l_{+}} \cdot \tan \alpha \tag{B.8}$$

# **B.4** Comparison of the approximations

On account of Formulae (B.1) and (B.8), there exists between the approximate value  $t_{\rm d,\,apr}$  and the exact value  $t_{\rm d}$  the relation

$$t_{\rm d,\,apr} = \frac{2 \cdot \tan\alpha}{(1/l_{-}) + (1/l_{+})} = \frac{2 \cdot \sin\alpha}{\sin(\alpha - \delta) + \sin(\alpha + \delta)} \cdot t_{\rm d} \tag{B.9}$$

The relative deviation  $\Delta_{apr}$ , as a percentage, between the dry-film thickness  $t_d$  calculated with Formulae (B.1) and (B.4) and the approximate value  $t_{d, apr}$  according to Formula (B.8) results with Formula (B.9):

$$\Delta_{\text{apr}} = \frac{t_{\text{d, apr}} - t_{\text{d}}}{t_{\text{d}}} \cdot 100 = \left(\frac{2 \cdot \sin \alpha}{\sin(\alpha - \delta) + \sin(\alpha + \delta)} - 1\right) \cdot 100$$
(B.10)

 $\delta$  is limited to the range  $0 \le \delta < \alpha$ , and in the limit case  $\delta \to \alpha$ ,  $\Delta_{apr}$  converges against the maximum value  $\Delta_{lim}$ , as a percentage, and results with Formula (B.10):

$$\Delta_{\lim} = \left(\frac{2 \cdot \sin \alpha}{\sin(2 \cdot \alpha)} - 1\right) \cdot 100 = \left(\frac{1}{\cos \alpha} - 1\right) \cdot 100 \tag{B.11}$$

On the other hand, the following applies with Formula (B.1) for the averaged film thickness  $t_{\rm d}$  according to Formula (B.5):

$$\overline{t_{d}} = \frac{l_{-} + l_{+}}{2} \cdot \tan \alpha = \left(\frac{1}{\sin(\alpha - \delta)} + \frac{1}{\sin(\alpha + \delta)}\right) \cdot \frac{\sin \alpha}{2} \cdot t_{d}$$
(B.12)

and the relative deviation  $\Delta$ , as a percentage, between the <u>dry</u>-film thickness  $t_d$  calculated exactly with Formulae (B.1) and (B.4) and the averaged film thickness  $t_d$  according to Formula (B.12):

$$\overline{\Delta} = \frac{\overline{t_d} - t_d}{t_d} \cdot 100 = \left[ \left( \frac{1}{\sin(\alpha - \delta)} + \frac{1}{\sin(\alpha + \delta)} \right) \cdot \frac{\sin \alpha}{2} - 1 \right] \cdot 100$$
(B.13)

<u>Table B.1</u> lists for the typical wedge-cut angles  $\alpha = 5.7^{\circ}$  (tan  $\alpha = 0.10$ ) and  $\alpha = 14^{\circ}$  (tan  $\alpha = 0.25$ ) and based on specified ratios  $l_{-}/l_{+}$  of the measuring variables  $l_{-}$  and  $l_{+}$  the following numerical values:

- $\delta$ , calculated from (l-/l+) and  $\alpha$  with Formula (B.4);
- $\Delta$ , calculated from  $\alpha$  and  $\delta$  with Formula (B.13);
- $\Delta_{apr}$ , calculated from  $\alpha$  and  $\delta$  with Formula (B.10).

Table B.1 — Comparison of the approximations

	t	$\alpha$ = 5,7° an $\alpha$ = 0,1	0	$\alpha = 14^{\circ}$ $\tan \alpha = 0,25$			
l-/l+	δ°	$\frac{-}{\Delta}$	$\Delta_{ m apr}$	δ°	$\frac{-}{\Delta}$	$_{ m 00}^{ m \Delta_{apr}}$	
1,1	0,3	0,2	<0,1	0,7	0,2	<0,1	
1,2	0,5	0,8	<0,1	1,3	0,9	<0,1	
1,3	0,7	1,7	<0,1	1,9	1,8	<0,1	
1,4	1,0	2,9	<0,1	2,4	2,9	<0,1	
1,5	1,1	4	<0,1	2,9	4	0,1	
2,0	1,9	13	<0,1	4,8	13	0,3	
2,5	2,4	23	<0,1	6,1	23	0,6	
3,0	2,9	33	0,1	7,1	34	0,8	
4,0	3,4	57	0,2	8,5	58	1,1	
5,0	3,8	80	0,2	9,4	82	1,4	

The data in <u>Table B.1</u> shows that the approximation  $t_{\rm d} \approx t_{\rm d}$  may only be used for l-/l+ < 1,5, while the approximation  $t_{\rm d} \approx \Delta_{\rm apr}$  is permissible in the entire indicated l-/l+ range. Also,  $\Delta_{\rm apr}$  is limited by  $\Delta_{\rm lim}$ , whereby according to Formula (B.11) the following applies:

— 
$$\Delta_{apr} < \Delta_{lim} = 0.5 \%$$
 for  $\alpha = 5.7^{\circ}$  (tan  $\alpha = 0.10$ ),

<sup>—</sup>  $\Delta_{apr} < \Delta_{lim} = 3.1 \%$  for α = 14° (tan α = 0.25).

 $<sup>\</sup>Delta$  in contrast diverges in the limit case  $\delta \rightarrow \alpha$  [see Formula (B.13)].

# Annex C (informative)


# **Evaluation with curved specimen**

# **C.1** Basic principles

Figure C.1 shows a wedge cut on a convex curved specimen for drilling method B.

NOTE 1 The wedge-cut image shown in Figure C.1 II corresponds to the special case where the curvature of the specimen is only determined by one radius of curvature ("spherical geometry"). In the general case, however, two radii are necessary to describe the curvature, and the wedge-cut image then has a correspondingly different form. In the considerations below,  $r_{\rm cu}$  is understood as the radius of the circle of curvature in the plane that cuts the specimen vertically in the area of the bore drill and progresses in the wedge-cut image according to Figure C.1 through  $l-r_{\rm in}-r_{\rm in}-l$ .

In the calculations below, it is presupposed that the specimen has a convex curvature (see Figure C.1). In the case of a concave curvature,  $r_{cu}$  shall be replaced by  $-r_{cu}$  in all formulae.

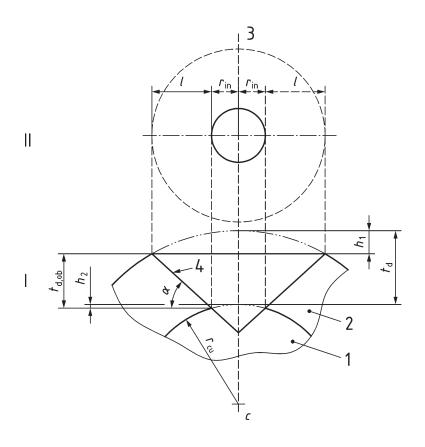

|--|

- 1 substrate
- 2 coating
- 3 drill axis
- 4 wedge-cut flank (bore cone)
- I geometrical details
- II wedge-cut image
- l wedge-cut basis
- $t_{\rm d}$  true dry-film thickness

 $t_{\text{d, ob}}$  observed apparent dry-film thickness ( $t_{\text{d, ob}} = l \cdot \tan \alpha$ )

 $h_i$  sagittal height (i = 1, 2)

 $r_{\rm in}$  radius of the inner circle in the wedge-cut image

c centre of the circle of curvature

 $\alpha$  wedge-cut angle

rcu radius of curvature

Figure C.1 — Wedge cut according to method B on convex curved specimen

Figure C.1 is used to read off

$$t_{\rm d} = t_{\rm d, ob} + (h_1 - h_2)$$
 (C.1)

with

$$h_{1} = (r_{cu} + t_{d}) \cdot \left[ 1 - \sqrt{1 - \frac{(l + r_{in})^{2}}{(r_{cu} + t_{d})^{2}}} \right]$$
 (C.2)

and

$$h_2 = r_{\rm cu} \cdot \left( 1 - \sqrt{1 - \frac{{r_{\rm in}}^2}{{r_{\rm cu}}^2}} \right)$$
 (C.3)

Adding Formulae (C.1) to (C.3) yields for  $t_d \ll r_{cu}$ :

$$t_{\rm d} \approx t_{\rm d, ob} + r_{\rm cu} \cdot \left( \sqrt{1 - \frac{r_{\rm in}^2}{r_{\rm cu}^2}} - \sqrt{1 - \frac{(l + r_{\rm in})^2}{r_{\rm cu}^2}} \right)$$
 (C.4)

Formula (C.4) shows that the true dry-film thickness  $t_d$  with convex curvature, as also revealed from Figure C.1, is always greater than the apparent dry-film thickness  $t_{d, ob}$ . In the case of concave curvature, on the other hand,  $t_d < t_{d, ob}$  applies, as then  $r_{cu}$  shall be replaced by  $-r_{cu}$ .

NOTE 2 According to Formula (C.4), the apparent film thickness  $t_{\rm d,\,ob}$  depends on the radius  $r_{\rm in}$  and hence, also on the drilling depth  $h = r_{\rm in} \cdot \tan \alpha + h_2$  (see Figure C.1) into the substrate.

For l,  $r_{\rm in} \ll r_{\rm cu}$ , the root terms in Formula (C.4) can be approximated linearly  $[\sqrt{1-\alpha} \approx 1-\frac{\alpha}{2}]$  for  $\alpha \ll 1$ , and after transformation the following is obtained:

$$t_{\rm d} \approx t_{\rm d, ob} + \frac{l^2 + 2 \cdot l \cdot r_{\rm in}}{2 \cdot r_{\rm cu}} \tag{C.5}$$

Following from this with  $l = t_{d, ob}/\tan \alpha$ :

$$t_{\rm d} \approx t_{\rm d, ob} \left[ 1 + \frac{t_{\rm d, ob}}{2 \cdot r_{\rm cu} \cdot \tan^2 \alpha} \cdot 1 + \frac{2 \cdot r_{\rm in}}{l} \right]$$
 (C.6)

The true film thickness  $t_d$  can be calculated with Formula (C.6), if

- method B is used.
- the drill axis is aligned radially (i.e. to the centre of the circle of curvature),
- in addition to the wedge-cut basis, l, the circle diameter  $2 \cdot r_{in}$  (see Figure C.1) is known,
- the radius of curvature  $r_{cu}$  is known (but see also C.3), and
- the boundary conditions l,  $t_d$ ,  $r_{in} \ll r_{cu}$  are fulfilled.

# C.2 Evaluation if radius of curvature is known

For simplification of Formula (C.6) the auxiliary variable

$$L = l + 2 \cdot r_{\rm in} \tag{C.7}$$

is introduced.

NOTE If the scale measuring range of the microscope is sufficient, *L* can also be measured directly.

On account of  $2 \cdot r_{\text{in}} = L - l$  according to Formula (C.7) and  $t_{\text{d, ob}} = l \cdot \tan \alpha$  the following is obtained with Formula (C.6):

$$t_{\rm d} \approx l \cdot \left[ 1 + \frac{l}{2 \cdot r_{\rm cu} \cdot \tan \alpha} \cdot (1 + \frac{L - l}{l}) \right] \cdot \tan \alpha$$
 (C.8)

and the true dry-film thickness  $t_d$  can be calculated if the radius of curvature  $r_{cu}$  is known with

$$t_{\rm d} \approx l \cdot \tan \alpha + \frac{l \cdot L}{2 \cdot r_{\rm cu}}$$
 (C.9)

# C.3 Evaluation if radius of curvature is not known

If two wedge-cut bores are performed at points of equal curvature with different drilling depths into the substrate and the associated l and L values (or  $r_{\rm in}$  values) are measured, the radius of curvature  $r_{\rm cu}$  can be calculated.

For the values  $l_i$  and  $L_i$  measured at the wedge-cut bore i the following applies with Formula (C.9) (i = 1, 2)

$$l \approx l_i \cdot \tan \alpha + \frac{l_i \cdot L_i}{2 \cdot r_{\text{CII}}}$$
 (C.10)

or after equating

$$l_1 \cdot \tan \alpha + \frac{l_1 \cdot L_1}{2 \cdot r_{\text{CU}}} \approx l_2 \cdot \tan \alpha + \frac{l_2 \cdot L_2}{2 \cdot r_{\text{CU}}}$$
 (C.11)

from which  $r_{cu}$  can be separated:

$$r_{\rm cu} \approx \frac{(l_1 \cdot L_1 - l_2 \cdot L_2)}{2 \cdot (l_2 - l_1) \cdot \tan \alpha} \tag{C.12}$$

After inserting Formula (C.12) in Formula (C.10) it follows in both cases (i = 1, 2)

$$t_{\rm d} \approx \frac{l_1 \cdot l_2 \cdot (L_1 - L_2)}{l_1 \cdot L_1 - l_2 \cdot L_2} \cdot \tan \alpha$$
 (C.13)

With Formula (C.13), the true dry-film thickness  $t_d$  can also be calculated if the radius of curvature is unknown.

# C.4 Limiting condition for the standard evaluation

Formula (C.6) can be used to calculate the relative deviation  $\Delta_{t, rel} = (t_d - t_{d, ob}) / t_{d, ob}$  between the true dry-film thickness  $t_{d, ob}$ 

$$\Delta_{\rm t, d} \approx \frac{t_{\rm d, ob}}{2 \cdot r_{\rm cu} \cdot \tan^2 \alpha} \cdot \left( 1 + 2 \cdot \frac{r_{\rm in}}{l} \right)$$
 (C.14)

or resolved for  $r_{\rm cu}$ 

$$r_{\rm cu} \approx \frac{t_{\rm d, ob}}{2 \cdot \Delta_{\rm t, d} \cdot \tan^2 \alpha} \cdot \left(1 + 2 \cdot \frac{r_{\rm in}}{l}\right)$$
 (C.15)

Based on Formula (C.15), an estimation of the minimum radius of curvature  $r_{\text{cu, min}}$  can be derived, above which the approximation  $t_{\text{d, ob}} \approx t_{\text{d}}$  is sufficient within a specified maximum deviation  $\Delta_{\text{max}}$ . In order to gain a practical and reliable estimation, the following simplifications are made.

- a) As for the estimation of  $r_{\text{cu, min}}$ , only relative deviations between  $t_{\text{d}}$  and  $t_{\text{d, ob}}$  of maximum  $\Delta_{\text{t, d}} \approx 20 \%$  are assumed,  $t_{\text{d, ob}}$  is replaced by  $t_{\text{d}}$  here.
- b) As  $r_{\text{cu}}$  according to Formula (C.15) via  $r_{\text{in}}$  also depends on the variable drilling depth  $h = r_{\text{in}} \cdot \tan \alpha + h_2$ ; see Figure C.1) into the substrate,  $(1 + 2 \cdot r_{\text{in}} / l) = 10$  is set here. This corresponds to  $h \approx 5 \cdot t_{\text{d}}$ , as in the case of minor curvature, i.e.  $h_2 \ll (r_{\text{in}} \cdot \tan \alpha)$ , it applies  $r_{\text{in}}/l \approx h_{\text{in}} / t_{\text{d}}$ .
- c) Standard units are used.

This gives for the minimal radius of curvature  $r_{cu, min}$ :

$$r_{\rm cu,\; min} pprox rac{500 \cdot t_{
m d}}{\Delta_{
m max} \cdot an^2 lpha}$$
 (C.16)

NOTE 1 Formula (C.16) states: If the radius of curvature  $r_{\text{cu}}$  is greater than the limit radius  $r_{\text{cu}, \min}$ , the curvature effect can be neglected within an accuracy defined by  $\Delta_{\text{max}}$  and the dry-film thickness can be calculated according to Formula (1) (i.e.  $t_{\text{d}}$  approximately  $t_{\text{d}, \text{ob}} = l \cdot \tan \alpha$ ).

NOTE 2 Formula (C.16) is generally valid and not limited to method B.

NOTE 3 As  $r_{\text{cu, min}}$  according to Formula (C.16) is proportional to (1 / tan2  $\alpha$ ), it can be favourable to select as large a wedge-cut angle as possible.

Table C.1 lists  $r_{\text{cu, min}}$  values that were calculated with Formula (C.16), in relation to  $t_{\text{d}}$ ,  $\Delta_{\text{max}}$  and  $\alpha$ , tan  $\alpha$ . Table C.1 also contains the values  $\Delta_{\text{r}}$  for the relative dry-film thickness resolution relating to  $t_{\text{d}}$  and caused by the scale division (see <u>Table 1</u>). For  $\Delta_{\text{max}} < \Delta_{\text{r}} / 2$ , the  $r_{\text{cu, min}}$  values are in brackets, as they make little sense.

Table C.1 —  $r_{
m cu,\,min}$  in relation to  $t_{
m d}$ ,  $\Delta_{
m max}$  and lpha, anlpha

		$\alpha = \tan \alpha$			$\alpha = 14^{\circ}$ $\tan \alpha = 0.25$			
t <sub>d</sub> μm	20	50	100	200	50	100	200	500
Δ <sub>r</sub> %	10	4	2	1	10	5	3	1

$\Delta_{ ext{max}}$ %		$r$ cu, min $10^6\mu{ m m}$									
2	(0,50)	1,25	2,51	5,02	(0,20)	(0,40)	0,80	2,01			
5	0,20	0,50	1,00	2,01	0,08	0,16	0,32	0,80			
10	0,10	0.25	0,50	1,00	0,04	0,08	0,16	0,40			
20	0,05	0,13	0,25	0,50	0,02	0,04	0,08	0,20			

# **Bibliography**

- [1] ISO 2808:2007, Paints and varnishes Determination of film thickness
- [2] ASTM D 4138, Standard Practices for Measurement of Dry Film Thickness of Protective Coating Systems by Destructive, Cross-Sectioning Means
- [3] ASTM D 5796, Standard Practices for Measurement of Dry Film Thickness of Thin Film Coil-Coated Systems by Destructive Means Using a Boring Device
- [4] TOOKE W.R. Jr. Official Digest. *Federation of Societies for Paint Technology, ODFPA*. 1963, **28** p. 691 [A Paint Inspection Gage]





# British Standards Institution (BSI)

BSI is the national body responsible for preparing British Standards and other standards-related publications, information and services.

BSI is incorporated by Royal Charter. British Standards and other standardization products are published by BSI Standards Limited.

#### About us

We bring together business, industry, government, consumers, innovators and others to shape their combined experience and expertise into standards -based solutions

The knowledge embodied in our standards has been carefully assembled in a dependable format and refined through our open consultation process. Organizations of all sizes and across all sectors choose standards to help them achieve their goals.

#### Information on standards

We can provide you with the knowledge that your organization needs to succeed. Find out more about British Standards by visiting our website at bsigroup.com/standards or contacting our Customer Services team or Knowledge Centre.

# **Buying standards**

You can buy and download PDF versions of BSI publications, including British and adopted European and international standards, through our website at bsigroup.com/shop, where hard copies can also be purchased.

If you need international and foreign standards from other Standards Development Organizations, hard copies can be ordered from our Customer Services team.

# **Subscriptions**

Our range of subscription services are designed to make using standards easier for you. For further information on our subscription products go to bsigroup.com/subscriptions.

With **British Standards Online (BSOL)** you'll have instant access to over 55,000 British and adopted European and international standards from your desktop. It's available 24/7 and is refreshed daily so you'll always be up to date.

You can keep in touch with standards developments and receive substantial discounts on the purchase price of standards, both in single copy and subscription format, by becoming a **BSI Subscribing Member**.

**PLUS** is an updating service exclusive to BSI Subscribing Members. You will automatically receive the latest hard copy of your standards when they're revised or replaced.

To find out more about becoming a BSI Subscribing Member and the benefits of membership, please visit bsigroup.com/shop.

With a **Multi-User Network Licence (MUNL)** you are able to host standards publications on your intranet. Licences can cover as few or as many users as you wish. With updates supplied as soon as they're available, you can be sure your documentation is current. For further information, email bsmusales@bsigroup.com.

# **BSI Group Headquarters**

389 Chiswick High Road London W4 4AL UK

#### Revisions

Our British Standards and other publications are updated by amendment or revision.

We continually improve the quality of our products and services to benefit your business. If you find an inaccuracy or ambiguity within a British Standard or other BSI publication please inform the Knowledge Centre.

## Copyright

All the data, software and documentation set out in all British Standards and other BSI publications are the property of and copyrighted by BSI, or some person or entity that owns copyright in the information used (such as the international standardization bodies) and has formally licensed such information to BSI for commercial publication and use. Except as permitted under the Copyright, Designs and Patents Act 1988 no extract may be reproduced, stored in a retrieval system or transmitted in any form or by any means – electronic, photocopying, recording or otherwise – without prior written permission from BSI. Details and advice can be obtained from the Copyright & Licensing Department.

#### **Useful Contacts:**

#### **Customer Services**

Tel: +44 845 086 9001

Email (orders): orders@bsigroup.com
Email (enquiries): cservices@bsigroup.com

#### Subscriptions

Tel: +44 845 086 9001

Email: subscriptions@bsigroup.com

#### **Knowledge Centre**

Tel: +44 20 8996 7004

Email: knowledgecentre@bsigroup.com

# Copyright & Licensing

Tel: +44 20 8996 7070 Email: copyright@bsigroup.com

