

---

---

**Petroleum and liquid petroleum products —  
Measurement of level and temperature in  
storage tanks by automatic methods —**

**Part 4:  
Measurement of temperature in  
atmospheric tanks**

*Pétrole et produits pétroliers liquides — Mesurage du niveau et de la  
température dans les réservoirs de stockage par méthodes automatiques —*

*Partie 4: Mesurage de la température dans les réservoirs à pression  
atmosphérique*

---

---

Reference number  
ISO 4266-4:2002(E)

© ISO 2002

**PDF disclaimer**

This PDF file may contain embedded typefaces. In accordance with Adobe's licensing policy, this file may be printed or viewed but shall not be edited unless the typefaces which are embedded are licensed to and installed on the computer performing the editing. In downloading this file, parties accept therein the responsibility of not infringing Adobe's licensing policy. The ISO Central Secretariat accepts no liability in this area.

Adobe is a trademark of Adobe Systems Incorporated.

Details of the software products used to create this PDF file can be found in the General Info relative to the file; the PDF-creation parameters were optimized for printing. Every care has been taken to ensure that the file is suitable for use by ISO member bodies. In the unlikely event that a problem relating to it is found, please inform the Central Secretariat at the address given below.

© ISO 2002

All rights reserved. Unless otherwise specified, no part of this publication may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without permission in writing from either ISO at the address below or ISO's member body in the country of the requester.

ISO copyright office  
Case postale 56 • CH-1211 Geneva 20  
Tel. + 41 22 749 01 11  
Fax + 41 22 749 09 47  
E-mail [copyright@iso.ch](mailto:copyright@iso.ch)  
Web [www.iso.ch](http://www.iso.ch)

Printed in Switzerland

## Contents

	Page
1 Scope .....	1
2 Normative references .....	1
3 Terms and definitions .....	1
4 Precautions .....	2
4.1 Safety precautions .....	2
4.2 Equipment precautions .....	2
4.3 General precautions .....	3
5 Accuracy .....	3
5.1 General .....	3
5.2 Intrinsic error of ATTs .....	3
5.3 Calibration prior to installation .....	3
5.3.1 General .....	3
5.3.2 ATT calibrated as a system .....	4
5.3.3 ATT calibrated by components .....	4
5.3.4 Multiple-point ATTs .....	4
5.3.5 Variable-length ATTs .....	4
5.3.6 Uncertainty of the reference .....	4
5.4 Error caused by installation and operating conditions .....	4
5.5 Overall accuracy .....	5
5.5.1 General .....	5
5.5.2 Use of ATT for fiscal/custody transfer purposes .....	5
6 Selection of ATTs .....	5
6.1 General .....	5
6.2 ATTs for fiscal/custody transfer purposes .....	6
7 Description of ATT equipment .....	6
7.1 Introduction .....	6
7.2 Electrical temperature elements .....	6
7.2.1 Resistance temperature detectors .....	6
7.2.2 Other temperature elements .....	7
8 Installation of ATTs .....	7
8.1 General .....	7
8.2 Single-point (spot) temperature elements .....	7
8.3 Averaging temperature elements .....	7
8.3.1 General .....	7
8.3.2 Upper, middle and lower temperature elements .....	7
8.3.3 Multiple-point temperature elements .....	8
8.3.4 Variable-length RTD temperature elements .....	8
8.3.5 Mid-level temperature element .....	8
8.3.6 Moveable spot temperature element .....	8

<b>8.3.7</b>	<b>Other methods .....</b>	<b>9</b>
<b>8.4</b>	<b>Thermowells for electronic temperature elements .....</b>	<b>9</b>
<b>9</b>	<b>Calibration and field verification of ATTs .....</b>	<b>11</b>
<b>9.1</b>	<b>Introduction .....</b>	<b>11</b>
<b>9.2</b>	<b>Calibration of single-point, or mid-level temperature element ATTs for fiscal/custody transfer purposes ....</b>	<b>11</b>
<b>9.2.1</b>	<b>Calibration prior to installation .....</b>	<b>11</b>
<b>9.2.2</b>	<b>Initial field verification .....</b>	<b>11</b>
<b>9.3</b>	<b>Calibration of upper, middle and lower or multiple-point ATTs for fiscal/custody transfer purposes .....</b>	<b>12</b>
<b>9.3.1</b>	<b>Calibration prior to installation .....</b>	<b>12</b>
<b>9.3.2</b>	<b>Initial field verification .....</b>	<b>12</b>
<b>9.4</b>	<b>Calibration of variable-length ATTs for fiscal/custody transfer purposes .....</b>	<b>13</b>
<b>9.4.1</b>	<b>Calibration prior to installation .....</b>	<b>13</b>
<b>9.4.2</b>	<b>Initial field verification .....</b>	<b>13</b>
<b>9.5</b>	<b>Subsequent verification of ATTs .....</b>	<b>13</b>
<b>9.5.1</b>	<b>General .....</b>	<b>13</b>
<b>9.5.2</b>	<b>Frequency of subsequent verification .....</b>	<b>13</b>
<b>9.5.3</b>	<b>Record keeping .....</b>	<b>13</b>
<b>10</b>	<b>Data communication and receiving .....</b>	<b>13</b>

## Foreword

ISO (the International Organization for Standardization) is a worldwide federation of national standards bodies (ISO member bodies). The work of preparing International Standards is normally carried out through ISO technical committees. Each member body interested in a subject for which a technical committee has been established has the right to be represented on that committee. International organizations, governmental and non-governmental, in liaison with ISO, also take part in the work. ISO collaborates closely with the International Electrotechnical Commission (IEC) on all matters of electrotechnical standardization.

International Standards are drafted in accordance with the rules given in the ISO/IEC Directives, Part 3.

Draft International Standards adopted by the technical committees are circulated to the member bodies for voting. Publication as an International Standard requires approval by at least 75 % of the member bodies casting a vote.

Attention is drawn to the possibility that some of the elements of this part of ISO 4266 may be the subject of patent rights. ISO shall not be held responsible for identifying any or all such patent rights.

International Standard ISO 4266-4 was prepared by Technical Committee ISO/TC 28, *Petroleum products and lubricants*, Subcommittee SC 3, *Static petroleum measurement*.

ISO 4266-4, together with ISO 4266-1 to ISO 4266-3 and ISO 4266-5 and ISO 4266-6, cancels and replaces ISO 4266:1994, which has been technically revised.

ISO 4266 consists of the following parts, under the general title *Petroleum and liquid petroleum products — Measurement of level and temperature in storage tanks by automatic methods*:

- *Part 1: Measurement of level in atmospheric tanks*
- *Part 2: Measurement of level in marine vessels*
- *Part 3: Measurement of level in pressurized storage tanks (non-refrigerated)*
- *Part 4: Measurement of temperature in atmospheric tanks*
- *Part 5: Measurement of temperature in marine vessels*
- *Part 6: Measurement of temperature in pressurized storage tanks (non-refrigerated)*



# Petroleum and liquid petroleum products — Measurement of level and temperature in storage tanks by automatic methods —

## Part 4:

## Measurement of temperature in atmospheric tanks

### 1 Scope

This part of ISO 4266 gives guidance on the selection, accuracy, installation, commissioning, calibration and verification of automatic tank thermometers (ATTs) in fiscal/custody transfer applications in which the ATT is used for measuring the temperature of petroleum and liquid petroleum products having a Reid vapour pressure less than 100 kPa, stored in atmospheric storage tanks.

This part of ISO 4266 is not applicable to the measurement of temperature in caverns or in refrigerated storage tanks.

### 2 Normative references

The following normative documents contain provisions which, through reference in this text, constitute provisions of this part of ISO 4266. For dated references, subsequent amendments to, or revisions of, any of these publications do not apply. However, parties to agreements based on this part of ISO 4266 are encouraged to investigate the possibility of applying the most recent editions of the normative documents indicated below. For undated references, the latest edition of the normative document referred to applies. Members of ISO and IEC maintain registers of currently valid International Standards.

ISO 1998 (all parts), *Petroleum industry — Terminology*

ISO 4266-1:2002, *Petroleum and liquid petroleum products — Measurement of level and temperature in storage tanks by automatic methods — Part 1: Measurement of level in atmospheric tanks*

ISO 4268:2000, *Petroleum and liquid petroleum products — Temperature measurements — Manual methods*

### 3 Terms and definitions

For the purposes of this part of ISO 4266, the terms and definitions given in ISO 1998, and the following, apply.

#### 3.1

##### **automatic tank thermometer**

##### **ATT**

instrument that continuously measures temperature in storage tanks

NOTE An ATT, which may also be known as an automatic tank temperature system, typically includes precision temperature sensors, field-mounted transmitters for electronic signal transmission, and receiving/readout device(s).

#### 3.2

##### **resistance temperature detector**

##### **RTD**

electrical temperature-sensing element in common use to measure the temperature of the contents of a storage tank

### 3.3

#### **single-point ATT**

##### **spot ATT**

ATT that measures the temperature at a particular point in a tank by the spot temperature element

### 3.4

#### **multiple-point ATT**

ATT consisting of multiple (usually three or more) spot temperature elements to measure the temperature(s) at selected liquid level(s)

NOTE The readout equipment should average the readings from the submerged temperature elements to compute the average temperature of the liquid in the tank, and may also display the temperature profile in the tank.

### 3.5 Averaging ATT

#### 3.5.1

##### **multiple-point averaging ATT**

averaging ATT where the readout equipment selects the individual, spot temperature element(s) that are submerged in the liquid to determine the average temperature of the liquid in the tank

#### 3.5.2

##### **variable-length averaging ATT**

averaging ATT consisting of several temperature elements of varying length, with all the elements extending upwards from a position close to the bottom of the tank, and where the readout equipment selects the longest, completely submerged temperature element to determine the average temperature of the liquid in the tank

### 3.6

#### **temperature transmitter**

instrument that typically provides electrical power to the temperature element(s), converts the temperature measured by the element(s) to an electrical or electronic signal, and transmits the signal to a remote readout

NOTE A local readout may be provided. Often, the function of the temperature transmitter is provided by the level transmitter of the automatic level gauge (ALG).

## 4 Precautions

### 4.1 Safety precautions

International Standards and government regulations on safety and material-compatibility precautions should be followed when using ATT equipment. In addition, the manufacturer's recommendations on the use and installation of the equipment should be followed. All regulations covering entry into hazardous areas should be observed.

### 4.2 Equipment precautions

**4.2.1** All of the ATT equipment should be capable of withstanding the pressure, temperature, operating and environmental conditions likely to be encountered in service.

**4.2.2** ATTs should be certified for use in the hazardous-area classification appropriate to their installation.

**4.2.3** Measures should be taken to ensure that all exposed metal parts of the ATT have the same electrical potential as the tank.

**4.2.4** All parts of the ATT in contact with the product or its vapour should be chemically compatible with the product, to avoid both product contamination and corrosion of the ATT.

**4.2.5** All ATT equipment should be maintained in safe operating condition and the manufacturer's maintenance instructions should be complied with.



**4.2.6** The temperature elements should be located so that the temperature of any sediment deposits or free water bottoms that may be present in the tank is not measured.

### **4.3 General precautions**

**4.3.1** The general precautions given in 4.3.2 to 4.3.6 apply to all types of ATTs and should be observed where they are applicable.

**4.3.2** Tank levels should be measured at the same time as the tank temperature is measured.

**4.3.3** Temperatures measured for bulk transfer should be recorded when they are taken, unless the remote readout equipment of the ATT automatically records the temperatures periodically.

**4.3.4** The same general procedures should be used to measure a tank temperature before product transfer (opening gauge) and after product transfer (closing gauge).

**4.3.5** ATTs should provide security to prevent unauthorized adjustment or tampering. ATTs used in fiscal/custody transfer applications should provide facilities to allow sealing for calibration adjustment.

**4.3.6** The design and installation of ATTs may be subject to the approval of the national measurement organization, who will normally have issued a type or pattern approval ("Type Approval") for the design of the ATT for the particular service for which it is to be employed. Type approval is normally issued after an ATT has been subjected to a specific series of tests and is subject to the ATT being installed in an approved manner. Type approval tests may include the following: visual inspection, performance, vibration, humidity, dry heat, inclination, fluctuations in power supplies, insulation, resistance, electromagnetic compatibility and high voltage.

## **5 Accuracy**

### **5.1 General**

The accuracy of petroleum temperatures taken by the ATTs should be consistent with the accuracy of the levels taken by the automatic level gauging system so that the overall accuracy of the standard volume measurement is not seriously degraded. Observance of the accuracy requirements for level and temperature gauging systems gives in ISO 4266-1 and in this part of ISO 4266 will ensure that this is avoided.

### **5.2 Intrinsic error of ATTs**

The intrinsic error of the ATT, i.e. the accuracy of the ATTs when tested under controlled conditions as specified by the manufacturers, can be a major component of the uncertainty of the temperature measurement of the ATT as installed. The calibration reference device used to calibrate the ATT should be traceable to appropriate national standards.

**NOTE** The temperature elements and field transmitters used for fixed, automatic tank temperature measurement are calibrated prior to installation. The transmitters normally do not provide field calibration adjustments.

### **5.3 Calibration prior to installation**

#### **5.3.1 General**

ATTs to be used in fiscal/custody transfer applications can be calibrated/verified either as a system (see 3.1), or by components.

### 5.3.2 ATT calibrated as a system

If verified as a system, the temperature reading of the ATT readout should agree with that of the thermostatically controlled reference bath or oven temperature within 0,25 °C at a minimum of three test temperatures spanning the anticipated working range of the ATT.

NOTE Subclauses 9.2.1, 9.3.1 and 9.4.1 refer to this clause for calibration of an ATT in the field “as a whole” or “as a system”.

### 5.3.3 ATT calibrated by components

If the ATT is verified by components:

- a) the temperature equivalent of the measured resistance should agree with the reference bath temperature within 0,20 °C at each temperature;
- b) the temperature transmitter/converter and the ATT readout should be checked using precision resistors or a recently calibrated thermal calibrator. The ATT readout should agree with the temperature equivalent of the resistors or calibrator within 0,15 °C at each temperature.

NOTE See 9.2.1, 9.3.1 and 9.4.1 for calibration of an ATT in the field by components.

### 5.3.4 Multiple-point ATTs

The required accuracy for each spot temperature sensor should be as given in 5.3.2 or 5.3.3, depending on the method used.

### 5.3.5 Variable-length ATTs

The required accuracy for each temperature element should be as given in 5.3.2 or 5.3.3, depending on the method used.

### 5.3.6 Uncertainty of the reference

The uncertainty of the reference should not exceed  $\pm 0,05$  °C.

## 5.4 Error caused by installation and operating conditions

The total error of the ATT in fiscal/custody transfer applications can be affected by the installation and by variations in the operating conditions.

NOTE 1 The accuracy of an ATT depends on the following:

- the number of the temperature-sensing elements;
- the location of the temperature-sensing elements.

NOTE 2 The tank content's temperature may be subject to stratification which varies with

- tank mixing;
- multiple sources of supply;
- viscosity of the liquid in the tanks, and
- tank insulation.

NOTE 3 Temperatures in large tanks (i.e. 750 m<sup>3</sup> or larger) are often vertically stratified unless the contents are thoroughly mixed. Larger stratification may be expected in high-viscosity petroleum liquids.

NOTE 4 With other level-measurement technologies (e.g. hydrostatic tank gauges which are pressure-based), a single spot temperature may suffice.

## 5.5 Overall accuracy

### 5.5.1 General

The overall accuracy of temperature measurement by the ATT, as installed, is limited by the intrinsic error of the ATT equipment (temperature-sensing element, transmitter and readout), the effect of installation methods, and the effect of the operating conditions.

When using automatic level gauges (ALGs) which measure the level for fiscal/custody transfer measurement, an ATT should be used which can provide a representative average temperature of the tank contents. In tanks with vertical temperature stratification, the temperature gradient is rarely linear. In circumstances where it has been demonstrated that the operational conditions (e.g. use of tank mixers and/or recirculation of the tank contents) can result in measurements from a single-point temperature sensor being representative (see ISO 4268), such a single-point ATT may be considered adequate. In other circumstances, a multiple-point or other averaging ATT system is recommended.

### 5.5.2 Use of ATT for fiscal/custody transfer purposes

An ATT system should be considered suitable for fiscal/custody transfer services if the ATT system meets the field verification tolerances given below.

The ATT should meet the calibration tolerances prior to installation (see 5.3).

Including the effects of installation methods and changes in operating conditions, the ATT should meet the field verification tolerance (see 9.2.2, 9.3.2 and 9.4.2).

The remote readout, if used, should meet the requirements of this part of ISO 4266 (see clause 10).

## 6 Selection of ATTs

### 6.1 General

Copper or platinum temperature element bulbs, i.e. resistance temperature detectors (RTDs), are normally used for this application. Three types of ATT elements are widely used:

- single-point (spot) ATT (see 3.3);
- multiple-point ATT (see 3.4);
- variable-length averaging ATT (see 3.5).

Other types of ATT elements, which provide comparable performance, may be used.

The selection of a suitable ATT should be made based on the following criteria:

- a) the accuracy required;
- b) the operating conditions which may affect the accuracy (e.g. expected product temperature stratification);
- c) the minimum level in the tank at which temperature measurement is required;
- d) environmental conditions;
- e) number, type and size of the tanks;
- f) available tank entries for new or existing tanks;
- g) requirements for local and remote readout, signal transmission, and cabling.

## 6.2 ATTs for fiscal/custody transfer purposes

Tanks using an automatic method to determine temperature in fiscal/custody transfer should be fitted with average temperature equipment, except when

- the tanks are equipped with operational mixer(s), or an effective recirculation system,
- the maximum vertical temperature variation is less than 1 °C,
- the tanks have a capacity less than 159 m<sup>3</sup> (1 000 barrels) or the level is less than 3 m, and
- the manual average temperature measurement is used for fiscal/custody transfer.

Single-point or spot tank temperature measurement may be used when the temperature of the liquid in the tank has been demonstrated to be uniform, or any temperature stratification in the tank has been shown to be small and acceptable (see ISO 4268).

The mid-level temperature of the tank contents may not give an accurate average temperature.

Small tanks, tanks storing a uniform temperature material, or tanks with adequate mixing equipment have less temperature stratification. Therefore, a single-point temperature measurement may be sufficiently representative.

Heated tanks or tanks storing viscous materials will rarely have uniform temperatures.

Tanks with multiple sources of supply will rarely have a uniform temperature. Single-point temperature elements should not be considered in these circumstances.

NOTE It may be possible to determine the average temperature of a tank transfer quantity by using a single-point (spot) temperature element located on the inlet or outlet of a tank, using the ALG to calculate a volume-weighted average temperature of a parcel being loaded into or discharged out of the tank.

## 7 Description of ATT equipment

### 7.1 Introduction

Most above-ground bulk storage tanks are equipped with at least one local direct-reading thermometer mounted in a fixed thermowell. This local thermometer is not considered as part of the ATT and should not be used for fiscal/custody transfer temperature determination, unless it has been demonstrated that its readings are representative of the temperatures of the tank contents under typical operating conditions (see ISO 4268).

### 7.2 Electrical temperature elements

#### 7.2.1 Resistance temperature detectors

Temperature-measuring equipment commonly used for automatic temperature measurement operates on the basic principle that the electrical resistance of a metal (e.g. copper or platinum) varies with changes of temperature.

Copper or platinum electrical-resistance detectors (RTDs) are normally used for temperature measurement for fiscal/custody transfers because of their high accuracy and stability. The resistance of an RTD is measured by a Wheatstone bridge circuit or other suitable electronic package. The RTD may be a resistance wire wound on a supporting non-conductive core, a thin film type, or other type. The element should be properly encased. The electronic circuits should be intrinsically safe if required. The temperature element is usually contained within a thermowell. The length of the temperature-sensitive portion of a spot element should not exceed 100 mm.

### 7.2.2 Other temperature elements

Other types of temperature elements (thermocouples, thermistors, semi-conductors, fibre optics, etc.) are available. Unless calibrated and meeting the verification tolerance given in this part of ISO 4266, their accuracy is not considered suitable for fiscal/custody transfer services.

## 8 Installation of ATTs

### 8.1 General

The temperature elements of an ATT should be located as far as possible from heating coils and swing arms. They should be mounted in the tank in relation to the position of the inlet and outlet connections and tank mixers so that the effect of turbulence on the mounting of the element is minimized. They should, where possible, be sited on the shaded side of the tank and should be accessible from the gauger's platform.

### 8.2 Single-point (spot) temperature elements

Single-point (spot) temperature elements should be installed in positions which permit their *in-situ* verification. The following three methods of installation are in general use.

- a) The elements are installed in a metal thermowell through the tank shell, projecting at least 1 m into the tank to reduce heat transfer effects through the thermowell. They should be located at an elevation of at least 1 m above the tank-bottom surface.
- b) The elements are installed suspended from the tank roof in a suitable metallic or non-metallic tube/hose secured to the tank bottom or stabilized by anchor weights. The element should be located at least 900 mm from the tank shell and the low point should be at an elevation of approximately 1 m above the tank-bottom surface.
- c) The elements are installed by either attaching the temperature element to the flexible elbow of the swing suction line or by suspending the element on a pulley arrangement from the floating roof (see 8.3.5).

### 8.3 Averaging temperature elements

#### 8.3.1 General

The installation of the temperature elements for fixed temperature averaging equipment should conform to the same recommendations as those for single-point or spot temperature elements (i.e. the elements should be located at least 900 mm from the tank shell). Various configurations, given in 8.3.2 to 8.3.7, are in general use.

#### 8.3.2 Upper, middle and lower temperature elements

The upper temperature element is suspended about 1 m below the liquid surface. The mid-level temperature element is suspended at the mid-point of the liquid. This can be accomplished either by attaching the element to the flexible elbow of the swing suction line or by suspending the element on a pulley arrangement. The lower temperature element is installed about 1 m from the tank bottom. The resistances of the three elements are electrically combined, or their readings averaged, to give the average temperature.

**8.3.3 Multiple-point temperature elements**

Multiple-point temperature elements (see Table 1) are typically installed at equidistant intervals (at approximately 3 m). The lowest element which is used for average tank temperature calculation is usually located at approximately 1 m from the bottom of the tank. Where the tank is operated at a level lower than 1 m, an extra temperature element can be located at a level as low as practical but it should only be used in this condition.

NOTE The measurement by this extra temperature element (below 1 m) may be affected by ground temperature.

**Table 1 — Number of temperature elements for multiple-point ATTs**

Tank heights	Minimum number of elements
Less than 9 m	4
9 m to 15 m	5
More than 15 m	6

NOTE 1 If the liquid level is 3 m or less, a single mid-level temperature located at approximately half of the tank height may be considered to meet the minimum requirement.

NOTE 2 If the lowest temperature element is less than 1 m from the tank bottom, the measured temperature may be affected by ground temperature.

In fixed-roof tanks, the ATT elements may be installed in thermowells extending through the tank shell. In floating-roof or internal floating tanks, they may be installed in a special perforated temperature standpipe or similar device passing through a sleeve or bushing. All temperatures are generally measured and transmitted to a central temperature-readout device with computing ability integral to the ALG system. The temperature-readout device averages only the submerged elements. Alternatively, the device may transmit the individual temperature of the submerged elements to provide a vertical profile of temperature. A typical multiple-point temperature element installation is shown in Figure 1.

**8.3.4 Variable-length RTD temperature elements**

A number of RTDs of varying lengths, all of which extend within 900 mm of the bottom of the tank, are encased in a flexible sheath. Only the longest, fully submerged RTD is used to determine the average temperature of the liquid in the tank. The correct RTD is selected by either a switching device in the ALG, or by software in the ALG system's remote readout device (typically a computer). The multiple-element assembly can be installed in the tank in a closed thermowell which is filled with heat conductive oil and/or fitted with baffles, or directly immersed in the liquid and suspended from the tank roof or gauging platform. A typical installation of a variable-length ATT is shown in Figure 2.


**8.3.5 Mid-level temperature element**

A mid-level temperature element is a single temperature element suspended at the mid-point of the liquid. This can be accomplished either by attaching the element to the flexible elbow of the swing suction line or by suspending the element on a pulley arrangement from the floating roof.

It should be noted that the mid-level temperature may not be the average temperature of the tank. Calibration of a mid-level temperature-element-based ATT is the same as for a single-point temperature-element-based ATT.

**8.3.6 Moveable spot temperature element**

A spot temperature element attached to the displacer of a servo-operated ALG is driven through the liquid, stopping at appropriate points to determine the average tank temperature. Adequate time should be provided at each measurement location to ensure that thermal equilibrium is reached.

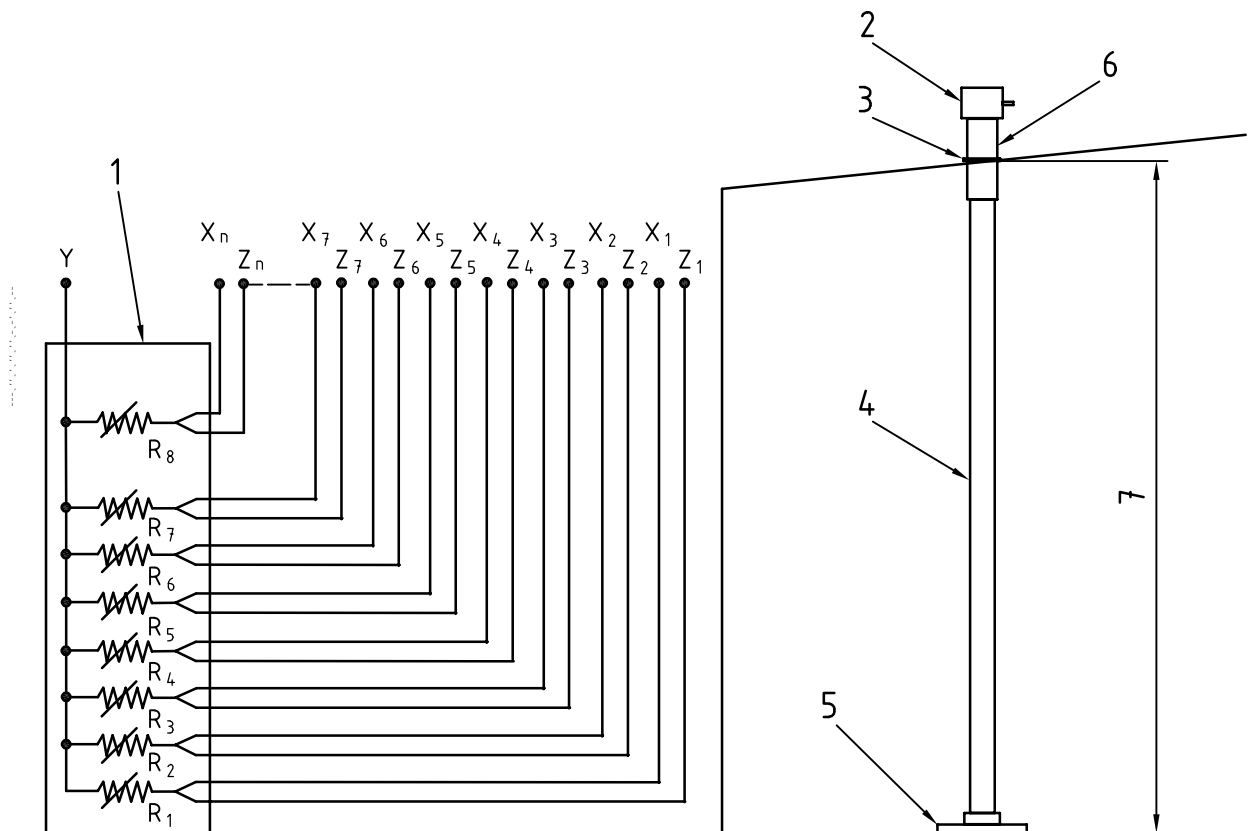

### Key

- 1 Sensor housing
- 2 Junction box or temperature transmitter
- 3 Compression fitting (with or without flange)
- 4 Flexible element housing
- 5 Anchor weight
- 6 Extension fitting
- 7 Mounting height

**Figure 1 — An example of a multiple-point temperature element installation**


### 8.3.7 Other methods

Other methods may be used to meet the requirements of average tank-temperature measurements given in this part of ISO 4266.

### 8.4 Thermowells for electronic temperature elements

Thermowells for fixed temperature elements should extend through the tank shell for at least 900 mm to reduce errors due to temperature differences between the liquid in the tank and ambient temperature. The thermowell material should be compatible with the liquid.

The thermowells should be located near the ladder or stairway to facilitate maintenance, and located as far as possible from heating coils and the tank inlet and outlet.

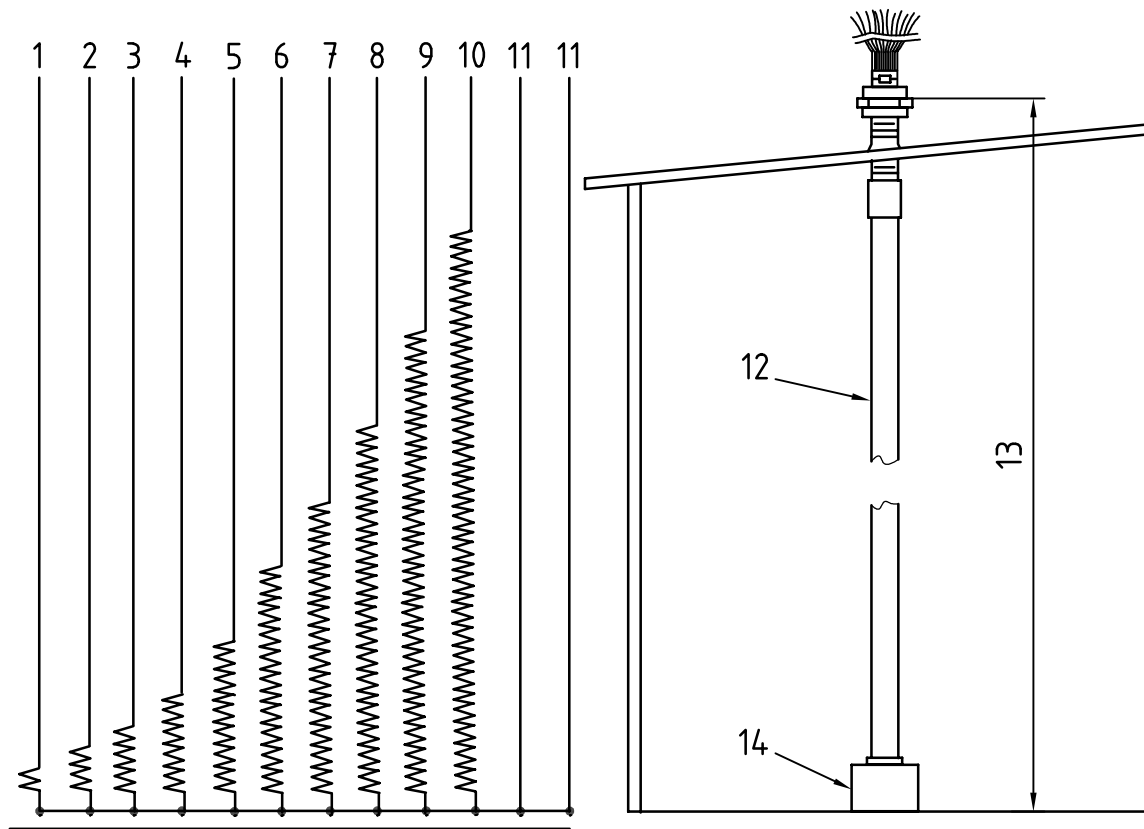

**Key**

- 1 Brown
- 2 Red
- 3 Orange
- 4 Yellow
- 5 Green
- 6 Blue
- 7 Violet
- 8 Grey
- 9 White
- 10 Pink
- 11 Black
- 12 Flexible hose
- 13 Mounting height
- 14 Anchor weight

**Figure 2 — An example of a variable-length RTD temperature element installation**

Thermowells extending through the tank shell cannot be used on floating-roof or pan-roof tanks above the minimum roof height. Various proprietary thermowells are available to support averaging temperature elements in floating-roof or pan-roof tanks.

Adequate clearance should be provided between the ATT sensor assembly and the thermowell for ease of installation. The clearance, however, should be kept as small as practical to reduce the time lag for heat transfer. To prevent measurement errors due to thermal convection circulation in the gap between the thermowell and the sensor assembly, the well should be filled with heat conductive fluid and should provide for thermal expansion of the filling fluid. In addition, baffles may be fitted in the thermowell.



## 9 Calibration and field verification of ATTs

### 9.1 Introduction

The ATT, including the temperature element(s), the transmitter and the readout, selected for fiscal/custody transfer temperature measurement, should meet the calibration tolerances given in this part of ISO 4266. The calibration reference for an ATT should be traceable to appropriate national standards.

NOTE 1 The precision electronic temperature elements and field transmitters used for fixed, automatic tank temperature thermometers are calibrated prior to installation. The transmitters normally do not provide calibration adjustments in the field.

NOTE 2 The purpose of the following procedures is to verify the adequacy of the calibration and the accuracy of the ATT (including the temperature elements, the transmitter, and the local/remote readout) as installed.

When an ATT is checked or calibrated by manual temperature measurement, the manual temperature measurement should be performed in accordance with ISO 4268. The uncertainty of the field calibration reference should not exceed  $\pm 0,1$  °C.

The ATT can be calibrated/verified either as a system (see 3.1) or by components.

### 9.2 Calibration of single-point, or mid-level temperature element ATTs for fiscal/custody transfer purposes

#### 9.2.1 Calibration prior to installation

Prior to installation, single-point or mid-level ATTs should be calibrated, under controlled conditions (i.e. in the factory or in a testing laboratory), in one of the two ways described below. The calibration reference for an ATT should be traceable to appropriate national standards.

- a) The ATT (including the temperature sensors, the temperature transmitter/converter, and the readout) as a whole may be calibrated with constant temperature baths, at three or more temperatures covering the operating range. The bath temperatures should be measured by reference thermometer(s) (see 5.3.2 for the required accuracy).
- b) Alternatively, the components of the ATT may be separately calibrated. Measure the resistance of the temperature element in the bath. Separately, use precision resistors, or a thermal calibrator (recently calibrated against a reference traceable to a national standards agency) to simulate temperature input to the temperature transmitter/converter and readout of the ATT (see 5.3.3 for the required accuracy).

#### 9.2.2 Initial field verification

##### 9.2.2.1 Verification by components

###### 9.2.2.1.1 Temperature element

Use a recently calibrated portable electronic thermometer to verify the measurement by the temperature element in accordance with ISO 4268. Lower the thermometer to the depth at which the element is located and move the thermometer up and down (over a range of approximately 300 mm) until the temperature measured is stable. The temperature measured by the RTD temperature sensor should agree with the temperature measured by the calibrated portable electronic thermometer within  $0,4$  °C.

###### 9.2.2.1.2 Temperature transmitter

The ATT, excluding the temperature element, can be verified by using a temperature calibrator (e.g. precision resistors or a thermal calibrator) to simulate temperature input at three or more temperatures covering the expected tank operating temperatures. The ATT readout should agree with the temperature equivalent of the resistors within  $0,25$  °C at each temperature.

### 9.2.2.2 Verification as a system

As an alternative to separate calibration checks of the temperature element and the transmitter, a portable electronic thermometer, calibrated immediately prior to verification, may be used to verify the entire ATT. Because it may not be possible to position the thermometer close to the temperature element, and because slight horizontal temperature stratification may exist, the measurement by the thermometer may not agree completely. Generally, for ambient storage tanks, if the sensing element of the portable electronic thermometer can be placed within 1 m of the fixed temperature element, calibration by a portable electronic thermometer should be acceptable.

The temperature read by the ATT system (temperature sensor, temperature transmitter/converter and readout) should agree with the temperature measured by a recently calibrated, portable electronic thermometer within 0,5 °C.

## 9.3 Calibration of upper, middle and lower or multiple-point ATTs for fiscal/custody transfer purposes

### 9.3.1 Calibration prior to installation

Each point (i.e. temperature-sensing element) of the ATT should be checked following the calibration procedure described in 9.2.1, for single-point or mid-level ATTs (see 5.3.4 for the required accuracy).

### 9.3.2 Initial field verification

#### 9.3.2.1 Verification by components

##### 9.3.2.1.1 Temperature element

Use a recently calibrated portable electronic thermometer to verify the measurement by the temperature element. Lower the thermometer to the depths at which the RTDs are located and move the thermometer up and down (over a range of approximately 300 mm) until the temperature is stable. Each temperature sensor (of a multiple-point ATT) should agree with the temperature measured by the calibrated portable electronic thermometer within 0,4 °C.

##### 9.3.2.1.2 Temperature transmitter

The ATT, excluding the temperature element, can be verified by using a temperature calibrator (e.g. precision resistors or a thermal calibrator) to simulate temperature input at three or more temperatures covering the expected tank operating temperatures. The ATT readout for each temperature element should agree with the temperature equivalent of the resistors within 0,25 °C at each temperature.

#### 9.3.2.2 Verification as a system

As an alternative to separate calibration checks of the temperature element and the transmitter, a portable electronic thermometer, calibrated immediately prior to the verification, may be used to verify the entire ATT. The tank should preferably be nearly full<sup>1)</sup>, with all temperature elements submerged. Take temperature readings evenly spaced, or every 500 mm to 600 mm, covering the entire liquid level. At each measurement location, move the thermometer up and down (over a range of approximately 300 mm) until the temperature is stable. The manual average temperature read by the portable thermometer is the average of the readings. The average temperature read by the ATT is the average temperature of all temperature elements submerged in the liquid. The average temperature read by the ATT system should agree with the average of a minimum of five equi-spaced spot temperatures read by the calibrated portable electronic thermometer within 0,5 °C.

For small tanks (i.e. the tank height is 3 m or lower), three temperature readings (at upper, middle and lower levels) may be used to calculate the average temperature.

1) An "upper-middle-lower" ATT, which automatically adjusts according to the liquid level, does not require the tank to be full.

NOTE A multiple-point automatic tank temperature system may provide both individual temperatures and average tank temperature.

## 9.4 Calibration of variable-length ATTs for fiscal/custody transfer purposes

### 9.4.1 Calibration prior to installation

The average temperature read by each sensing element (consisting of multiple RTDs) of the ATT should be checked following the calibration procedure described in 9.2.1, for single-point or mid-level ATTs (see 5.3.5 for the required accuracy).

### 9.4.2 Initial field verification

The procedure is used to verify variable-length averaging ATTs which automatically select the longest, fully submerged element to determine the average tank temperature. A portable electronic thermometer, calibrated immediately prior to verification, should be used to verify the entire ATT.

The tank should preferably be nearly full, with all temperature elements submerged. Take temperature readings at evenly spaced intervals of approximately every 500 mm throughout the tank contents. At each measurement location, move the thermometer up and down (over a range of approximately 300 mm) until the temperature is stable. Manually select each temperature element (either by a software or hardware switch). Compare the average temperature calculated from the appropriate portable electronic thermometer readings against the average temperature measured by the temperature element selected and displayed by the ATT readout.

The average temperature read by the ATT system should agree with the average of the appropriate temperatures read by the calibrated portable electronic thermometer within 0,5 °C.

## 9.5 Subsequent verification of ATTs

### 9.5.1 General

A regular verification programme should be established for ATTs used in fiscal/custody transfer. All essential components of the ATT installation should be checked as recommended by the manufacturer's instructions. Each ATT should be inspected and its calibration verified using the procedure described in 9.3.2 (initial field verification).

### 9.5.2 Frequency of subsequent verification

ATTs used for fiscal/custody transfer measurement should be verified on a regular basis. The ATT should initially be inspected and its calibration verified at least once per quarter. If operating experience confirms stable performance within the verification tolerance, the verification schedule can be extended to once per year.

NOTE Some regulatory authorities may require that the performance of ATTs in fiscal/custody transfer is verified at more frequent intervals.

### 9.5.3 Record keeping

Full records should be kept of the initial calibration and the periodic verifications of each ATT used for fiscal/custody transfer

## 10 Data communication and receiving

This clause gives recommendations for the specification of the communication between temperature transmitter(s) and receiver(s) or vice versa.

## ISO 4266-4:2002(E)

The remote readout of an acceptable ATT may be used for fiscal/custody transfer providing that the whole system, including the remote readout, complies with the required calibration tolerances given in this part of ISO 4266.

NOTE Modern tank gauging equipment in common use provides facilities to display and/or log both levels and temperatures. This readout equipment can determine average temperatures either by selecting the appropriate longest, fully submerged, variable length RTD or by averaging the appropriate submerged spot elements.

This readout equipment can usually be programmed to alarm at high or low temperatures. It can also look up the tank-capacity table, apply the appropriate coefficients of expansion and calculate the standard volumes.

The ATT should be designed and installed such that data transmission and receiving should

- not compromise the accuracy of the measurement, i.e. the difference between the temperatures displayed by the remote receiving unit and displayed (or measured) by the temperature transmitter at the tank should not exceed 0,1 °C,
- not compromise the resolution of the measurement output signal,
- provide proper security and protection of the measured data to ensure its integrity,
- provide adequate speed to meet the update time required for the receiving unit, and
- be electromagnetically immune.



---

---

**ICS 75.180.30**

Price based on 14 pages

© ISO 2002 – All rights reserved