

BS ISO 10567:2007



BSI Standards Publication

# Earth-moving machinery — Hydraulic excavators — Lift capacity

**bsi.**

...making excellence a habit.™

**National foreword**

This British Standard is the UK implementation of ISO 10567:2007. It supersedes BS 6912-9:1992 which is withdrawn.

The UK participation in its preparation was entrusted to Technical Committee B/513/1, Earth moving machinery (International).

A list of organizations represented on this committee can be obtained on request to its secretary.

This publication does not purport to include all the necessary provisions of a contract. Users are responsible for its correct application.

© BSI 2011

ISBN 978 0 580 54268 8

ICS 53.100

**Compliance with a British Standard cannot confer immunity from legal obligations.**

This British Standard was published under the authority of the Standards Policy and Strategy Committee on 31 August 2011.

**Amendments issued since publication**

Date	Text affected
------	---------------

---

INTERNATIONAL  
STANDARD

BS ISO 10567:2007

**ISO**  
**10567**

Second edition  
2007-10-01

---

---

**Earth-moving machinery — Hydraulic  
excavators — Lift capacity**

*Engins de terrassement — Pelles hydrauliques — Capacité de levage*



Reference number  
ISO 10567:2007(E)

© ISO 2007

**PDF disclaimer**

This PDF file may contain embedded typefaces. In accordance with Adobe's licensing policy, this file may be printed or viewed but shall not be edited unless the typefaces which are embedded are licensed to and installed on the computer performing the editing. In downloading this file, parties accept therein the responsibility of not infringing Adobe's licensing policy. The ISO Central Secretariat accepts no liability in this area.

Adobe is a trademark of Adobe Systems Incorporated.

Details of the software products used to create this PDF file can be found in the General Info relative to the file; the PDF-creation parameters were optimized for printing. Every care has been taken to ensure that the file is suitable for use by ISO member bodies. In the unlikely event that a problem relating to it is found, please inform the Central Secretariat at the address given below.



**COPYRIGHT PROTECTED DOCUMENT**

© ISO 2007

All rights reserved. Unless otherwise specified, no part of this publication may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without permission in writing from either ISO at the address below or ISO's member body in the country of the requester.

ISO copyright office  
Case postale 56 • CH-1211 Geneva 20  
Tel. + 41 22 749 01 11  
Fax + 41 22 749 09 47  
E-mail [copyright@iso.org](mailto:copyright@iso.org)  
Web [www.iso.org](http://www.iso.org)

## Contents

Page

<b>1</b>	<b>Scope</b> .....	<b>1</b>
<b>2</b>	<b>Normative references</b> .....	<b>1</b>
<b>3</b>	<b>Terms and definitions</b> .....	<b>1</b>
<b>4</b>	<b>Calculations</b> .....	<b>4</b>
<b>5</b>	<b>Verification testing</b> .....	<b>8</b>
<b>6</b>	<b>Validation of calculated values</b> .....	<b>13</b>
<b>7</b>	<b>Rated lift capacity chart</b> .....	<b>13</b>
	<b>Annex A</b> (informative) <b>Examples of typical rated lift capacity charts</b> .....	<b>14</b>
	<b>Bibliography</b> .....	<b>16</b>

## Foreword

ISO (the International Organization for Standardization) is a worldwide federation of national standards bodies (ISO member bodies). The work of preparing International Standards is normally carried out through ISO technical committees. Each member body interested in a subject for which a technical committee has been established has the right to be represented on that committee. International organizations, governmental and non-governmental, in liaison with ISO, also take part in the work. ISO collaborates closely with the International Electrotechnical Commission (IEC) on all matters of electrotechnical standardization.

International Standards are drafted in accordance with the rules given in the ISO/IEC Directives, Part 2.

The main task of technical committees is to prepare International Standards. Draft International Standards adopted by the technical committees are circulated to the member bodies for voting. Publication as an International Standard requires approval by at least 75 % of the member bodies casting a vote.

Attention is drawn to the possibility that some of the elements of this document may be the subject of patent rights. ISO shall not be held responsible for identifying any or all such patent rights.

ISO 10567 was prepared by Technical Committee ISO/TC 127, *Earth-moving machinery*, Subcommittee SC 1, *Test methods relating to machine performance*.

This second edition cancels and replaces the first edition (ISO 10567:1992), which has been technically revised.

# Earth-moving machinery — Hydraulic excavators — Lift capacity

## 1 Scope

This International Standard provides a uniform method for calculating the lift capacity of hydraulic excavators and specifies a procedure for verifying the calculations. It is applicable to the limits of both hydraulic lift capacity and machine-tipping, and establishes the rated lift capacity for hydraulic excavators as defined in ISO 7135.

## 2 Normative references

The following referenced documents are indispensable for the application of this document. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments) applies.

ISO 7135, *Earth-moving machinery — Hydraulic excavators — Terminology and commercial specifications*

ISO 9248, *Earth-moving machinery — Units for dimensions, performance and capacities, and their measurement accuracies*

## 3 Terms and definitions

For the purposes of this document, the following terms and definitions apply.

### 3.1

#### **load**

external mass, including the mass of the attached equipment and attachment if applicable, applied at the lift point

### 3.2

#### **lift point**

##### **LP**

⟨condition 1⟩ location on the bucket or the attachment bracket, as specified by the manufacturer, to which a load may be attached

See Figure 1 a).

NOTE For attaching the bucket or attachment bracket load, the bucket cylinder need not be fully extended.

### 3.3

#### **lift point**

##### **LP**

⟨condition 2⟩ centreline of the bucket pivot mounting pin on the arm

See Figure 1 b).


### 3.4

#### **lift-point height**


##### **LPH**

vertical distance from the ground reference plane (GRP) to the lift point

See Figure 1.

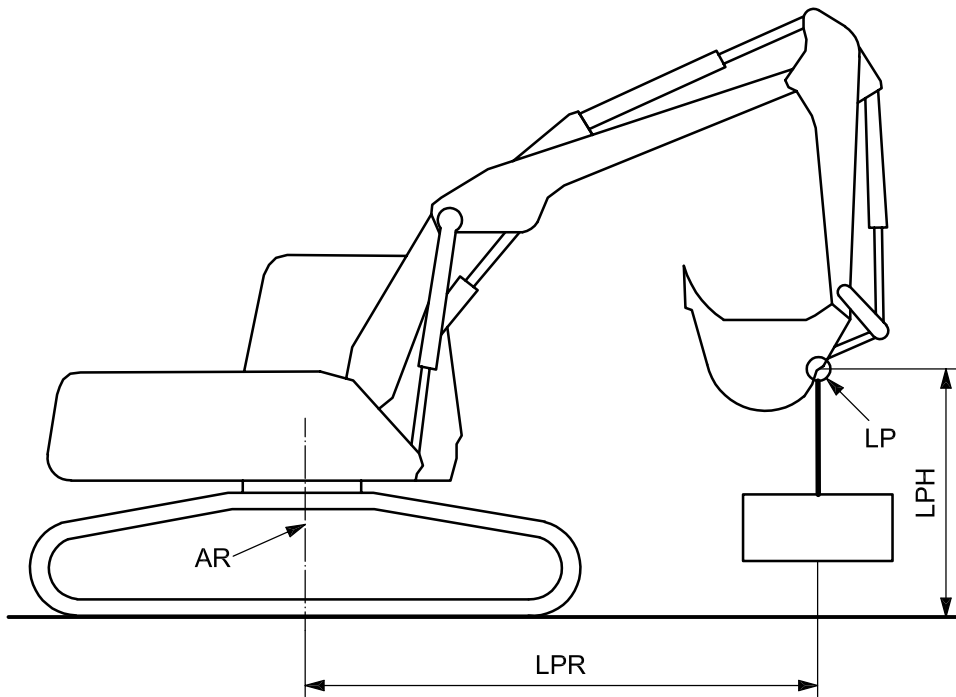

a) Condition 1

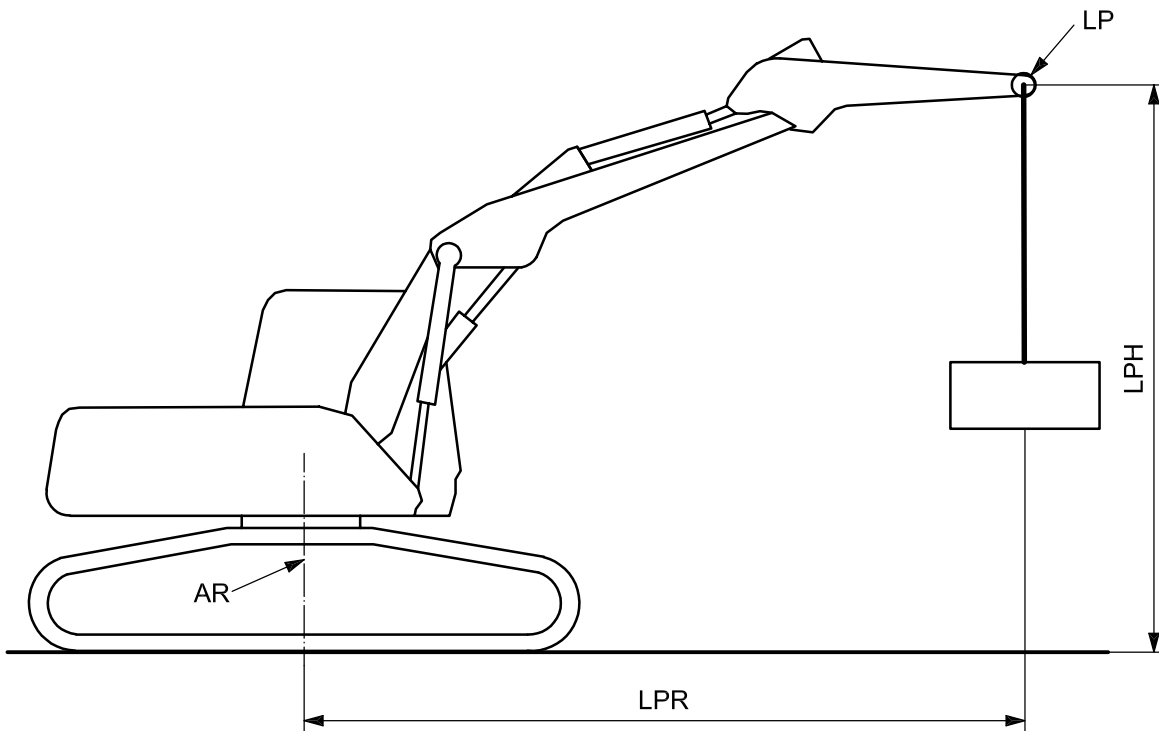

b) Condition 2

Figure 1 — Lift point

- Key**
- AR axis of rotation
  - LP lift point
  - LPH lift-point height
  - LPR lift-point radius



### 3.5

#### **lift-point radius**

##### **LPR**

horizontal distance from the axis of rotation to the vertical hoist line or tackle

See Figure 1.

### 3.6

#### **balance point**

moment acting to overturn the machine with a specific load and lift-point radius, which is equal to the moment of the machine available to resist overturning

### 3.7

#### **tipping load**

static load at the balance point

### 3.8

#### **rated tipping load**

75 % of the tipping load

### 3.9

#### **working circuit pressure**

nominal hydraulic pressure applied to the specific circuit by the pump(s)

### 3.10

#### **holding circuit pressure**

maximum static hydraulic pressure in a specific circuit, limited by a relief valve at a flow no greater than 10 % of rated circuit flow

### 3.11

#### **hydraulic lift capacity**

load that can be lifted from the lift point by the boom, arm or bucket cylinders with the excavator physically restrained from tipping

#### 3.11.1

##### **boom cylinder hydraulic lift capacity**

load that can be lifted by applying working circuit pressure to the boom cylinder(s) without exceeding holding circuit pressure in any other circuit

#### 3.11.2

##### **arm cylinder hydraulic lift capacity**

load that can be lifted by applying working circuit pressure to the arm cylinder(s) without exceeding the holding circuit pressure in any other circuit

#### 3.11.3

##### **bucket cylinder hydraulic lift capacity**

load that can be lifted by applying working circuit pressure to bucket cylinder without exceeding the holding circuit pressure in any other circuit

### 3.12

#### **rated hydraulic lift capacity**

87 % of the smaller of boom or arm hydraulic lift capacity at specific lift-point positions

### 3.13

#### **rated lift capacity**

smaller of either the rated tipping load or the rated hydraulic lift capacity

### 3.14

#### **maximum radius**

maximum lift-point radius at a given lift-point height

### 3.15

#### **maximum radius rated lift capacity**

rated lift capacity at the maximum radius

### 3.16

#### **adjustable intermediate boom**

hydraulically adjustable intermediate boom consisting of stub, intermediate boom and hydraulic cylinder(s)

### 3.17

#### **minimum radius**

minimum lift-point radius at a given lift-point height

### 3.18

#### **minimum radius lift capacity**

rated lift capacity at the minimum radius determined in the same manner as the rated lift capacity

## 4 Calculations

### 4.1 Tipping load calculations

#### 4.1.1 General

Tipping load calculations shall be made at each grid line intersection of a 0,5 m, 1 m or 2 m vertically and horizontally spaced grid placed over the excavator's working range. The origin of the grid shall be at the intersection of the ground reference plane (GRP) and the axis of rotation. The tipping load calculations shall be made to determine the load that can be lifted with the machine at its balance point (3.6). Tipping load calculations shall be made over the side and over the end of the excavator undercarriage. When the undercarriage is not symmetrical about the axis of rotation from front to rear, the tipping load calculations shall be made in the least favourable position. Maximum and minimum radii lift capacity positions may be calculated for each horizontal grid line at the excavator manufacturer's discretion.

#### 4.1.2 Machine configuration for calculations

**4.1.2.1** The tipping loads shall be calculated with the machine on a firm, level supporting surface.

**4.1.2.2** Tipping load calculations are not to be published for equipment positions in which a vertical line projected downward from the lift point would pass through the bucket.

**4.1.2.3** The operating mass shall consist of the base machine and equipment, with empty attachment or attachment bracket if the lift point as defined in 3.2 is specified by the manufacturer, and with the operator (75 kg), full fuel tank and with all fluid systems at the levels specified by the manufacturer.

**4.1.2.4** Tipping loads for machines equipped with an adjustable intermediate boom shall be calculated with the intermediate boom positioned at maximum length. See Figure 1.


**4.1.2.5** If the equipment has additional adjustable positions, calculations shall be made in the most unfavourable position.

**4.1.2.6** For tipping load calculations when a bucket is installed, the bucket attitude shall have a vertical line projected from the lift point, tangent, or as near tangent as the bucket linkage allows, to the back side of the bucket. When the bucket linkage does not allow the load line to be tangent, the line may

- a) hang free of the back of the bucket, regardless of the bucket cylinder extension, with the load line adequately retained to the lift point (see Figure 1 a), or
- b) wrap smoothly around the back of the bucket, regardless of the bucket cylinder extension, without allowing the load line to come in contact with any sharp projection on the back of the bucket or edge of the bucket lip.

#### 4.1.3 Calculations for balance point for end tipping line

**4.1.3.1** The tipping line used for balance point calculations over the front/rear of machines with track-type undercarriage shall be a line connecting the centreline of support idlers or sprockets (see Figure 2). The equipment shall be positioned over the front/rear in the least stable position for these calculations.

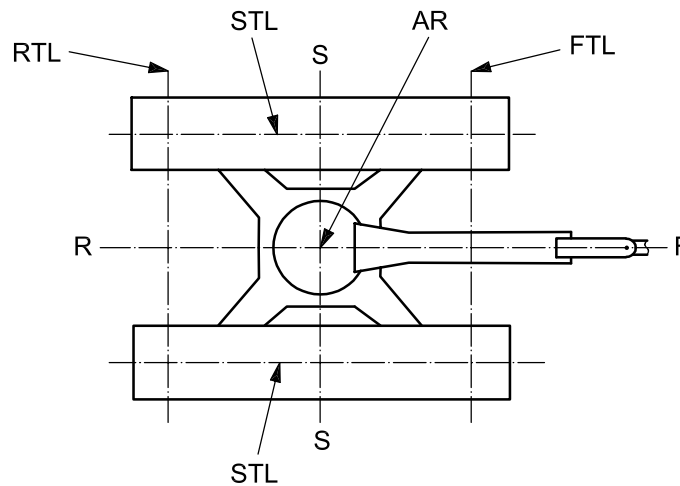

#### Key

F	front
R	rear
S	side
AR	axis of rotation
FTL	front tipping line
RTL	rear tipping line
STL	side tipping line

**Figure 2 — Tipping conditions for track-type undercarriage**

**4.1.3.2** The tipping line to be used for balance point calculations over the front/rear of machines with a rubber-tyred undercarriage shall be the axle centreline, the bogie axle centreline, or a line connecting the outrigger pads as shown in Figure 3.


**4.1.3.3** The tipping line for pivoted outrigger pads shall be a line at the GRP, connecting the point on the pads directly below the centreline of the pivot. For rigid outrigger pads, the tipping line shall be a line connecting the centroid of the contact area between the pads and the GRP. See Figure 3 a).

**4.1.3.4** A blade, properly attached to the machine and capable of supporting the machine as an outrigger, may be considered an outrigger. The location of the blade tipping line shall be a line at the GRP where the blade contacts that plane. See Figure 3 b).

**4.1.3.5** For machines equipped with outriggers and/or blade, calculations shall be made both without the outriggers and/or blade applied and with the outriggers and/or blade applied in their most favourable position.

#### 4.1.4 Calculations for balance point for side tipping line

**4.1.4.1** The tipping line used for side-tipping balance point calculations on machines with track-type undercarriages shall be defined by the pivot points between support rollers and track elements (such as links or guides) as shown in Figures 2 and 4.

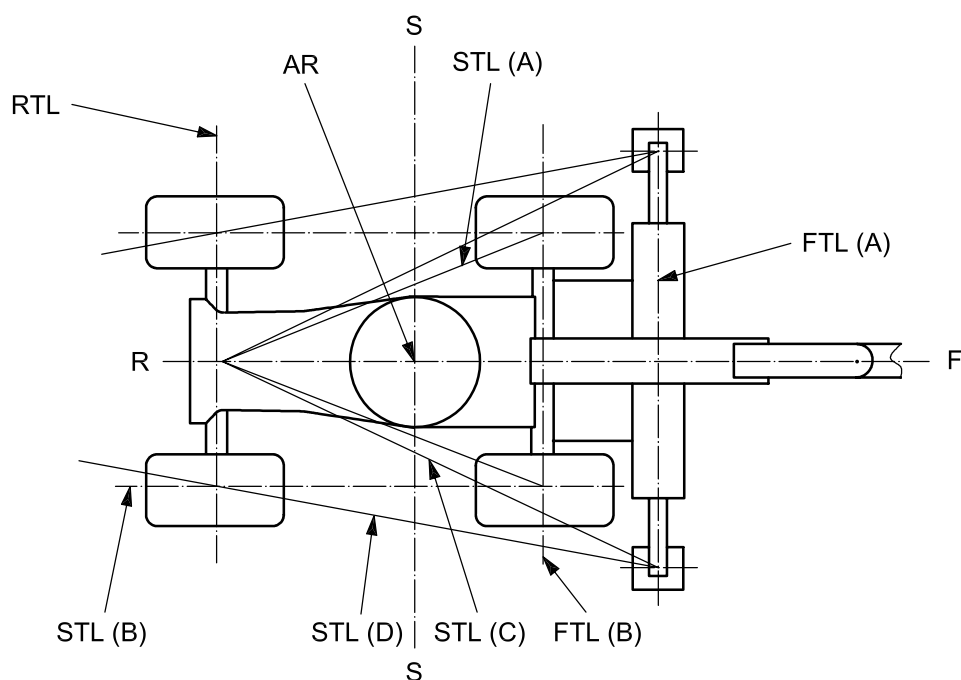


**Key**

- F front
- R rear
- S side
- AR axis of rotation
- FTL (A) front tipping line with outriggers
- FTL (B) front tipping line at axle centreline
- RTL rear tipping line at axle centreline
- STL (A) side tipping line with oscillating axle
- STL (B) side tipping line without blade, without outriggers and with non-oscillating axle
- STL (C) side tipping line with outriggers or blade with oscillating axle
- STL (D) side tipping line with outriggers and non-oscillating axle

**a) Undercarriage with outriggers**

**Figure 3 — Tipping conditions for rubber-tyred undercarriage**

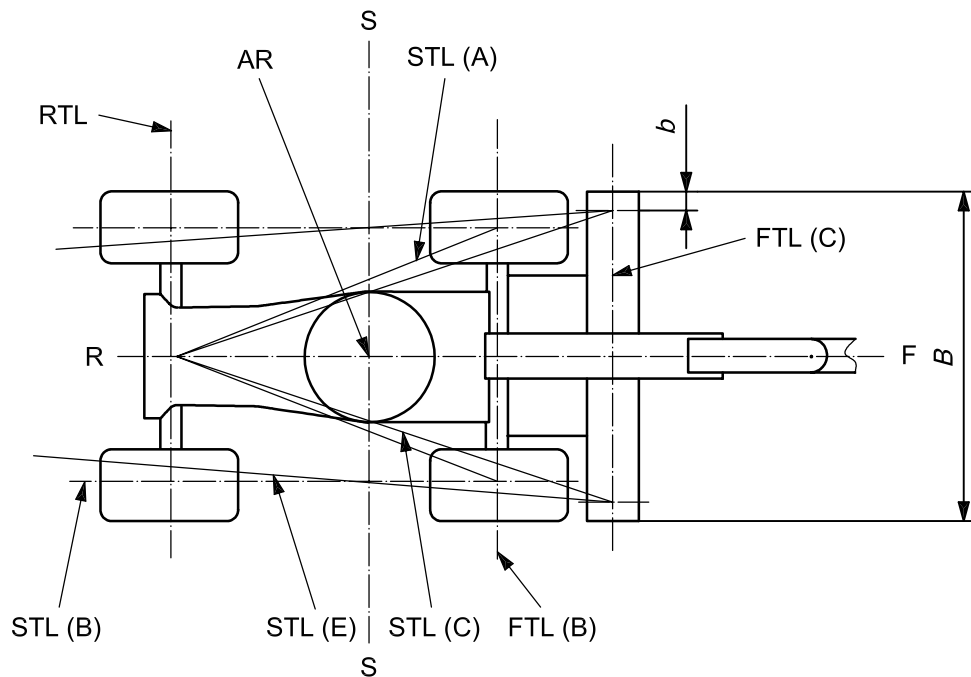

**Key**

F	front
R	rear
S	side
AR	axis of rotation
FTL (B)	front tipping line at axle centreline
FTL (C)	front tipping line with blade
RTL	rear tipping line at axle centreline
STL (A)	side tipping line with oscillating axle
STL (B)	side tipping line without blade, without outriggers and with non-oscillating axle
STL (C)	side tipping line with outriggers or blade with oscillating axle
STL (E)	side tipping line with blade and non-oscillating axle
<i>B</i>	overall length of blade in contact with GRP
<i>b</i>	$= 0,025 \times B$

**b) Undercarriage with blade**

**Figure 3 — Tipping conditions for rubber-tyred undercarriage (continued)**


**4.1.4.2** The tipping line to be used for calculations for the balance point of machines with a rubber-tyred undercarriage with blocked or non-oscillating axles shall be a line connecting the centre of contact of the tyres (midpoint between dual tyres) on the same side of the machine, at the GRP, see Figures 3 and 4.

**4.1.4.3** The tipping line for an excavator with an oscillating axle shall be a line through the axle pivot point and one other rigid support point (see Figure 3).

**4.1.4.4** If ratings are based upon a blocked or non-oscillating axle, this condition shall be clearly defined on the load rating charts and diagrams.

**4.1.4.5** When outriggers are used, the position of the tipping line shall be as specified in 4.1.3.2 and 4.1.3.3.

**4.1.4.6** When the blade is used, the side tipping line shall be as specified in 4.1.3.4.

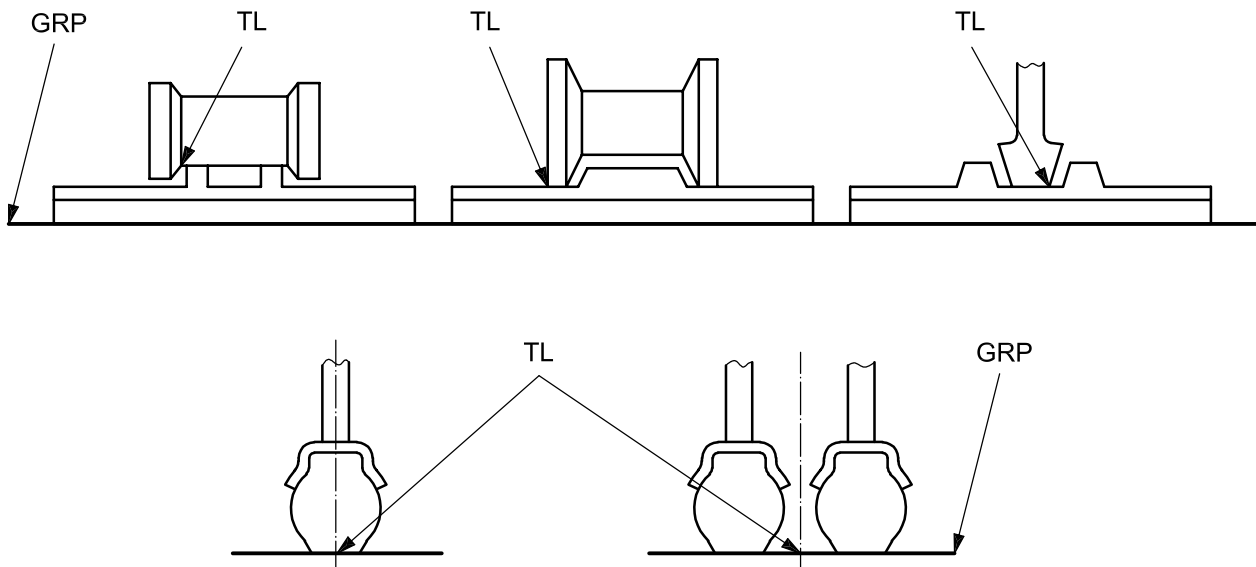

**Key**  
 GRP ground reference plane  
 TL tipping line (located on side of machine nearest load line)

**Figure 4 — Tipping lines**

## 4.2 Hydraulic lift capacity calculations

Hydraulic lift capacity calculations shall be made at each grid line intersection of a 0,5 m, 1 m or 2 m vertically and horizontally spaced grid placed over the excavator's working range. The origin of the grid shall be at the intersection of the GRP and the axis of rotation. The hydraulic lift capacity calculations shall be made to determine the load that can be lifted with the force generated by the boom, arm and bucket cylinders, as defined in 3.11.1, 3.11.2 and 3.11.3. Maximum and minimum radii lift capacity positions may be calculated for each horizontal grid line at the excavator manufacturer's discretion.

## 5 Verification testing


### 5.1 Test site

#### 5.1.1 Dead-weight test site (immovable weight)

A dead-weight test site shall consist of a firm and level horizontal surface arranged so that a load cell can be connected between the lift point and the dead weight. The dead weight may be either a horizontal rail with a movable attachment device or a fixed-point dead weight with the excavator moving to obtain the various lift points (see Figures 5 and 6).

#### 5.1.2 Live-weight test site (movable weight)


A live-weight test site shall consist of a firm and level horizontal surface arranged so that a weight attached to the lift point can be moved without obstructing the limit of the excavator's tipping load or hydraulic capacity. See Figure 7 for a typical test arrangement. The live weight should be kept within 0,5 m of the surface from which it was raised, in order to minimize the possibility of the machine overturning.

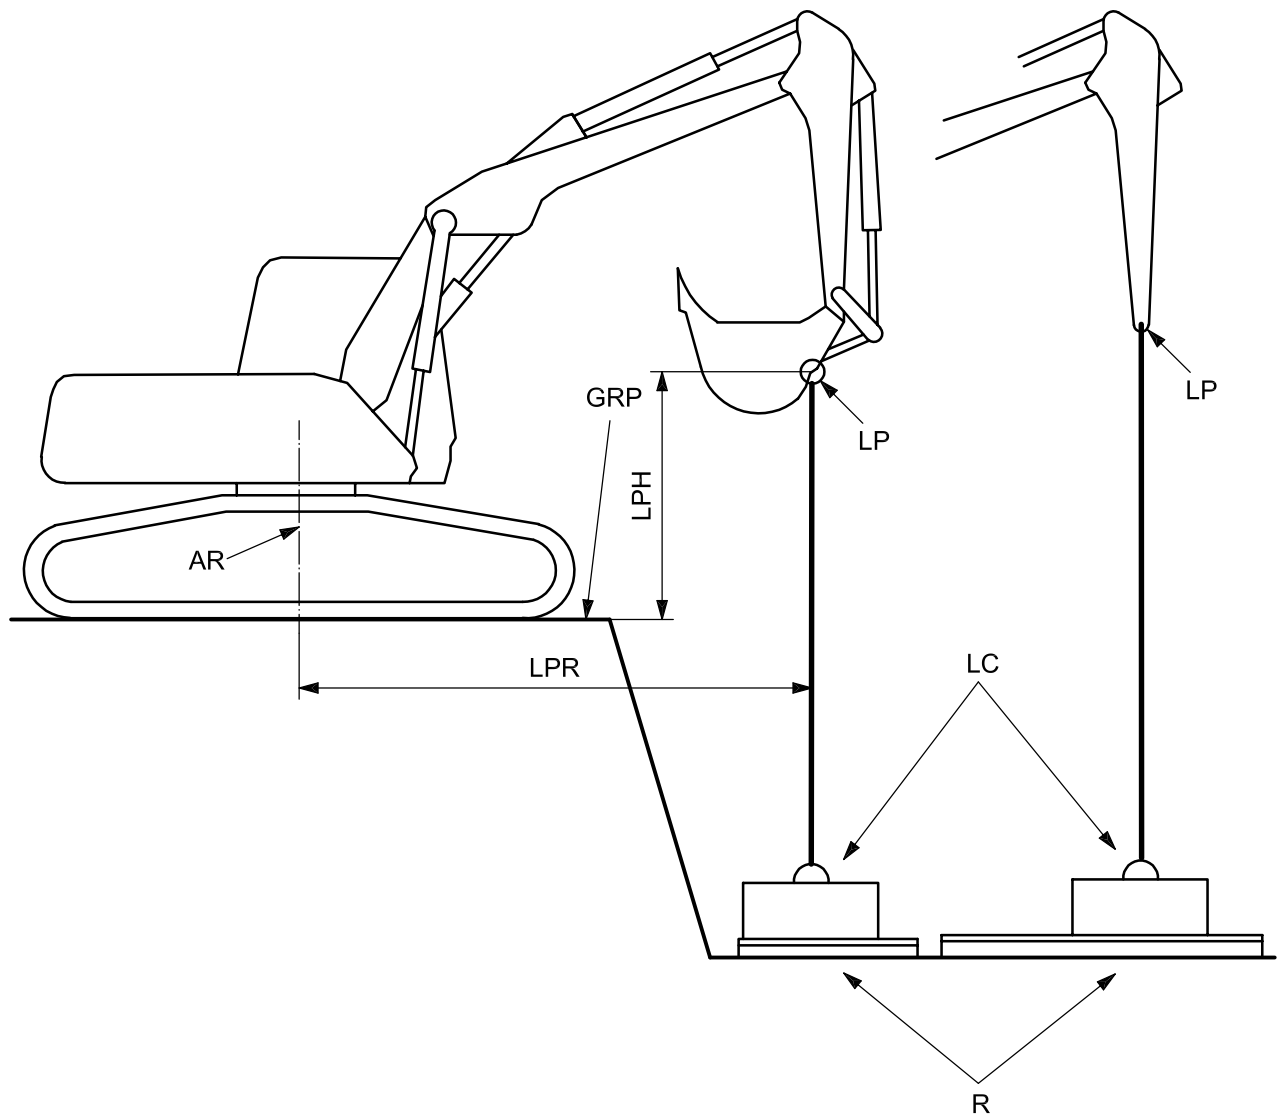

**Key**

- AR axis of rotation
- GRP ground reference plane
- LC load cell
- LP lift point
- LPH lift-point height
- LPR lift-point radius
- R rails


**Figure 5 — Self-aligning dead weight**

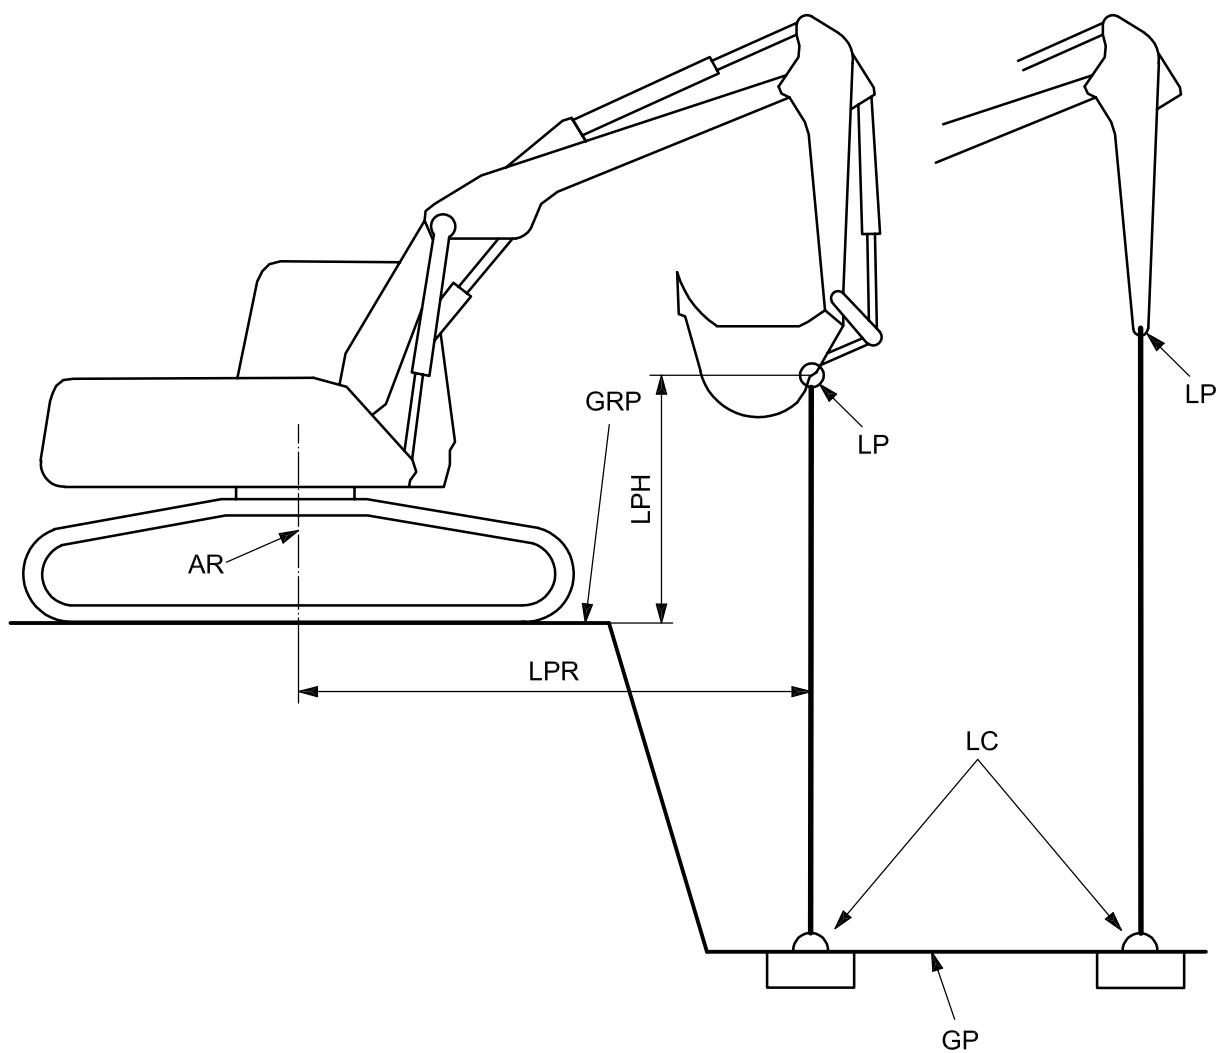

- Key**
- AR axis of rotation
  - GP ground plane
  - GRP ground reference plane
  - LC load cell
  - LP lift point
  - LPH lift-point height
  - LPR lift-point radius

Figure 6 — Fixed dead weight



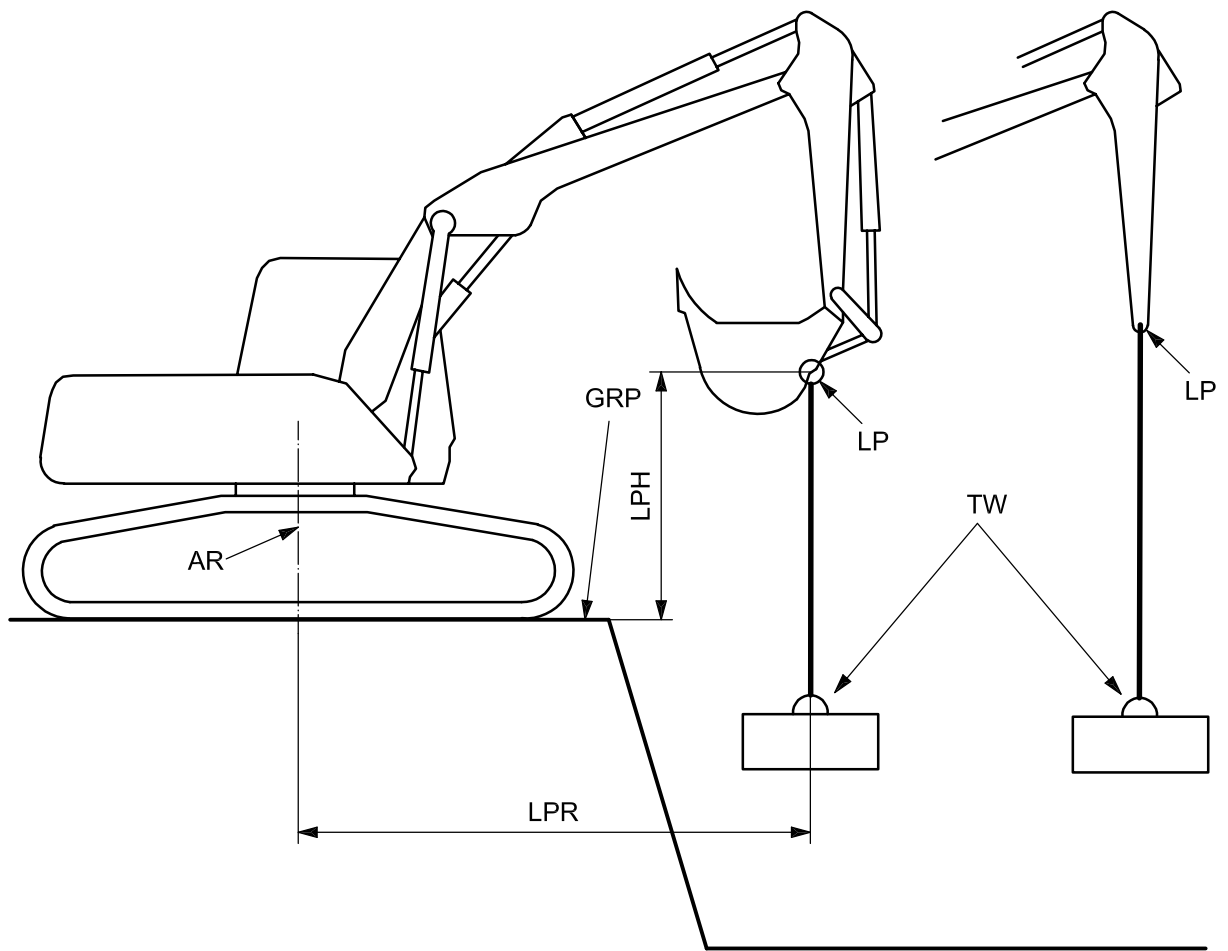

**Key**

- AR axis of rotation
- GRP ground reference plane
- LP lift point
- LPH lift-point height
- LPR lift-point radius
- TW test weight

**Figure 7 — Live weight**

## 5.2 Test equipment

Instrumentation accuracy shall be in accordance with ISO 9248.

**5.2.1 Load cell**, of sufficient capacity (if a dead-weight test site is used).

**5.2.2 Weights of known mass** (if a live-weight test site is used).

**5.2.3 Means of measuring the lift-point position** relative to the axis of rotation of the excavator.

**5.2.4 Means of measuring perpendicularity** between the load line and the GRP when using the dead-weight test site.

**5.2.5 Means of monitoring pressure** in all hydraulic circuits that will be under pressure during the actual lift capacity verification tests.

## 5.3 Test conditions and procedure

**5.3.1** The excavator shall be thoroughly cleaned and in normal working condition with fuel tanks filled to capacity and all other fluids at their prescribed levels and at normal operating temperature.

**5.3.2** The excavator shall be fitted with hoe equipment and a counterweight as specified by the manufacturer for the calculated lift capacity chart being verified.

**5.3.3** Tyres on rubber-tyred undercarriage machines shall be inflated to the manufacturer's recommended values.

**5.3.4** Track tension on machines with a track-type undercarriage shall be adjusted to the manufacturer's recommended values.

**5.3.5** The hydraulic pressure shall be checked, including the working- and holding-circuit pressures, to ensure that the system is set at the manufacturer's recommended nominal published value.

**5.3.6** A means shall be provided for preventing the excavator from overturning during the test procedure.

**5.3.7** Carry out tipping load measurements at specific lift points to determine the force that achieves the balance point.

Tests for machines with outriggers and/or blade shall be conducted both without the outriggers and/or blade applied and with the outriggers and/or blade applied in their most favourable position.

**5.3.8** Carry out hydraulic lift capacity measurements at specific lift points to verify hydraulic lift capacity calculations — without exceeding the working circuit pressure in any cylinder or the holding circuit pressure in any other circuit.

**5.3.9** The number of verifying points obtained shall include at least the following:

- a) tipping over the end and the side — position the equipment over the end and the side to obtain the tipping load;
- b) hydraulic limited lift capacity above and below the GRP.

## 5.4 Recording test results

Measured lift forces, lift-point heights and lift-point radii for tipping loads and hydraulic lift capacities shall be recorded.

## 6 Validation of calculated values

The measured values should be 95 % or more of the calculated values. If not, the lift capacity chart shall be adjusted, based on the correction factor determined by the required values.

## 7 Rated lift capacity chart

**7.1** Two suggested formats for the rated lift capacity chart are presented in Tables A.1 and A.2. Other regional formats that meet the requirements of 7.2 to 7.6 are also acceptable.

**7.2** The rated lift capacity chart shall show the lift capacity at specific lift-point radii and at lift-point height. If the values are limited by hydraulic lift capacity, this shall be noted in the chart.

**7.3** Rated lift capacity values shall be tabulated for intersections of the lift point with a 0,5 m, 1 m, 1,5 m or 2 m vertically and horizontally spaced grid placed over the excavator's working range. The maximum and minimum lift radii capacities may, at the manufacturer's discretion, also be included. The origin of the grid shall be at the intersection of the GRP and the axis of rotation.

**7.4** The rated lift capacity chart shall be mounted in a location where it is protected from damage or premature deterioration and shall be legible from the control position.

**7.5** Because of the large number of attachment options and machine variations available, the manufacturer shall publish revised lift capacity charts if these variations would decrease the machine rated lift capacity by more than 5 %.

**7.6** For machines equipped with hydraulic circuits capable of providing momentary increases in lift capacity, such as *power boost* or *heavy lift*, the manufacturer shall state on the lift capacity chart that the capacities are with or without this feature.

## Annex A (informative)

### Examples of typical rated lift capacity charts

See Tables A.1 and A.2.

**Table A.1**

Manufacturer's hydraulic excavator lift capacity chart					
[Manufacturer's model]					
Do not attempt to lift or hold any load that is greater than these rated values at their specified lift-point radius and height. The lift point is located at the bucket lifting eye.					
LPH	Rated lift capacity — Over end				
	kg				
m	LPR				Lift capacity at maximum radius
	4,5 m	6,0 m	7,5 m	9,0 m	
6,0			6 000 *		
4,5		7 500 *	6 900 *	3 400 *	
3,0	10 300 *	8 000 *	7 300	4 600 *	3 000 * at 10,4 m
1,5	12 800 *	9 400 *	7 000	5 400	3 100 at 10,2 m
Grade	14 300 *	10 000	6 900	5 300	
-1,5	14 700 *	9 700	6 800		
-3,0		9 600			
Capacities marked with an asterisk (*) are limited by hydraulic capacities. See Note 2.					
LPH	Rated lift capacity — Over side				
	kg				
m	LPR				Lift capacity at maximum radius
	4,5 m	6,0 m	7,5 m	9,0 m	
6,0			5 000		
4,5		7 000	4 800	3 400	
3,0	10 300 *	6 900	4 600	3 500	2 800 at 10,4 m
1,5	10 000	6 500	4 400	3 400	2 600 at 10,2 m
Grade	9 400	6 100	4 200	3 300	
-1,5	9 200	5 900	4 200		
-3,0	9 200	5 900			
Capacities marked with an asterisk (*) are limited by hydraulic capacities. See Note 2.					
The mass of slings and any auxiliary lifting devices shall be deducted from the rated load to determine the net load that may be lifted. Lift capacities are based on the machine standing on a firm, uniform supporting surface. The user shall make allowances for job conditions such as soft or uneven ground. The operator should be fully acquainted with the operator's manual and the operating safety manual furnished by the manufacturer before operating the machine.					
NOTE 1 Lift capacities shown are without the power boost feature engaged.					
NOTE 2 Lift capacities shown do not exceed 75 % of minimum tipping loads or 87 % of hydraulic capacities.					
NOTE 3 The least stable position is over the side.					
NOTE 4 Lift capacities apply only to the machine as originally manufactured and normally equipped by the manufacturer.					
NOTE 5 The total mass of the machine is 28 000 kg. Included in this mass are 800 mm triple grouser shoes, 6,3 m boom, 3,6 m arm, 5 500 kg counterweight, bucket weighing 800 kg, all operating fluids and a 75 kg operator.					
NOTE 6 Lift capacities are in compliance with ISO 10567:2007.					

Table A.2

Manufacturer's hydraulic excavator lift capacity chart													
[Manufacturer's model]													
Do not attempt to lift or hold any load that is greater than these rated values at their specified lift-point radius and height. The lift point is located at the bucket lifting eye													
LPH	Rated lift capacity												
	kg												
	LPR												
m	3,0 m		4,5 m		6,0 m		7,5 m		9,0 m		10,5 m		
	End	Side	End	Side	End	Side	End	Side	End	Side	End	Side	
9,0							3 400 *	3 400 *					
7,5							4 900 *	4 900 *					
6,0							6 000 *	5 000					
4,5					7 500 *	7 000	6 900 *	4 800	3 400 *	3 400 *			
3,0	16 000 *	16 000 *	10 300 *	10 300 *	8 000 *	6 900	7 300	4 600	4 600 *	3 500	3 200 *	3 200 *	
1,5	8 500 *	8 500 *	12 800 *	10 000	9 400 *	6 500	7 000	4 400	5 400	3 400	3 300	2 900	
Grade	8 300 *	8 300 *	14 300 *	9 400	10 000	6 100	6 900	4 200	5 300	3 300			
-1,5	10 800 *	10 800 *	14 700 *	9 200	9 700	5 900	6 800	4 200					
-3,0	14 600 *	14 600 *	14 000 *	9 200	9 600	5 900							
-4,5	17 000 *	17 000 *	12 100 *	9 300	8 900	5 800							

Capacities marked with an asterisk (\*) are limited by hydraulic capacities. See Note 2.

The mass of slings and any auxiliary lifting devices shall be deducted from the rated load to determine the net load that may be lifted. Lift capacities are based on the machine standing on a firm, uniform supporting surface. The user shall make allowances for job conditions such as soft or uneven ground.

The operator should be fully acquainted with the operator's manual and the operating safety manual furnished by the manufacturer before operating the machine.

NOTE 1 Lift capacities shown are without the power boost feature engaged.

NOTE 2 Lift capacities shown do not exceed 75 % of minimum tipping loads or 87 % of hydraulic capacities.

NOTE 3 The least stable position is over the side.

NOTE 4 Lift capacities apply only to the machine as originally manufactured and normally equipped by the manufacturer.

NOTE 5 The total mass of the machine is 28 000 kg. Included in this mass are 800 mm triple grouser shoes, 6,3 m boom, 3,6 m arm, 5 500 kg counterweight, bucket weighing 800 kg, all operating fluids and a 75 kg operator.

NOTE 6 Lift capacities are in compliance with ISO 10567:2007.

## Bibliography

- [1] ISO 6015, *Earth-moving machinery — Hydraulic excavators and backhoe loaders — Methods of determining tool forces*



---

---

**ICS 53.100**

Price based on 16 pages





# British Standards Institution (BSI)

BSI is the national body responsible for preparing British Standards and other standards-related publications, information and services.

BSI is incorporated by Royal Charter. British Standards and other standardization products are published by BSI Standards Limited.

## About us

We bring together business, industry, government, consumers, innovators and others to shape their combined experience and expertise into standards-based solutions.

The knowledge embodied in our standards has been carefully assembled in a dependable format and refined through our open consultation process. Organizations of all sizes and across all sectors choose standards to help them achieve their goals.

## Information on standards

We can provide you with the knowledge that your organization needs to succeed. Find out more about British Standards by visiting our website at [bsigroup.com/standards](http://bsigroup.com/standards) or contacting our Customer Services team or Knowledge Centre.

## Buying standards

You can buy and download PDF versions of BSI publications, including British and adopted European and international standards, through our website at [bsigroup.com/shop](http://bsigroup.com/shop), where hard copies can also be purchased.

If you need international and foreign standards from other Standards Development Organizations, hard copies can be ordered from our Customer Services team.

## Subscriptions

Our range of subscription services are designed to make using standards easier for you. For further information on our subscription products go to [bsigroup.com/subscriptions](http://bsigroup.com/subscriptions).

With **British Standards Online (BSOL)** you'll have instant access to over 55,000 British and adopted European and international standards from your desktop. It's available 24/7 and is refreshed daily so you'll always be up to date.

You can keep in touch with standards developments and receive substantial discounts on the purchase price of standards, both in single copy and subscription format, by becoming a **BSI Subscribing Member**.

**PLUS** is an updating service exclusive to BSI Subscribing Members. You will automatically receive the latest hard copy of your standards when they're revised or replaced.

To find out more about becoming a BSI Subscribing Member and the benefits of membership, please visit [bsigroup.com/shop](http://bsigroup.com/shop).

With a **Multi-User Network Licence (MUNL)** you are able to host standards publications on your intranet. Licences can cover as few or as many users as you wish. With updates supplied as soon as they're available, you can be sure your documentation is current. For further information, email [bsmusales@bsigroup.com](mailto:bsmusales@bsigroup.com).

## BSI Group Headquarters

389 Chiswick High Road London W4 4AL UK

## Revisions

Our British Standards and other publications are updated by amendment or revision.

We continually improve the quality of our products and services to benefit your business. If you find an inaccuracy or ambiguity within a British Standard or other BSI publication please inform the Knowledge Centre.

## Copyright

All the data, software and documentation set out in all British Standards and other BSI publications are the property of and copyrighted by BSI, or some person or entity that owns copyright in the information used (such as the international standardization bodies) and has formally licensed such information to BSI for commercial publication and use. Except as permitted under the Copyright, Designs and Patents Act 1988 no extract may be reproduced, stored in a retrieval system or transmitted in any form or by any means – electronic, photocopying, recording or otherwise – without prior written permission from BSI. Details and advice can be obtained from the Copyright & Licensing Department.

## Useful Contacts:

### Customer Services

**Tel:** +44 845 086 9001

**Email (orders):** [orders@bsigroup.com](mailto:orders@bsigroup.com)

**Email (enquiries):** [cservices@bsigroup.com](mailto:cservices@bsigroup.com)

### Subscriptions

**Tel:** +44 845 086 9001

**Email:** [subscriptions@bsigroup.com](mailto:subscriptions@bsigroup.com)

### Knowledge Centre

**Tel:** +44 20 8996 7004

**Email:** [knowledgecentre@bsigroup.com](mailto:knowledgecentre@bsigroup.com)

### Copyright & Licensing

**Tel:** +44 20 8996 7070

**Email:** [copyright@bsigroup.com](mailto:copyright@bsigroup.com)



...making excellence a habit.™